

Asia

TOYOTA/LEXUS	2
NISSAN/INFINITI	3
HONDA/ACURA	5
MITSUBISHI	9
MAZDA	9
SUZUKI/MARUTI	9
DAIHATSU	10
SUBARU	10
ISUZU	11
SSANGYONG	11

USA

FORD USA	59
CHRYSLER/JEEP/DODGE	64
GM USA	65
PROTON	79
CHERY	80
BRILLIANCE	80
SAIPA	81
HOLDEN	81
IKCO	81
OPEL / GM BRAZIL	82
PERODUA	83
ETC.	84

Europe

MERCEDES BENZ	15
BMW	17
AUDI/VW/SEAT/SKODA	18
FORD EU	19
VOLVO	19
PEUGEOT	19
RENAULT/DACIA	38
CITROEN	38
FIAT	42
ALFA ROMEO	42
LANCIA	43
JAGUAR	43
LANDROVER	59

May. 2017 Szczegóły aktualizacji**TOYOTA/LEXUS****Tire Pressure Warning System**

- Basic Function enhanced
Data analysis
- Special Function improved
ID Registration Bug Fixed

Clearance Sonar System

- Basic Function enhanced
Data analysis
- Special Function added
Intuitive P/A Detection/Steering Adjustment
Circumference Setting
Steering Initialization

Navigation System

- Communication stabilized

Grill Shutter System

- Special Function added
Grill Shutter Initialization

Left Seat Mirror System New Type Added

- Basic Function
Data analysis
Actuation Test

Right Seat Mirror System New Type Added

- Basic Function
Data analysis
Actuation Test

ABS/VSC System

- Communication stabilized
- Special Function
Brake System Air Bleeding (For AHB-R) added
Air Bleeding after actuator replacement improved

LKA (Lane Keeping Assist) System

- Basic Function added
Data analysis

Blind Spot Monitor Master System

- Special Function added
BSM Master Abnormal History
BSM Master Beam Axis Adjustment
BSM Master Beam Axis Display
BSM Master Beam Axis Inspection

Blind Spot Monitor Slave System

Więcej informacji pod numerem 601-817-201 oraz na www.gscan.com.pl

- Special Function added
BSM Slave Abnormal History
BSM Slave Beam Axis Adjustment
BSM Slave Beam Axis Display
BSM Slave Beam Axis Inspection

Gateway V System Added

- Basic Function
Data analysis

SRS Airbag System

- Communication stabilized
- Basic Function improved
DTC analysis

AFS (Adaptive Front-Lighting System) Added

- Basic Function
DTC analysis enhanced

Lane Departure Alert System Added

- Basic Function
DTC analysis enhanced

Illumination System Added

- Basic Function
Data analysis
Actuation Test

Automatic High Beam System Added

- Basic Function
DTC analysis
Actuation Test

Sliding Sunshade System Added

- Basic Function
DTC analysis
Data analysis
Actuation Test

EV System Added

- Basic Function
DTC analysis
Data analysis
Actuation Test
ECU Information Display
- Special Function
VIN
Check Mode
Inspection Mode
Battery Pack Malfunction Fail-Safe Drive History Clear

Night View System New Type Added

- Basic Function
DTC analysis
Data analysis
Actuation Test

Combination Switch System New Type Added

- Basic Function
- Data analysis

Steering Pad (Pad Switch) System**New Type Added**

- Basic Function
- Data analysis

TVD (Torque Vectoring Differential) System Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Special Function
 - Check Mode
 - Parts Exchange Learning
 - Learning Value Initialization

VGRS (Variable Gear Ratio Steering) System**New Type Added**

- Basic Function
 - DTC analysis
 - Data analysis
- Special Function
 - Check Mode
 - Steering Angle Adjust

Hybrid Vehicle Battery System

- Basic Function enhanced
 - Data analysis

Air Conditioner System

- Basic Function
 - DTC analysis enhanced

Pre-crash 2 System

- Basic Function
 - DTC analysis enhanced

Power Source Control System

- Basic Function
 - DTC analysis enhanced

Body System

- Basic Function
 - DTC analysis enhanced

Entry And Start (Smart Key) System

- Basic Function
 - DTC analysis enhanced

Combination Meter System

- Special Function added
 - Cruising Range Reset

Radar Cruise Control System

- Basic Function added
 - Actuation Test

Back Door Power Window System Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

EPS (Electric Power Steering) System

- Basic Function enhanced
 - Data analysis

NISSAN/INFINITI**ENGINE Special Function added (CAN)**

- Special Function
 - Service regeneration

Corresponding Vehicle: NV350

ENGINE New Type added (CAN)

- Basic Function
 - Data analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Special Function
 - Idle Air Volume Learn
 - Closed Throttle Position Learn
 - Self-Learning CONT
 - Wastegate Actuator Position Learn Value Clear
 - Fuel Pressure Release
 - Engine Coolant Bypass Valve

Corresponding Vehicle: Note

EV/HEV New Type added (CAN)

- Basic Function
 - Data analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Special Function
 - HV Battery J/B Data Clear
 - VIN Registration
 - Specific DTC Clear

Corresponding Vehicle: Note

Motor Control New Type added (CAN)

- Basic Function
 - Data analysis

Data Analysis
ECU Information Display
- Special Function
 Clear Output Limit Reason
 Resolver Write

Corresponding Vehicle: Note

Shift New Type added (CAN)
- Basic Function
 Data analysis
 Data Analysis
 ECU Information Display
- Special Function
 P Position Learning Value Clear

Corresponding Vehicle: Note

Chassis Control New Type added (CAN)
- Basic Function
 Data analysis
 Data Analysis
 Actuation Test
 ECU Information Display
- Special Function
 Erase Last Driver Information
 Erase Key Allotment User
 Erase Personal Setting
 Cause of Auto-Cancel 1

Corresponding Vehicle: SERENA

4WD New Type added (CAN)
- Basic Function
 Data analysis

HVAC New Type added (CAN)
- Basic Function
 Data analysis
 Data Analysis
 Actuation Test
 ECU Information Display
- Special Function
 Temp Set Correct
 REC Memory Set
 FRE Memory Set
 Blow Set
 Clean SW Set
 Target Max RPM Adjust At Idle

Corresponding Vehicle: NOTE

Auto Slide Door New Type added (CAN)
- Basic Function
 Data analysis
 Data Analysis

Actuation Test
ECU Information Display

Corresponding Vehicle: NOTE

Auto Slide Door Right New Type added (CAN)
- Basic Function
 Data analysis
 Data Analysis
 Actuation Test
 ECU Information Display

Corresponding Vehicle: NOTE

ICC New Type added (CAN)
- Basic Function
 Data analysis
 Data Analysis
 Actuation Test
 ECU Information Display
- Special Function
 Cause of Auto-Cancel
 Cause of Auto-Cancel 1
 Cause of Auto-Cancel 2
 Cause of Auto-Cancel 3
 Cause of Auto-Cancel 4
 FEB Operation Mileage
 FEB default setting

Corresponding Vehicle: NOTE

HV BATTERY New Type added (UDS)
- Basic Function
 Data analysis
 Data Analysis
 Actuation Test
 ECU Information Display

Corresponding Vehicle: NOTE

GENRTR New System added (CAN)
- Basic Function
 Data analysis
 Data Analysis
 ECU Information Display
- Special Function
 Resolver Write
 Clear Output Limit Reason

Corresponding Vehicle: NOTE

Feedback

Engine Idle air volume function Improvement– Requested by Dubai
HVAC (G-scan Tab) DTC BUG fixed – Field tested in Japan

HONDA/ACURA**New System Added****BCM Auto AC Sub Display System**

- Basic Function
- DTC analysis

BCM Seat Heater

- Basic Function
- DTC analysis
- Data analysis

One Push Start Backup Control Unit: INS

- Basic Function
- DTC analysis
- Data analysis
- ECU Info
- Advanced Function
- Self-Check
- Number of KEYLESS ACCESS Remotes

SWS: USA

- Basic Function
- DTC analysis
- Data analysis
- ECU Info
- Advanced Function
- After a Vehicle Collision
- After Replacing Front Passenger's Seat Component(s)
- Seat Output Check
- SWS Initialization

New Type Added**ELYSION 2007: INS****GAUGE**

- Basic Function
- DTC analysis
- Data analysis
- Advanced Function
- SELF - DIAGNOSTIC FUNCTION

LIGHTING

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test

DOOR LOCKS

- Basic Function

DTC analysis
Data analysis
Actuation Test

KEYLESS

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test
- Advanced Function
- Keyless Check

WIPER

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test

SECURITY

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test
- Advanced Function
- History Data
- History Data Clear

HVAC

- Basic Function
- DTC analysis
- Data analysis
- Advanced Function
- HVAC Climate Control Unit Self-Test

POWER SLIDING DOOR

- Basic Function
- DTC analysis
- Data analysis
- Actuation

POWER WINDOW

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test
- Advanced Function
- Power Window Reset for Driver side
- Power Window Reset for Passenger side
- Power Window Reset for Left Rear
- Power Window Reset for Right Rear

Step Wagon 2013: INS**GAUGE**

- Basic Function
- DTC analysis
- Data analysis

**- Advanced Function
SELF - DIAGNOSTIC FUNCTION****LIGHTING**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

DOOR LOCKS

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

KEYLESS

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Advanced Function
 - Keyless Check

WIPER

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

SECURITY

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Advanced Function
 - History Data
 - History Data Clear

HVAC

- Basic Function
 - DTC analysis
 - Data analysis
- Advanced Function
 - HVAC Climate Control Unit Self-Test

POWER SLIDING DOOR

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation

POWER WINDOW

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

- Advanced Function
 - Power Window Reset for Driver side
 - Power Window Reset for Passenger side
 - Power Window Reset for Left Rear
 - Power Window Reset for Right Rear

Active Cornering Light

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation

Auto AC Sub Display

- Basic Function
 - DTC analysis

Grace HV 2015 : INS**LIGHTING**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

DOOR LOCKS

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

KEYLESS

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Advanced Function
 - Keyless Check

WIPER

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test

SECURITY

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Advanced Function
 - History Data
 - History Data Clear

HVAC

- Basic Function
 - DTC analysis
 - Data analysis

- Advanced Function
HVAC Climate Control Unit Self-Test

Seat Heater

- Basic Function
DTC analysis
Data analysis

Odyssey 2015: INS**LIGHTING**

- Basic Function
DTC analysis
Data analysis
Actuation Test

DOOR LOCKS

- Basic Function
DTC analysis
Data analysis
Actuation Test

KEYLESS

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
Keyless Check

WIPER

- Basic Function
DTC analysis
Data analysis
Actuation Test

SECURITY

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
History Data
History Data Clear

HVAC

- Basic Function
DTC analysis
- Advanced Function
HVAC Climate Control Unit Self-Test

POWER SLIDING DOOR

- Basic Function
DTC analysis
Data analysis
Actuation

POWER WINDOW

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
Power Window Reset for Driver side
Power Window Reset for Passenger side
Power Window Reset for Left Rear
Power Window Reset for Right Rear

FIT HYBRID 2013: INS**LIGHTING**

- Basic Function
DTC analysis
Data analysis
Actuation Test

DOOR LOCKS

- Basic Function
DTC analysis
Data analysis
Actuation Test

KEYLESS

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
Keyless Check

WIPER

- Basic Function
DTC analysis
Data analysis
Actuation Test

SECURITY

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
History Data
History Data Clear

HVAC

- Basic Function
DTC analysis
Data analysis
- Advanced Function
HVAC Climate Control Unit Self-Test

Auto Light Leveling

- Basic Function

DTC analysis
Data analysis
Actuation Test

N-BOX 2016: INS LIGHTING

- Basic Function
DTC analysis
Data analysis
Actuation Test

DOOR LOCKS

- Basic Function
DTC analysis
Data analysis
Actuation Test

KEYLESS

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
Keyless Check

WIPER

- Basic Function
DTC analysis
Data analysis
Actuation Test

SECURITY

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Advanced Function
History Data
History Data Clear

HVAC

- Basic Function
DTC analysis
- Advanced Function
HVAC Climate Control Unit Self-Test

Function Improved**Integrated Driver Support System: Opti-AIM**

- Advanced Function
Static Camera Aiming
Dynamic Camera Aiming

FCW/LDW/High Beam Support/Traffic Recognition System: Opti-AIM

- Advanced Function
Static Camera Aiming

SRS:

- Basic Function
DTC erase improved
- Advanced Function
OPDS initialization
ODS initialization
SWS initialization

Engine: Malaysia, Singapore

- Basic Function
DTC analysis extended

EPS: INS

- Basic Function
DTC analysis extended

ABS/VSA: INS

- Basic Function
DTC analysis extended

Bug Fixed**IMA: INS**

- Basic Function
Data analysis

ABS/VSA: Malaysia

- Basic Function
Data analysis

ABS/VSA: INS

- Advanced Function
LF VSA Test
RF VSA Test
LR VSA Test
RR VSA Test

Engine System

- Advanced Function
Fuel Pump On

Engine: AU

- Basic Function
Data analysis

ABS/VSA: AU

- Basic Function
Data analysis

TPMS:

- Basic Function
Data analysis

FCW/LDW/High Beam Support/Traffic Recognition System:

- Basic Function
Data analysis

MITSUBISHI**Feedback****RVR (Feedback from Japan)****ELC-AT / CVT / TC-SST**

- Special Function added
 - Emission gas mode
 - Electronic oil pump air bleeding
 - Permit condition for AS&G
- eK-space (Feedback from Japan)**
- Multi around monitor added**
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information
 - Special Function
 - Front & Bird eye view display
 - Calibration marker range display
 - Calibration

Assist battery added

- Basic Function
 - ECU Information

Pajero Sport (KR#, KS#) added

- MPI / GDI / DIESEL
- KOS / IMMO / Keyless
- ELC-AT / CVT / TC-SST
- SS4 II / ES4 (Super Select 4WD II)
- ABS/ASC/ASTC/WSS
- SRS-AIR BAG
- Air Conditioner
- ETACS
- Meter
- Steering Angle Sensor
- AFS / ACL / Leveling

L200 (Feedback from Malaysia)**MPI / GDI / DIESEL**

- DPF bug fixed

ASX (Feedback from Norway)**KOS / IMMO / Keyless**

- Key coding for Diesel engine bug fixed

Lancer (Feedback from Poland)**AYC**

- Air bleeding bug fixed

MAZDA**AXELA/MAZDA3 2.0L System Added**

- BSML (Blind Spot Monitoring Left)
- BSMR (Blind Spot Monitoring Right)
- AFS (Adaptive Front Lighting System)
- LCM (Lighting Control Module)
- RKE (Remote Keyless Entry)

ATENZA/MAZDA6 2.5L L5 System Added

- ICCM (Intelligent Cruise Control Module)-Beta Test
- RVM (Rear Vehicle Monitoring)

ATENZA/MAZDA6 2.2L R2_T (Diesel) System Added

- RVM (Rear Vehicle Monitoring)

SUZUKI/MARUTI**New Type Added****Splash 2011: Israel
EPI**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
 - ECU Info

ABS/ESP

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Info
- Advanced Function
 - Hydraulic Control Test
 - Sensor Calibration
 - ESP Setting

Jimmy 2016: Dubai**EPI**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
 - ECU Info

ABS/ESP

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Info

- Advanced Function
- Hydraulic Control Test
- Sensor Calibration
- ESP Setting

Meter

- Basic Function
- DTC analysis
- Data analysis
- ECU Info
- Advanced Function
- Oil Change Request Light Initialization
- Oil Change Request Light
- Oil Change Condition

New Type Added**IMMO: Iran**

- Advanced Function
- Immobilizer

Function Improved**EPI: Taiwan**

- Basic Function
- Data analysis extended

EPI: Singapore

- Basic Function
- DTC analysis extended

Bug Fixed**EPI:**

- Basic Function
- Actuation

DAIHATSU**EFI (Engine) System**

- Basic Function improved
- Actuation Test

EPS (Electric Power Steering) System

- Basic Function added
- Data analysis
- Special Function added
- Torque Sensor Adjustment

Immobilizer System

- Basic Function added
- Data analysis

SRS AIRBAG System

- Special Function added
- Test Mode

CVT System

- Basic Function enhanced
- Actuation Test

EFI (Engine) System New Type Added

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test
- ECU Information Display

Meter System

- Basic Function enhanced
- Data analysis

Customize Function Added

- Buzzer
- Room Lamp
- Front Wiper
- Rear Wiper
- Meter
- Mirror
- Hazard
- PCB
- Door Lock
- PSD (Power Sliding Door-Right)
- PSD (Power Sliding Door-Left)
- Combi Switch
- Head Lamp (Body)

SUBARU**New Functions added**

Immobilizer – Smart key type

- Support function
- Readout number of access key registration
- Smart immobilizer registration
- Delete the access key ID

ABS/VDC

- Support function
- Brake maintenance mode
- VSC (VDC) Centering mode

Bug fixed

Engine: Diesel injector learn function stabilized

Engine: Sensor item added

ABS/VDC: DTC item added

BCM: Sensor item added

AC: Special function stabilized

ISUZU**New System added**

N Series 4JH1 - TC

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information Display

N Series 4JJ1 - TC

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information Display
- Support function
- Injector ID Code Read
- Injector programming
- Supply Pump Initialization
- DPD Forced Regeneration
- DPD Slow regeneration
- DPD Automatic regeneration
- DPD Automatic regeneration reset
- DPD Regeneration Data Reset

New ID added

4JJ1 - TC: ID added

DTC analysis
Data analysis
- Advanced Function
 TCU Adaptation Reset
 TCU calibration
 TCU Coding

IMMOBILIZER – D20DTR (Rekes Key)
- Advanced Function
 Transponder Registration
 EMS Registration

IMMOBILIZER – D20DTR (Smart Key)
- Advanced Function
 Transponder Registration
 EMS Registration

IMMOBILIZER – D22DTR (Rekes Key)
- Advanced Function
 Transponder Registration
 EMS Registration

IMMOBILIZER – D22DTR (Smart Key)
- Advanced Function
 Transponder Registration
 EMS Registration

New Function added
ECM
- AUTO ECM SEARCH

TCM – DC 5 A/T
- Advanced Function
 TCU Coding
 TCU SCN Coding
 Lock-Up Operation Release

TCM – MB 7 A/T
- Advanced Function
 TCU Coding
 TCU SCN/CNN Coding
 PLCD Calibration
 TCU Registration

BCM
- Basic Function
 Data analysis
 Actuation test

SKM
- Basic Function
 Data analysis
 Actuation test

GCU
- Advanced Function
 Glow plug Target Temperature

SSANGYONG**QUICK SEARCH****New Function added**

- Auto TCM Search
- Auto BCM Search
- Auto Immobilizer Search

REXTON**New System added**

TCM - [14PIN Only] BTRA (DSI) 4 A/T

- Basic Function
- DTC analysis
- Data analysis
- System Identification
- Advanced Function
- TPS VALUE CLEAR
- TCU Coding

TCM - DSI 6 A/T

- Basic Function

Glow plug Coding - Target Temperature

RODIUS/STAVIC/TURISMO**New System added**

IMMOBILIZER – D20DTR (Rekes Key)

- Advanced Function

Transponder Registration

EMS Registration

IMMOBILIZER – D20DTR (Smart Key)

- Advanced Function

Transponder Registration

EMS Registration

IMMOBILIZER – D22DTR (Rekes Key)

- Advanced Function

Transponder Registration

EMS Registration

IMMOBILIZER – D22DTR (Smart Key)

- Advanced Function

Transponder Registration

EMS Registration

New Function added

ECM

- AUTO ECM SEARCH

TCM – DC 5 A/T

- Advanced Function

TCU Coding

TCU SCN Coding

Lock-Up Operation Release

TCM – MB 7 A/T

- Advanced Function

TCU Coding

TCU SCN/CNN Coding

PLCD Calibration

TCU Registration

BCM

- Basic Function

Data analysis

Actuation test

SKM

- Basic Function

Data analysis

Actuation test

GCU

- Advanced Function

Glow plug Target Temperature

Glow plug Coding - Target Temperature

KYRON**New System added**

ECM – CDPF (C2I)

- Basic Function

Data Analysis

- Advanced Function

DPF Reset

Pressure Sensor Reset

DPF Regeneration

ECM – CDPF (C3I)

- Basic Function

Data Analysis

- Advanced Function

DPF Reset

Pressure Sensor Reset

DPF Regeneration

Excessive Reset

TCM - DSi 6 A/T

- Basic Function

DTC analysis

Data analysis

- Advanced Function

TCU Adaptation Reset

TCU Initial hydraulic calibration

TCU Coding

RK-STICS

- Basic Function

DTC analysis

Data analysis

ECU Information Display

- Advanced Function

Remote Coding

New Function added

TCM – DC 5 A/T

- Advanced Function

TCU Coding

TCU SCN Coding

Lock-Up Operation Release

ACTYON**New System added**

ECM – CDPF (C3I)

- Basic Function

Data Analysis

- Advanced Function

DPF Reset

Pressure Sensor Reset

DPF Regeneration

Excessive Reset

TCM - DSi 6 A/T

- Basic Function

DTC analysis
Data analysis
- Advanced Function
TCU Adaptation Reset
TCU Initial hydraulic calibration
TCU Coding

RK-STICS
- Basic Function
DTC analysis
Data analysis
ECU Information Display
- Advanced Function
Remote Coding

New Function added
TCM – BTRA (DSI) 4 A/T
- Advanced Function
TCU Coding

ACTYON/KORANDO SUT

New System added
ECM – DSL 2.0(C2I)
- Basic Function
DTC analysis
Data analysis
Actuation Test
System Identification
- Advanced Function
Leak Detection
Rail Pressure Reset
Injector Coding
TCU Coding
Variant Coding

ECM – DSL 2.0(C3I)
- Basic Function
DTC analysis
Data analysis
Actuation Test
System Identification
- Advanced Function
C3I 4 Injector Corrections
Engine Variant Coding
Chassis Variant Coding

TCM – BTRA (DSI) 4 A/T
- Basic Function
DTC analysis
Data analysis
System Identification
- Advanced Function
TPS VALUE CLEAR
TCU Coding

TCM – MB 5 A/T

- Basic Function
DTC analysis
Data analysis
ECU Information Display
- Advanced Function
Lock-Up Operation Release
TCU adaption Reset
TCU Coding
TCU SCN Coding

IMMOBILIZER – D20DTR (Rekes Key)
- Advanced Function
Transponder Registration
EMS Registration

IMMOBILIZER – D20DTR (Smart Key)
- Advanced Function
Transponder Registration
EMS Registration
IMMOBILIZER – D22DTR (Rekes Key)
- Advanced Function
Transponder Registration
EMS Registration

IMMOBILIZER – D22DTR (Smart Key)
- Advanced Function
Transponder Registration
EMS Registration

New Function added
BCM
- Basic Function
Data analysis
Actuation test

SKM
- Basic Function
Data analysis
Actuation test

GCU
- Advanced Function
Glow plug Target Temperature
Glow plug Coding - Target Temperature

KORANDO C
New System added
ECM – DSL D22DTF
- Basic Function
DTC analysis
Data analysis
Actuation test
System Identification
- Advanced Function
Injector Coding
VIN Write

Fuel Pressure Silence Test
Fuel Pressure Dynamic Test
IMV Dynamic Test
Injector Calibration
DPF Regeneration (IDLE)
DPF Regeneration (Drive)
LNT Desulfurization
DPF Reset
Differential Pressure Sensor
LNT Reset
EGR Reset
EGR Initial Learn
Throttle Reset
Throttle Initial Learn
Oxygen Sensor Reset
RPC Reset
Air Flow Sensor (HFM) Reset
Cam/Crank Sensor Reset
Main Relay Reset
Swirl Control Valve Reset
Swirl Control Valve Initial Learn
VGT Initial Learn

ECM – GSL G20
- Basic Function
 DTC analysis

TCM – HP 6 A/T
- Basic Function
 DTC analysis

TCM – AISIN 6 A/T
- Basic Function
 DTC analysis
 Data Analysis
 System Identification
- Advanced Function
 N' Position Learn
 TCU RESET

AIRBAG – Continental
- Basic Function
 DTC analysis
 Data Analysis
 System Identification

TPMS
- Basic Function
 DTC analysis
 Data Analysis
 ECU Information Display
- Advanced Function
 TPMS Coding

ECU Information Display
- Advanced Function
 Glow plug Learning
 Glow plug Target Temperature
 Glow plug Coding-Target Temperature

BCM - GASOLINE
- Basic Function
 DTC Analysis
 Data Analysis
 Actuation Test
 System Identification
- Advanced Function
 EMS Registration (Gasoline)
 REKES Key Coding
 Transponder Registration
 BCM Reset

BCM - DIESEL
- Basic Function
 DTC Analysis
 Data Analysis
 Actuation Test
 System Identification
- Advanced Function
 EMS Registration (2.0L Diesel)
 EMS Registration (2.2L Diesel)
 REKES Key Coding
 Transponder Registration
 BCM Reset

New Function added
SKM
- Basic Function
 Data Analysis
 Advanced Function
 EMS Registration (Gasoline)
 EMS Registration (2.0 Diesel)
 EMS Registration (2.2L Diesel)
 Transponder Registration

TIVOLI
New System added
FCM
- Basic Function
 DTC analysis
 Data analysis

New Function added
ECM – GASOLINE
- Advanced Function
 Parameter Coding (default)

BCM - GASOLINE
- Basic Function
 Data Analysis
 Actuation Test

GCU
- Basic Function

- Advanced Function
EMS Registration (Gasoline)
REKES Key Coding
Transponder Registration

BCM - DIESEL
- Basic Function
Data Analysis
Actuation Test
- Advanced Function
EMS Registration (Diesel)
REKES Key Coding
Transponder Registration

SKM
- Basic Function
Data Analysis
- Advanced Function
EMS Registration (Gasoline)
EMS Registration
Transponder Registration

GCU
- Advanced Function
Glow plug Target Temperature
Glow plug Coding - Target Temperature

TPM - Tire pressure monitor
- Basic function
DTC Analysis
System Identification

New Function added
AAC - Automatic air conditioning
- Basic function
DTC Analysis
System Identification
- Support function
Breaking-in procedure after replacement of refrigerant compressor
Check of adjustment range of positioning motors
Normalizing of positioning motors
Teach-in of actuator motors after actuator motor replacement

ABS/ESP - Electronic stability program
- Basic function
DTC Analysis
System Identification
- Support function
ASR control
Brake light
Calibration of component 'Yaw rate sensor for lateral and longitudinal acceleration'
Electric parking brake test
Hazard warning flasher
High pressure and return pump
Left electric parking brake actuator motor test
Move to the assembly position
Right electric parking brake actuator motor test

MERCEDES BENZ

New System added

AB - Airbag
- Basic function
DTC Analysis
System Identification

ETC - Electronic transmission control
- Basic function
DTC Analysis
DTC EraseMemory
ECU Information Display

Fuse and relay module - Fuse and relay modules
- Basic function
DTC Analysis
System Identification

PTS - Parktronic system
- Basic function
DTC Analysis
System Identification

ASSYST PLUS - PLUS Active Service System
- Support function
Confirm overall maintenance
Reset mistakenly confirmed overall maintenance

ATA - ATA [EDW]/tow-away/interior protection
- Support function
EDW anti-theft alarm
Read coding and change if necessary

COU [ZBE] - Audio/COMAND operating unit
- Basic function
Data Analysis

ES - Electrical power steering
- Basic function
DTC Analysis
System Identification
Support function
Calibration of component 'Steering angle sensor'

Headlamp/Headlamp-L - Headlamp control unit

- Support function Zero position adjustment of axle or level sensors	Suspension - Basic function Data Analysis
IC - Instrument cluster - Basic function DTC Analysis System Identification	VG - Transfer case - Basic function Data Analysis
- Support function Confirmation of general maintenance Reset mistakenly remainder reset Service remainder reset	New Chassis added - Transporter > CITAN > 415
ISM - Intelligent servo module - Support function Perform calibration	Function Improved - Auto Select function added
KAB - Camera cover - Basic function Data Analysis	Bug fixed AAC - Automatic air conditioning AB - Airbag ABS/ESP - Electronic stability program ASSYST PLUS - PLUS Active Service System ATA - ATA [EDW]/tow-away/interior protection AUDIO/COMAND CGW - Central gateway COU [ZBE] - Audio/COMAND operating unit DCM-FL - Door control module front left DCM-FR - Door control module front right DCM-RL - Door control module rear left DCM-RR - Door control module rear right DTA - Mbrace or TELEAID/GPS Box ES - Electrical power steering ESA Driver - Electric seat adjustment Driver ESA Front passenger - Electric seat adjustment Front passenger ESA-R - Electric seat adjustment rear ETC - Electronic transmission control EZS/EIS - Electronic ignition lock Headlamp/Headlamp-L - Headlamp control unit Headlamp-R - Headlamp control unit IC - Instrument cluster KBE-H/REAR AC - Rear air conditioning KG/RFL - KEYLESS GO/Radio frequency locking/Electric central locking LCP/HBF - Lower/Rear control panel ME/CDI/CNG - Engine control unit OCP - Overhead control panel OSB-FL - Multicontour backrest front left OSB-R - Multicontour backrest rear PSE - Pneumatic system equipment PTS - Parktronic system RCM - Rear control module RevETR-LF - Left front reversible emergency tensioning retractor RevETR-RF - Right front reversible emergency tensioning retractor RVC/VDS - Convertible roof control SAM-F/SAM-D - Signal acquisition and actuation module front/driver side
ME/CDI/CNG - Engine control unit - Basic function DTC Analysis Data Analysis System Identification	
- Support function Activate fuel pump Resetting of adaptation data Resetting the cold start adaptation values Teach in camshaft positions Throttle valve stop learning	
OCP - Overhead control panel - Basic function Data Analysis	
REDC/RWT - Rear end door control module - Support function Denormalization and normalization of rear-end door closing	
SAM-F/SAM-D - Signal acquisition and actuation module front/driver side - Basic function DTC Analysis Data Analysis System Identification	
SBC - Sensotronic Brake Control - Support function Bleed brake system Inspect connections of hydraulic lines for correct connection Response threshold of speed sensors Valve current	

SAM-P - Passenger-side signal acquisition and actuation module
SAM-R/BSN - Rear signal acquisition and actuation module/Battery sensor
SBC - Sensotronic Brake Control
SCM [MRM] - Steering column module
SCR - Selective catalytic reduction
SOUND - Sound system
Sound generator for exhaust system
Suspension
TPM - Tire pressure monitor
TSTH/STH - Stationary heater with remote control
TV - TV tuner
UCP - Upper control panel
VG - Transfer case

Data analysis
Actuation test
ECU Information

**5 Series – E60 / E61 (2004 - 2009)
GWS (Gear selector switch) added**

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

VTC (Valvetronic, bank 1) added

- Basic Function
- ECU Information

VTC2 (Valvetronic, bank 2) added

- Basic Function
- ECU Information

ALBFA (Active backrest width, driver) added

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information
- Special Function
- Active backrest width, driver: Initialization

ALBBF (Active backrest width, front passenger) added

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information
- Special Function
- Active backrest width, front passenger: Initialization

IBOC (Digital tuner US) added

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

5 series – F10 / F11 (2010 - present)**Register battery replacement**

- Special Function added
- Evaluate state of battery charge

DME (Digital Engine Electronics)

- Special Function added
- Diesel particulate filter: Filter replacement

VTG (Transfer box)**BMW**
**3 Series – E46 (1999 – 2005)
SMG (Gearbox control) added**

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

EKPS (Electronic fuel-pump control) added

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

TCU (Telematic Control Unit (I bus)) added

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

3 Series – E90 / E91 (2006 - 2011)**DME (Digital Engine Electronics)**

- Basic Function added
- Freeze frame

3 series – F30 / F31 (2012 - present)**HU-B**

- Special Function added
- Delete the personal profile

4 series – F32 / F33 / F36 (2013 - present)**EDC (Vertical dynamics management) added**

- Basic Function
- DTC analysis

- Special Function added
Replace control unit

AL (Active steering)

- Special Function added
Start-up Active Steering

AMPH (Hi-Fi amplifier) added

- Basic Function
DTC analysis
Data analysis
Actuation test
ECU Information

7 Series – E65 / E66 (2002 - 2008)**AHL (Adaptive Head Light / headlight vertical aim control) added**

- Basic Function
DTC analysis
Data analysis
Actuation test
ECU Information

7 series – F01 / F02 (2009 - present)**RSE (Rear seat entertainment system)**

- Special Function added
Teach in radio remote control

SMBF (Seat module, passenger)

- Special Function added
Front passenger seat standardization

SMFAH (Seat module, driver, rear)

- Special Function added
Rear driver's side seat standardization

SMBFH (Seat module, passenger, rear)

- Special Function added
Rear passenger's side seat standardization

X3 Series – E83 (2004 – 2009)**TOP-DSP (Digital Sound Processor) added**

- Basic Function
DTC analysis
Data analysis
Actuation test
ECU Information

AUDI/VW/SEAT/SKODA**Crafter/LT3 Engine Electronics (KWP) New Type Added**

- Basic Function

Data analysis
System Identification
- Special function
Static DPF Regeneration
Throttle Valve Basic setting
Exhaust gas recirculation valve basic setting
Fan vane basic adjustment
Turbocharger basic setting
Reset DPF differential press. Sensor adaptation
Reset particulate filter adaption values
Reset start inhibit due to lack of Ad Blue
Seat Ad Blue tank level to Full

Engine Electronics (UDS) New Type Added

- Basic Function
DTC analysis
Data analysis
Actuation Test
- Special function
Basic setting
Adaptation

Transmission Electronics (UDS) New Type Added

- Basic Function
Data analysis
Actuation Test
- Special function
Basic setting

Brake Electronics (UDS) New Type Added

- Basic Function
Data analysis
Actuation Test
- Special function
Basic setting
Adaptation

Auto HVAC (UDS) New Type Added

- Basic Function
Data analysis
Actuation Test
- Special function
Basic setting

Instrument cluster (UDS) New Type Added

- Basic Function
Data analysis
Actuation Test
- Special function
Basic setting
Adaptation

Immobilizer (UDS) New Type Added

- Basic Function
Data analysis
Actuation Test

- Special function
- Basic setting
- Adaptation

Door Electronics-Passenger (UDS) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function
 - Basic setting

Door Electronics-Driver (UDS) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function
 - Basic setting

Steering Column Lock (UDS) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function
 - Basic setting

UDS Type All System

- Freeze Frame function enhanced

CAN Type All System

- Freeze Frame function enhanced

FORD EU**B-MAX 1.0L EcoBoost - Gas Turbocharged Direct Injection 2012 Vehicle Added**

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- BCMii (Body Control Module)
- DDM (Driver's Door Module)
- FCDIM (Front Control/Display Interface Module)
- FDSM (Front Distance Sensing Module)
- GPSM (Global Positioning System Module)
- GWM (Gateway Module A)
- HVAC (Heating Ventilation Air Conditioning)
- IPC (Instrument Panel Control Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RFA (Remote Function Actuator)

FOCUS C-MAX 1.0L EcoBoost - Gas Turbocharged Direct Injection 2015 ~ Vehicle Added

- PCM (Powertrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- AHCM (Auxiliary Heater Control Module)
- APIM (Accessory Protocol Interface Module)
- BCMii (Body control module)
- CCMii (Cruise Control Module)
- DDM (Driver's Door Module)
- FCDIM (Front Control/Display Interface Module)
- FCIM (Front Controls Interface Module)
- FDSM (Front Distance Sensing Module)
- GPSM (Global Positioning System Module)
- HCM (Headlamp Control Module)
- HVAC (Heating Ventilation Air Conditioning)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RFA (Remote Function Actuator)
- RGTM (Rear Gate/Trunk Module)
- SASM (Steering Angle Sensor Module)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)
- TRM (Trailer Module)

VOLVO**S60 2010~2015****PDM (Passenger door module)**

- Data Analysis function bug fixed

PEUGEOT**New Model added****508****Engine (5FC MED17_4_2)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Motorized throttle unit
 - Injectors
 - Catalytic converter
 - Inlet pressure sensor
 - Canister discharge electrovalve

Inlet camshaft dephaser	pump/pipes
Accelerator pedal	Change of EGR valve
Initializing the autoadaptives	Replacement of the EGR exchanger
Check the timing adjustment	Air flow sensor replacement
Upstream and down stream oxygen sensor	Replacement of the differential pressure sensor
Fuel sender/ pump module	Replacement of the high pressure pump or the flow regulation valve
Fuel pressure regulation electrovalve	Replacement of the diesel high pressure rail
Fuel hp pump	Replacement of the additive reservoir+ pump or pipes
Rail pressure sensor	Filling of the diesel additive tank
Inlet camshaft dephasing electrovalve	Change of engine block without the flowmeter
Engine (AHX DCM6.2)	Change of engine block with the flowmeter
- Basic function	Replacement of the ancillary drive belt
DTC Analysis	Replacement of the exhaust manifold
Data Analysis	Replacement of the cylinder head
Actuation Test	
ECU Information	
- Special Function	
Configuration of the characterization of diesel injector	
Engine (AHW DCM6.2)	Engine (5FW MEV 17.4)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	- Special Function
Configuration of the characterization of diesel injector	Initialization of auto adaptative
Engine (AHV DCM6.2)	Engine (8FS MEV 17.4)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	- Special Function
Configuration of the characterization of diesel injector	Initialization of auto adaptative
Engine (DCM3.5_BR2)	Engine (5FS MEV 17.4 EVO)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	- Special Function
Change of air mixer	Initialization of auto adaptative
Replacement of the turbo	Motorized throttle unit
Replacement of the particle emission filter	Upstream and downstream oxygen sensors
Replacement of the oxygen sensor	Accelerator pedal sensor
Forced Regeneration of The Particle Filter Vehicle Stationary	Injectors
Filling of the diesel additive adding reservoir	Catalytic converter
Replacement of the diesel additive reservoir+	Fuel sender/pump module
	Inlet and exhaust camshaft phase sensor
	Inlet and exhaust camshaft dephasing electrovalve
	Inlet pressure sensor
	Variable valve lift motor
	Variable valve lift system position sensor
	Canister discharge electrovalve
	Timing

Engine (5FM MED17.4.2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative

Engine (V46_21)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (9HX EDC16C3)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Electric EGR valve replacement
 - EGR mixer butterfly replacement

Engine (9HY EDC16C3)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Electric EGR valve replacement
 - EGR mixer butterfly replacement

Engine (9HZ EDC16C3)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (9HV EDC16C3)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (RHR DCM 3.4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test

ECU Information**Engine (RHL DCM 3.4)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (RHF DCM 3.4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (DCM3.5 RHE)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle Stationary
 - Change of EGR Valve
 - Replacement Of The Additive Reservoir Of Pump Or Pipes
 - Replacement Of The Particle Emission Filter
 - Filling Of The Additive Reservoir
 - Top Up Diesel Additive Tank
 - Replacement of diesel additive tank and fuel tank

Engine (DCM3.5 RHH)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle Stationary
 - Change of EGR Valve
 - Replacement Of The Additive Reservoir Of Pump Or Pipes
 - Replacement Of The Particle Emission Filter
 - Filling Of The Additive Reservoir
 - Top Up Diesel Additive Tank
 - Replacement of diesel additive tank and fuel tank

Engine (5FV MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (5FN MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (5F2 MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (5FM MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (5FE MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (MEV17_4_2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (HDI_SID807 9HL)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test

ECU Information

- Special Function
 - Forced regeneration vehicle stationary
 - Change of high pressure pump with its fuel flow regulator
 - Replacement of the EGR valve
 - Change of air mixer
 - Replacement of the turbo
 - Replacement of the air flow sensor
 - Replacement of the engine block without the air flow sensor
 - Replacement of the engine block with the air flow sensor
 - Replacement of the additive reservoir of the pump or of the pipes
 - Replacement of the particle emission filter
 - Replacement of the oxygen sensor

Engine (HDI_SID807_BR2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced regeneration vehicle stationary
 - Change of high pressure pump with its fuel flow regulator
 - Replacement of the EGR valve
 - Change of air mixer
 - Replacement of the turbo
 - Replacement of the air flow sensor
 - Replacement of the engine block without the air flow sensor
 - Replacement of the engine block with the air flow sensor
 - Replacement of the additive reservoir of the pump or of the pipes
 - Replacement of the particle emission filter
 - Replacement of the oxygen sensor

Engine (ME745 N6B)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (ME745 N6A)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (ME745 NFU)

- Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Actuation Test ECU Information
Gearbox ECU (BVA_AM6_AT6_EURO5) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Calibration of the steering wheel angle sensor Air Bleeding
- Special Function Programming of the neutral position Replacement of the automatic gearbox oil	ABS/ESP (ESP 81) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Gearbox ECU (AM6 Euro5 automatic gearbox) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Calibration of the steering wheel angle sensor
Gearbox ECU (AT6 Euro5 automatic gearbox) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	ABS/ESP (ESP_MK100) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Special Function Bleeding of the hydraulic block ESP MK100 Calibration of the gyrometer / accelerometer sensor Replacement of the ESP ECU	- Special Function
Gearbox ECU (AL4 automatic gearbox) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Power steering (GEP) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Gearbox ECU (CFC300P gearbox) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Battery charge status unit (BECB_GEN2) - Basic function Data Analysis ECU Information
Built-In system interface - Basic function DTC Analysis ECU Information	Dynamic headlamp height adjuster (BEMP) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Special Function Reset to zero of the counter for the number of restarts	- Special Function Calibration
ABS/ESP (ABS 81) - Basic function DTC Analysis Data Analysis	Engine relay unit (BSM_2010) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
	Airbag (RBG_UDS) - Basic function

DTC Analysis	Replacement parts
Data Analysis	
ECU Information	
- Special Function	Air conditioning (CLIM_REGULEE_UDS)
Locking	- Basic function
Unlocking	DTC Analysis
Parking assistance (AAS_UDS)	Data Analysis
- Basic function	Actuation Test
DTC Analysis	ECU Information
Data Analysis	
Actuation Test	
ECU Information	- Special Function
Instrument panel (COMBINE_UDS)	Learning
- Basic function	Driver's door module (PDPC)
DTC Analysis	- Basic function
Data Analysis	DTC Analysis
Actuation Test	Data Analysis
ECU Information	Actuation Test
Telematics (SMEG_PLUS)	ECU Information
- Basic function	Electronic key reader (LCE)
DTC Analysis	- Basic function
Data Analysis	DTC Analysis
Actuation Test	Data Analysis
ECU Information	ECU Information
Multiplexed control panel (FMUX)	High head vision (VTH_UDS)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Control panel dot matrix display (MATT_P_2010)	Main beams assistant ECU (RETRO_INT)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Hands free starting access electronic module (BML)	508RXH Vehicle Added
- Basic function	Engine (5FC MED17_4_2)
DTC Analysis	- Basic function
Data Analysis	DTC Analysis
Actuation Test	Data Analysis
ECU Information	Actuation Test
Controls under the steering wheel (COM2008P)	ECU Information
- Basic function	- Special Function
DTC Analysis	Motorised throttle unit
Data Analysis	Injectors
Actuation Test	Catalytic converter
ECU Information	Inlet pressure sensor
- Special Function	Canister discharge electrovalve
	Inlet camshaft dephaser
	Accelerator pedal
	Initializing the autoadaptives
	Check the timing adjustment
	Upstream and down stream oxygen sensor

Fuel sender/ pump module	flowmeter
Fuel pressure regulation electrovalve	Replacement of the camshaft
Fuel hp pump	Replacement of the reversible alternator
Rail pressure sensor	Replacement of the power accumulator or of the voltage retaining device
Inlet camshaft dephasing electrovalve	
Engine (DCM6.2)	Gearbox ECU (BVA_AM6_AT6_EURO5)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	- Special Function
Replacement of the EGR valve	Programming of the neutral position
Replacement of the engine block with the air flow	Replacement of the automatic gearbox oil
sensor	
Replacement of the diesel high pressure rail	Gearbox ECU (AM6 Euro5 automatic gearbox)
Replacement of the ancillary drive belt	- Basic function
Replacement of the exhaust manifold	DTC Analysis
Replacement of the turbocharger	Data Analysis
Replacement of starter motor	Actuation Test
Replacement of the clutch	ECU Information
Replacement of the engine flywheel	
Programming the air mixer stops	Gearbox ECU (AT6 Euro5 automatic gearbox)
Programming the EGR valve stops	- Basic function
Programming of the stops of the turbocharger	DTC Analysis
Cleaning the EGR valve	Data Analysis
Cleaning the EGR exchanger bypass	Actuation Test
Particle filter regeneration	ECU Information
Re-initialization of the deNOx system faults	
Temporary reactivation of the stop and start function	Gearbox ECU (AL4 automatic gearbox)
Filling of the additive reservoir or pouch	- Basic function
Filling of the urea reservoir	DTC Analysis
Draining and filling of the urea solution reservoir	Data Analysis
Replacement of the fuel flow regulator	Actuation Test
Replacement of the high pressure pump	ECU Information
Replacement of the low pressure fuel pump+ of the fuel filter or of the pipes	
Replacement of the air mixer	Gearbox ECU (CFC300P gearbox)
Replacement of the particle emission filter differential pressure sensor	- Basic function
Particle filter replacement	DTC Analysis
Replacement of the NOx sensor	Data Analysis
Replacement of the precatalyser	Actuation Test
Replacement of the deNOx catalytic converter	ECU Information
Replacement of the reservoir of the gauge pump module of the deNOx system pipes or of the urea injector	
Replacement of the cylinder block	Built-In system interface
Replacement of the cylinder head without the air flow sensor	- Basic function
Replacement of the cylinder head with the air flow sensor	DTC Analysis
Replacement of the battery	ECU Information
Replacement of the flowmeter	- Special Function
Replacement of the engine block without the	Reset to zero of the counter for the number of restarts
	ABS/ESP (ABS 81)
	- Basic function
	DTC Analysis
	Data Analysis

Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	
Calibration of the steering wheel angle sensor	Airbag (RBG_UDS)
Air Bleeding	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	ECU Information
ECU Information	- Special Function
- Special Function	Locking
Calibration of the steering wheel angle sensor	Unlocking
ABS/ESP (ESP 81)	Parking assistance (AAS_UDS)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	- Special Function
Calibration of the steering wheel angle sensor	DTC Analysis
ABS/ESP (ESP_MK100)	Data Analysis
- Basic function	Actuation Test
DTC Analysis	ECU Information
Data Analysis	Instrument panel (COMBINE_UDS)
Actuation Test	- Basic function
ECU Information	DTC Analysis
- Special Function	Data Analysis
Bleeding of the hydraulic block ESP MK100	Actuation Test
Calibration of the gyrometer / accelerometer sensor	ECU Information
Replacement of the ESP ECU	Telematics (SMEG_PLUS)
Power steering (GEP)	- Basic function
- Basic function	DTC Analysis
DTC Analysis	Data Analysis
Data Analysis	Actuation Test
Actuation Test	ECU Information
ECU Information	Multiplexed control panel (FMUX)
Battery charge status unit (BECB_GEN2)	- Basic function
- Basic function	DTC Analysis
Data Analysis	Data Analysis
ECU Information	Actuation Test
Under-inflation detection (DSG_UDS)	ECU Information
- Basic function	Control panel dot matrix display (MATT)
DTC Analysis	- Basic function
Data Analysis	DTC Analysis
Actuation Test	Data Analysis
ECU Information	Actuation Test
- Special Function	ECU Information
Calibration	Hands free starting access electronic module (BML)
Dynamic headlamp height adjuster (BEMP)	- Basic function
- Basic function	DTC Analysis
DTC Analysis	Data Analysis
Data Analysis	Actuation Test
Actuation Test	ECU Information
ECU Information	- Special Function
Calibration	DTC Analysis
Engine relay unit (BSM_2010)	Controls under the steering wheel (COM2008P)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	

Data Analysis Actuation Test ECU Information - Special Function Replacement parts	Engine (RHF DCM3.4) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Air conditioning (CLIM_REGULEE_UDS) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Learning	Engine (RHE DCM3.5) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Driver's door module (PDPC) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Change of air mixer Replacement of the turbo Replacement of the particle emission filter Replacement of the oxygen sensor Forced Regeneration Of The Particle Filter Vehicle Stationary Filling of the diesel additive adding reservoir Replacement of the diesel additive reservoir+ pump/pipes Change of EGR valve Replacement of the EGR exchanger Air flow sensor replacement Replacement of the differential pressure sensor Replacement of the high pressure pump or the flow regulation valve Replacement of the diesel high pressure rail Replacement of the additive reservoir+ pump or pipes Filling of the diesel additive tank Change of engine block without the flowmeter Change of engine block with the flowmeter Replacement of the ancillary drive belt Replacement of the exhaust manifold Replacement of the cylinder head
Electronic key reader (LCE) - Basic function DTC Analysis Data Analysis ECU Information	Engine (RHH DCM3.5) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
High head vision (VTH_UDS) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Change of air mixer Replacement of the turbo Replacement of the particle emission filter Replacement of the oxygen sensor Forced Regeneration Of The Particle Filter Vehicle Stationary Filling of the diesel additive adding reservoir Replacement of the diesel additive reservoir+ pump/pipes Change of EGR valve Replacement of the EGR exchanger Air flow sensor replacement Replacement of the differential pressure sensor Replacement of the high pressure pump or the flow regulation valve Replacement of the diesel high pressure rail Replacement of the additive reservoir+ pump or pipes Filling of the diesel additive tank Change of engine block without the flowmeter Change of engine block with the flowmeter Replacement of the ancillary drive belt Replacement of the exhaust manifold Replacement of the cylinder head
Pedestrian impact (DETECT_CHOC_PIETON) - Basic function DTC Analysis Data Analysis ECU Information	- Special Function Change of air mixer Replacement of the turbo Replacement of the particle emission filter Replacement of the oxygen sensor Forced Regeneration Of The Particle Filter Vehicle Stationary Filling of the diesel additive adding reservoir Replacement of the diesel additive reservoir+ pump/pipes
Main beams assistant ECU (RETRO_INT) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Change of air mixer Replacement of the turbo Replacement of the particle emission filter Replacement of the oxygen sensor Forced Regeneration Of The Particle Filter Vehicle Stationary Filling of the diesel additive adding reservoir Replacement of the diesel additive reservoir+ pump/pipes
408(T73) Vehicle Added Engine (RHR DCM3.4) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Change of air mixer Replacement of the turbo Replacement of the particle emission filter Replacement of the oxygen sensor Forced Regeneration Of The Particle Filter Vehicle Stationary Filling of the diesel additive adding reservoir Replacement of the diesel additive reservoir+ pump/pipes

Change of EGR valve	- Special Function
Replacement of the EGR exchanger	Initialization of auto adaptative
Air flow sensor replacement	
Replacement of the differential pressure sensor	Engine (5FX MED17_4_EURO4)
Replacement of the high pressure pump or the flow regulation valve	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Replacement of the diesel high pressure rail	- Special Function
Replacement of the additive reservoir+ pump or pipes	Initialization of auto adaptative
Filling of the diesel additive tank	
Change of engine block without the flowmeter	Engine (5FT MED17_4_EURO4)
Change of engine block with the flowmeter	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Replacement of the ancillary drive belt	- Special Function
Replacement of the exhaust manifold	Initialization of auto adaptative
Replacement of the cylinder head	
Engine (9HX DV6ATED4 - 90CV)	Engine (5FN MED17_4_EURO4)
- Basic function	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
DTC Analysis	- Special Function
Data Analysis	Initialization of auto adaptative
Actuation Test	
ECU Information	
- Special Function	
Electric EGR valve replacement	Engine (8FP MED17_4_EURO4)
EGR mixer butterfly replacement	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Engine (9HV-DV6TED4B FAP - 90CV)	- Special Function
- Basic function	Initialization of auto adaptative
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Engine (9HZ-DV6TED4 FAP - 110CV)	Engine (5FW MEV17_4_EURO4)
- Basic function	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
DTC Analysis	- Special Function
Data Analysis	Initialization of auto adaptative
Actuation Test	
ECU Information	
Engine (9HY-DV6TED4 - 110CV)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
- Special Function	
Electric EGR valve replacement	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
EGR mixer butterfly replacement	- Special Function
Engine (5FY MED17_4_EURO4)	Initialization of auto adaptative
- Basic function	
DTC Analysis	Engine (8FS MEV17_4_EURO4)
Data Analysis	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Actuation Test	- Special Function
ECU Information	Initialization of auto adaptative

Engine (ME745)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initializing the auto adaptive

Engine (RFJ MM6KP)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (5FS MEV17_4_EURO5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (8FR MEV17_4_EURO5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor

Variable valve lift motor

Variable valve lift system position sensor

Canister discharge electrovalve

Timing

Engine (8FP MEV17_4_EURO5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (5FU MEVD17_4_2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (9HL HDI_SID807)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function

Forced regeneration vehicle stationary
Change of high pressure pump with its fuel flow regulator
Replacement of the EGR valve
Change of air mixer
Replacement of the turbo
Replacement of the air flow sensor
Replacement of the engine block without the air flow sensor
Replacement of the engine block with the air flow sensor
Replacement of the additive reservoir of the pump or of the pipes
Replacement of the particle emission filter
Replacement of the oxygen sensor

Engine (MEV17_4_2 EP6C)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (MEV17_4_2 EP6CM)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor

Variable valve lift system position sensor
Canister discharge electrovalve
Timing

Engine (MEV17_4_2 EP3C)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialization of auto adaptative
 - Motorized throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (9HP EDC17C10)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle Stationary
 - Change of EGR Valve
 - Replacement Of The EGR Exchanger
 - Change Of Air Mixer
 - Replacement Of The Turbo
 - Replacement Of The Additive Reservoir Of Pump Or Pipes
 - Replacement Of The High Pressure Pump Or Regulation Valve
 - Replacement Of The Exhaust Manifold
 - Replacement Of The Cylinder Head
 - Replacement Of The Diesel High Pressure Rail
 - Replacement Of The Particle Emission Filter
 - Filling Of The Diesel Additive Tank
 - Replacement Of The Oxygen Sensor

Engine (9HP EDC17C10_BR2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

- Special Function Forced Regeneration Of The Particle Filter Vehicle Stationary Change of EGR Valve Replacement Of The EGR Exchanger Change Of Air Mixer Replacement Of The Turbo Replacement Of The Additive Reservoir Of Pump Or Pipes Replacement Of The High Pressure Pump Or Regulation Valve Replacement Of The Exhaust Manifold Replacement Of The Cylinder Head Replacement Of The Diesel High Pressure Rail Replacement Of The Particle Emission Filter Filling Of The Diesel Additive Tank Replacement Of The Oxygen Sensor	Replacement of the particle emission filter Replacement of the oxygen sensor
Engine (9HG HDI_SID807_BR2)	Engine (9HG HDI_SID807_BR2) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Forced regeneration vehicle stationary Change of high pressure pump with its fuel flow regulator Replacement of the EGR valve Change of air mixer Replacement of the turbo Replacement of the air flow sensor Replacement of the engine block without the air flow sensor Replacement of the engine block with the air flow sensor Replacement of the additive reservoir of the pump or of the pipes Replacement of the particle emission filter Replacement of the oxygen sensor
Engine (9HJ EDC17C10_BR2)	Engine (ME745_EC5) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Initializing the auto adaptive
Engine (9HD HDI_SID807_BR2)	Parking assistance (AAS) - Basic function DTC Analysis Data Analysis ECU Information
- Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Forced regeneration vehicle stationary Change of high pressure pump with its fuel flow regulator Replacement of the EGR valve Change of air mixer Replacement of the turbo Replacement of the air flow sensor Replacement of the engine block without the air flow sensor Replacement of the engine block with the air flow sensor Replacement of the additive reservoir of the pump or of the pipes	Air conditioning (CLIM regulee) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
	Multifunction screen (TYPE 'C' (DOT matrix)) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Configuration and display mode

Configuration of options	- Special Function Programming of the neutral position Replacement of the automatic gearbox oil
Remote Control Configuration	
Customer language configuration	
Configuration of the customer parameter setting menu	
Multifunction screen (TYPE 'C color' (DOT matrix))	ABS/ESP (ESP 81) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Basic function	
DTC Analysis	
ECU Information	
- Special Function	
Customer configuration	- Special Function Calibration of the steering wheel angle sensor
Vehicle configuration	Air Bleeding
Configuration of the personalization menu	Longitudinal Acceleration Sensor Calibration
Radio (RD45)	ABS/ESP (ABS 81) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Instrument panel (COMBINE)	Airbag (SAC_AUTOLIV) - Basic function DTC Analysis Data Analysis ECU Information
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	- Special Function Locking Unlocking
Gearbox ECU (BVA_AT8)	Built-In system interface - Basic function DTC Analysis ECU Information
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Gearbox ECU (CFC300P)	Power steering electric pump unit (GEP) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Gearbox ECU (BVA_AM6)	Dynamic headlamp height adjuster (LADCT) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	- Special Function Calibration
Gearbox ECU (BVA_AM6_AT6_EURO5)	Battery charge status unit (BECB_GEN2) - Basic function Data Analysis ECU Information
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	

Lane departure warning system (AFIL)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Trailer relay unit (BSR)

- Basic function
 - Data Analysis

Engine relay unit (BSM)

- Basic function
 - Data Analysis

Windscreen wiper (MOTEV)

- Basic function
 - Actuation Test
 - ECU Information

CD changer External CD player (BSM_2010)

- Basic function
 - DTC Analysis
 - Actuation Test
 - ECU Information

Sunroof (TOUV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Programming of the sunroof

Moving panel deflector (DEFL_PAN_MOBIL)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Folding roof (BTE)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Telematics (SMEG_PLUS)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Anti-theft alarm (ALARME)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Seat passenger position memory module (BDMP)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Driver's door module (PDPC)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Rain-sunlight sensor (PLUIE_LUMINOSITE)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

High frequency receiver (RHF)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

Controls on the steering wheel (HDC)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Hands-free kit portable unit (BOITIER_NOMADE)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

New Model added**408(T93)**

Engine (V46_32)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test

ECU Information**- Special Function**

Initializing the auto adaptive
Motorized throttle unit
Injectors
Inlet camshaft dephaser
Inlet camshaft dephaser solenoid valve
Cylinder reference sensor
Accelerator pedal

Engine (V46_52)**- Basic function**

DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function
Initializing the auto adaptive
Motorized throttle unit
Injectors
Inlet camshaft dephaser
Inlet camshaft dephaser solenoid valve
Cylinder reference sensor
Accelerator pedal

Engine (VD46)**- Basic function**

DTC Analysis
Data Analysis
Actuation Test
ECU Information

- Special Function

Replacement of the exhaust manifold
Initialization of the autoadaptive values
Temporary reactivation of the stop and start function
(for a maximum distance of 10 km)
Work on the ancillaries battery
Replacement of one or more petrol injectors
Replacement of the inlet camshaft dephaser
Replacement of the exhaust camshaft dephaser
Cylinder head replacement
Replacement of the turbocharger
Replacement of the ancillaries battery
Replacement of starter motor
Replacement of the clutch
Replacement of the alternator
Replacement of the turbocharging pressure regulation valve
Replacement of the engine flywheel
Replacement of the accelerator pedal
Replacement of the motorized butterfly housing

Engine (MED17_4_4)**- Basic function**

DTC Analysis
Data Analysis

Actuation Test**ECU Information****- Special Function**

Replacement of the exhaust manifold
Initialization of the autoadaptive values
Temporary reactivation of the stop and start function
(for a maximum distance of 10 km)
Work on the ancillaries battery
Replacement of one or more petrol injectors
Replacement of the inlet camshaft dephaser
Cylinder head replacement
Replacement of the turbocharger
Replacement of the ancillaries battery
Replacement of starter motor
Replacement of the clutch
Replacement of the alternator
Replacement of the turbocharging pressure regulation valve
Replacement of the engine flywheel
Replacement of the motorized butterfly housing
Work on the timing belt

Parking assistance (AAS_UDS)**- Basic function**

DTC Analysis
Data Analysis
Actuation Test
ECU Information

Air conditioning (BCC)**- Basic function**

DTC Analysis
Data Analysis
Actuation Test
ECU Information

Multifunction screen (EMF_C_UDS)**- Basic function**

DTC Analysis
Actuation Test
ECU Information

Radio (RD45)**- Basic function**

DTC Analysis
Data Analysis
Actuation Test
ECU Information

Instrument panel(COMBINE_UDS)**- Basic function**

DTC Analysis
ECU Information

Gearbox ECU (BVA AM6_AT6_UDS)**- Basic function**

DTC Analysis	Deactivation of the automatic application of the EPB function
Data Analysis	Airbag (RBG_UDS)
Actuation Test	- Basic function
ECU Information	DTC Analysis
- Special Function	Data Analysis
Programming of the neutral position	ECU Information
Replacement of the automatic gearbox oil	- Special Function
Partial realignment of the programmed values	Configuration
Full realignment of the programmed values	Locking
Unlocking	
Gearbox ECU (BVA_AT8)	Built-in systems interface (BSI2010)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	ECU Information
Actuation Test	- Special Function
ECU Information	Reset to zero of the counter for the number of restarts
Gearbox ECU (BVA_AM6)	Controls on the steering wheel /integral controls steering wheel (VCI)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Gearbox ECU (BVA_AM6_AT6_EURO5)	Power steering (DAE_BVH2)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	
Programming of the neutral position	
Replacement of the automatic gearbox oil	
ABS or ESP ECU (90 ESP)	Battery charge status unit (BECB_GEN2)
- Basic function	- Basic function
DTC Analysis	Data Analysis
Data Analysis	ECU Information
Actuation Test	
ECU Information	
- Special Function	
Bleeding	
Calibration of the steering wheel angle sensor	
Longitudinal acceleration sensor calibration	
Replacement of the brake pads	
First activation of the electric parking brake	
Replacement of the rear right motorized brake caliper	
Replacement of the rear left motorized brake caliper	
Replacement of the electric parking brake RIGHT-hand actuator	
Replacement of the electric parking brake LEFT-hand actuator	
Defragmenting of the ESP ecu memory	
Reactivation of automatic application of the electric parking brake	
	Telematics (SMEG_PLUS)
	- Basic function
	DTC Analysis
	Data Analysis
	Actuation Test
	ECU Information
	Anti-theft alarm (ALARME)
	- Basic function

DTC Analysis	Replacement of the high pressure pump or the flow regulation valve
Data Analysis	Replacement of the diesel high pressure rail
Actuation Test	Filling of the diesel additive tank
ECU Information	Replacement of the exhaust manifold
Hands free starting access electronic module (BML)	Replacement of the cylinder head
- Basic function	Replacement of the diesel additive reservoir of the pump or of the pipes
DTC Analysis	EGR electrovalve replacement
Data Analysis	
Actuation Test	
ECU Information	
Controls on the steering wheel (COM2008P)	Built-in systems interface (V46_52)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	
Actuation Test	
ECU Information	
Electronic key reader (LCE)	ABS or ESP ECU (81 ESP)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
ECU Information	Actuation Test
Electric steering lock (AVE)	ECU Information
- Basic function	- Special Function
DTC Analysis	Calibration of the steering wheel angle sensor
Data Analysis	Air Bleeding
Actuation Test	Longitudinal Acceleration Sensor Calibration
ECU Information	Reactivation of automatic application of the electric parking brake
	Deactivation of the automatic application of the electric parking brake function
	Deactivation of the electric vacuum pump diagnostics strategy
	Activation of the electric vacuum pump diagnostics strategy
New Model added	Gearbox ECU (CFC300P_Hy)
3008 Hybrid 4	- Basic function
Engine (DCM35_HY)	DTC Analysis
- Basic function	Data Analysis
DTC Analysis	Actuation Test
Data Analysis	ECU Information
Actuation Test	
ECU Information	
- Special Function	- Special Function
Change of air mixer	Learning of the gearbox gate
Replacement of the turbo	Programming of the clutch biting point
Replacement of the engine block without the air flow sensor	Initialization of the transmissibility value
	Bleeding of the hydraulic circuit
Replacement of the engine block with the air flow sensor	Depressurization of the hydraulic circuit
	Pressurize the hydraulic circuit
Replacement of the additive reservoir of the pump or of the pipes	
Replacement of the particle emission filter	
Replacement of the oxygen sensor	
Forced Regeneration Of The Particle Filter Vehicle Stationary	
Filling of the diesel additive adding reservoir	
Replacement of the EGR exchanger	
Air flow sensor replacement	
Replacement of the differential pressure sensor	
Power steering (GEP)	
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Battery charge status unit (BECB_GEN2)	
- Basic function	

Data Analysis	High head vision (VTH_UDS)
ECU Information	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Engine relay unit (BSM)	High head vision (VTH)
- Basic function DTC Analysis	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Airbag ECU (SAC_AUTOLIV)	Hybrid control ECU 1 (HCU1 EURO6)
- Basic function DTC Analysis Data Analysis ECU Information	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Special Function Locking Unlocking	- Special Function Replacement of the accessories drive belt Forced starting by starter mode Exit from factory mode Reactivation
Parking assistance (AAS_UDS)	Hybrid control ECU 2 (HCU2 EURO6)
- Basic function DTC Analysis Data Analysis ECU Information	- Basic function DTC Analysis Data Analysis ECU Information
Instrument panel (COMBINE)	Traction battery ECU (TBMU)
- Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Telematics (SMEG_PLUS)	- Special Function Reactivation
- Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Hybrid mode selector (MCM)
Control under the steering wheel (HDC)	- Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Basic function Data Analysis Actuation Test ECU Information
Air conditioning (CLIM_REGULEE)	Under inflation detection (DSG)
- Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Basic function DTC Analysis ECU Information
Driver's door module (PDPC)	Under inflation detection (DSG_UDS)
- Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Basic function DTC Analysis

Data Analysis	ECU Information
- Special Function	
Read wheel transmitter module identifiers	
Write wheel transmitter module identifiers by references	
Initialization of the wheel transmitter modules	
Initialization of a single wheel transmitter module	
Multifunction screen (TYPE 'C' (DOT matrix))	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
- Special Function	
Configuration and display mode	
Configuration of options	
Remote Control Configuration	
Customer language configuration	
Configuration of the customer parameter setting menu	
Multifunction screen (TYPE 'C color'(DOT matrix))	
- Basic function	
DTC Analysis	
ECU Information	
- Special Function	
Customer configuration	
Vehicle configuration	
Configuration of the personalization menu	
Windscreen wiper (MOTEV)	
- Basic function	
Actuation Test	
ECU Information	
Radio (RD4)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Radio (RD45)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Telematic unit (RNEG2010)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	

ECU Information
Anti-theft alarm (ALARME)
- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information

Rain-sunlight sensor (PLUIE_LUMINOSITE)
- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information

RENAULT/DACIA

Feedback

Greece : Laguna II Injection DTC added
Poland : Master II PH3 Injection Sensor bug fixed
Poland : Master III Injection Special function added
Australia : Master III Injection Special function added
Australia : Trafic II AT added
Singapore : Clio II ABS New type added
Iran : Megane II SRS Special function added
Malaysia: SCENIC I Injection new type added
Malaysia: Kangoo I AT Added

CITROEN

New Model added

DS3

Engine (5FW MEV 17.4)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function
Initialization of auto adaptative

Engine (8FS MEV 17.4)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function

Initialization of auto adaptative	Replacement Of The Exhaust Manifold Replacement Of The Cylinder Head Replacement Of The Diesel High Pressure Rail Filling Of The Diesel Additive Tank Replacement Of The Oxygen Sensor
Engine (5FS MEV 17.4 EVO) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Engine (EDC17C10 9HP DV4CTED 70 CV) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
- Special Function Initialization of auto adaptative Motorized throttle unit Upstream and downstream oxygen sensors Accelerator pedal sensor Injectors Catalytic converter Fuel sender/pump module Inlet and exhaust camshaft phase sensor Inlet and exhaust camshaft dephasing electrovalve Inlet pressure sensor Variable valve lift motor Variable valve lift system position sensor Canister discharge electrovalve Timing	- Special Function Forced Regeneration Of The Particle Filter Vehicle Stationary Replacement Of The Particle Emission Filter Change of EGR Valve Replacement Of The EGR Exchanger Change Of Air Mixer Replacement Of The Turbo Replacement Of The Additive Reservoir Of Pump Or Pipes Replacement Of The High Pressure Pump Or Regulation Valve
Engine (MED17_4_4) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Replacement Of The Exhaust Manifold Replacement Of The Cylinder Head Replacement Of The Diesel High Pressure Rail Filling Of The Diesel Additive Tank Replacement Of The Oxygen Sensor
Engine (ME749_EC5) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Engine (EDC17C10_BR2 9HP DV6DTED 92 CV) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Engine (EDC17C10 8HR DV4CTED 70 CV) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	- Special Function Forced Regeneration Of The Particle Filter Vehicle Stationary Replacement Of The Particle Emission Filter Change of EGR Valve Replacement Of The EGR Exchanger Change Of Air Mixer Replacement Of The Turbo Replacement Of The Additive Reservoir Of Pump Or Pipes Replacement Of The High Pressure Pump Or Regulation Valve
- Special Function Forced Regeneration Of The Particle Filter Vehicle Stationary Replacement Of The Particle Emission Filter Change of EGR Valve Replacement Of The EGR Exchanger Change Of Air Mixer Replacement Of The Turbo Replacement Of The Additive Reservoir Of Pump Or Pipes Replacement Of The High Pressure Pump Or Regulation Valve	Replacement Of The Exhaust Manifold Replacement Of The Cylinder Head Replacement Of The Diesel High Pressure Rail Filling Of The Diesel Additive Tank Replacement Of The Oxygen Sensor
Engine (EDC17C10_BR2 9HJ DV6DTEDM 90 CV) - Basic function	Engine (EDC17C10_BR2 9HJ DV6DTEDM 90 CV) - Basic function

DTC Analysis	Replacement of the particle emission filter
Data Analysis	Replacement of the oxygen sensor
Actuation Test	
ECU Information	
- Special Function	
Replacement Of The Particle Emission Filter	
Change of EGR Valve	
Replacement Of The EGR Exchanger	
Replacement Of The Additive Reservoir Of Pump Or Pipes	
Replacement Of The High Pressure Pump Or Regulation Valve	Forced regeneration vehicle stationary
Replacement Of The Exhaust Manifold	Change of high pressure pump with its fuel flow regulator
Replacement Of The Cylinder Head	Replacement of the EGR valve
Replacement Of The Diesel High Pressure Rail	Change of air mixer
Filling Of The Diesel Additive Tank	Replacement of the turbo
Engine (EDC17C10_BR2 9HK DV6ETEDM 75 CV)	Replacement of the air flow sensor
- Basic function	Replacement of the engine block without the air flow sensor
DTC Analysis	Replacement of the engine block with the air flow sensor
Data Analysis	
Actuation Test	
ECU Information	
- Special Function	Replacement of the additive reservoir of the pump or of the pipes
Replacement Of The Particle Emission Filter	Replacement of the particle emission filter
Change of EGR Valve	Replacement of the oxygen sensor
Replacement Of The EGR Exchanger	
Replacement Of The Additive Reservoir Of Pump Or Pipes	
Replacement Of The High Pressure Pump Or Regulation Valve	
Replacement Of The Exhaust Manifold	
Replacement Of The Cylinder Head	
Replacement Of The Diesel High Pressure Rail	
Filling Of The Diesel Additive Tank	
Engine (9HD HDI_SID807_BR2)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
- Special Function	
Forced regeneration vehicle stationary	Forced Regeneration Of The Particle Filter Vehicle Stationary
Change of high pressure pump with its fuel flow regulator	Change of air mixer
Replacement of the EGR valve	Replacement of the turbo
Change of air mixer	Replacement of the particle emission filter
Replacement of the turbo	Replacement of the oxygen sensor
Replacement of the air flow sensor	Filling of the diesel additive adding reservoir
Replacement of the engine block without the air flow sensor	Replacement of the diesel additive reservoir+ pump/pipes
Replacement of the engine block with the air flow sensor	Change of EGR valve
Replacement of the additive reservoir of the pump or of the pipes	Replacement of the EGR exchanger
	Air flow sensor replacement
	Replacement of the differential pressure sensor
	Replacement of the high pressure pump or the flow regulation valve
	Replacement of the diesel high pressure rail
	Replacement of the additive reservoir+ pump or pipes
Filling of the diesel additive tank	
Change of engine block without the flowmeter	
Change of engine block with the flowmeter	

Replacement of the ancillary drive belt	Actuation Test
Replacement of the exhaust manifold	ECU Information
Replacement of the cylinder head	
Engine (9HX EDC16C3)	Gearbox ECU (BVA_AL4)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	
Electric EGR valve replacement	
EGR mixer butterfly replacement	
Engine (9HY EDC16C3)	Gearbox ECU (AM6 Euro5 automatic gearbox)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
- Special Function	
Electric EGR valve replacement	
EGR mixer butterfly replacement	
Engine (9HZ EDC16C3)	Gearbox ECU (AT6 Euro5 automatic gearbox)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Engine (9HV EDC16C3)	Gearbox ECU (CFC300P gearbox)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Engine (RHR DCM 3.4)	Gearbox ECU (BVA_AM6_AT6_UDS)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Actuation Test
Actuation Test	ECU Information
ECU Information	
Engine (RHL DCM 3.4)	Multiplexed additive adding pump ECU
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
Engine (RHF DCM 3.4)	Power steering (DAE_A515)
- Basic function	- Basic function
DTC Analysis	DTC Analysis
Data Analysis	Data Analysis
Actuation Test	Actuation Test
ECU Information	ECU Information
	Built-In system interface
	- Basic function
	DTC Analysis
	ABS or ESP ECU (ABS MK 100)

- Basic function	Air conditioning (CLIM_REGULEE)
DTC Analysis	- Basic function
Data Analysis	DTC Analysis
Actuation Test	Data Analysis
ECU Information	Actuation Test
- Special Function	ECU Information
Calibration of the steering wheel angle sensor	Telematics (SMEG_PLUS)
Air Bleeding	- Basic function
ABS or ESP ECU (ESP MK100)	DTC Analysis
- Basic function	Data Analysis
DTC Analysis	Actuation Test
Data Analysis	ECU Information
Actuation Test	Rain and light sensor (PLUIE_LUMINOSITE)
ECU Information	- Basic function
- Special Function	DTC Analysis
Calibration of the gyrometer / accelerometer sensor	Data Analysis
Replacement of the ESP ECU	Actuation Test
Bleeding of the hydraulic block ESP MK100	ECU Information
ABS or ESP ECU (ESP MK 60-O)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
Airbag ECU (SAC_AUTOLIV)	FIAT
- Basic function	New Model added
DTC Analysis	TIPO
Data Analysis	- Service reset – IC
ECU Information	Support function
- Special Function	Next service reset
Locking	
Unlocking	
Trailer relay unit (BSR)	Bug fixed
- Basic function	- Body Computer Marelli(940): Sensor Conversion
DTC Analysis	Formula algorithm adjusted
Engine relay unit (BSM)	- Delphi Electric Steering MY12: Sensor Conversion
- Basic function	Formula algorithm adjusted
DTC Analysis	- Marelli 8F3 CF5/EOBD Diesel Injection (1.3): DPF
Controls under the steering wheel (HDC)	Regeneration function stabilized
- Basic function	- Marelli 8DF CF5/EOBD Diesel Injection (1.3): DPF
DTC Analysis	Regeneration function stabilized
Parking assistance (AAS)	ALFA ROMEO
- Basic function	Bug fixed
DTC Analysis	- Body Computer Marelli(940): Sensor Conversion
Data Analysis	Formula algorithm adjusted
Actuation Test	- Delphi Electric Steering MY12: Sensor Conversion
ECU Information	Formula algorithm adjusted
	- Marelli 8F3 CF5/EOBD Diesel Injection (1.3): DPF
	Regeneration function stabilized

Regeneration function stabilized

- Marelli 8DF CF5/EOBD Diesel Injection (1.3): DPF Regeneration function stabilized

LANCIA

Bug fixed

- Body Computer Marelli(940): Sensor Conversion Formula algorithm adjusted
- Delphi Electric Steering MY12: Sensor Conversion Formula algorithm adjusted
- Marelli 8F3 CF5/EOBD Diesel Injection (1.3): DPF Regeneration function stabilized
- Marelli 8DF CF5/EOBD Diesel Injection (1.3): DPF Regeneration function stabilized

JAGUAR

New System Added

S-TYPE 2005

- ECM (Engine Control Module)
- Basic Function
- DTC Analysis

X-TYPE 2002 ~2003

- ECM (Engine Control Module)
- Basic Function
- DTC Analysis

X-TYPE 2004 ~2008

- ECM (Engine Control Module)
- Basic Function
- DTC Analysis

XJ SERIES 2004 ~2005

- ECM (Engine Control Module)
- Basic Function
- DTC Analysis

XK SERIES 2003 ~2006

- ECM (Engine Control Module)
- Basic Function
- DTC Analysis

New Function Added

F-TYPE 2014~2015

- PCM (Powertrain Control Module)
- Basic Function
- ECU Information Display
- TCM (Transmission Control Module)
- Basic Function

 ECU Information Display

 GSM (Gear Shift Module)

- Basic Function

 ECU Information Display

 ABS (ABS Control Module)

- Basic Function

 ECU Information Display

 RCM (Restraints Control Module)

- Basic Function

 ECU Information Display

 OCS (Restraints Occupancy System)

- Basic Function

 ECU Information Display

 VIM (Vehicle Immobilizer Module)

- Basic Function

 ECU Information Display

 KVM (Keyless Vehicle Module)

- Basic Function

 ECU Information Display

 BCM (Body Control Module)

- Basic Function

 ECU Information Display

 IPC (Instrument Cluster Control Module)

- Basic Function

 ECU Information Display

 PBM (Parking Brake Control Module)

- Basic Function

 ECU Information Display

 PAM (Parking Assist Control Module)

- Basic Function

 ECU Information Display

 HCM (Headlamp Control Module)

- Basic Function

 ECU Information Display

 HCMB (Headlamp Control Module B)

- Basic Function

 ECU Information Display

 ATCM (All Terrain Control Module)

- Basic Function

 ECU Information Display

 RDCM (Rear Differential Control Module)

- Basic Function

 ECU Information Display

 DDM (Driver's Door Module)

- Basic Function

 ECU Information Display

 PDM (Passenger's Door Module)

- Basic Function

 ECU Information Display

 RGTM (Rear Gate/Trunk Module)

- Basic Function

 ECU Information Display

 DSM (Driver's Seat Module)

- Basic Function

 ECU Information Display

 PSM (Passenger's Seat Module)

- Basic Function
 - ECU Information Display
- HVAC (Heating Ventilation and Air Conditioning Control Module)
 - Basic Function
 - ECU Information Display
 - SODL (Side Object Detection - Left)
 - Basic Function
 - ECU Information Display
 - SODR (Side Object Detection - Right)
 - Basic Function
 - ECU Information Display
 - CHCM (Chassis Control Module)
 - Basic Function
 - ECU Information Display
 - FTCM (Folding Top Control Module)
 - Basic Function
 - ECU Information Display
 - FTCMB (Folding Top Control Module B)
 - Basic Function
 - ECU Information Display
 - GWM (Gateway Module)
 - Basic Function
 - ECU Information Display
 - FCDIM (Front Control/Display Interface Module)
 - Basic Function
 - ECU Information Display
 - FCIM (Front Controls Interface Module)
 - Basic Function
 - ECU Information Display
 - IPMB (Image Processing Module B)
 - Basic Function
 - ECU Information Display
 - ACM (Audio Front Control Module)
 - Basic Function
 - ECU Information Display
 - AAM (Audio Amplifier Module)
 - Basic Function
 - ECU Information Display
 - DABM (Digital Audio Broadcast Module)
 - Basic Function
 - ECU Information Display
 - NCM (Navigation Control Module)
 - Basic Function
 - ECU Information Display
 - TVM (Television Module)
 - Basic Function
 - ECU Information Display
 - NCM (Navigation Control Module)
 - Basic Function
 - ECU Information Display
 - SRM (Satellite Audio Unit Module)
 - Basic Function
 - ECU Information Display
 - PCM (Powertrain Control Module)
 - Basic Function
 - ECU Information Display
 - TCM (Transmission Control Module)
 - Basic Function
 - ECU Information Display
 - ABS (ABS Control Module)
 - Basic Function
 - ECU Information Display
 - RCM (Restraints Control Module)
 - Basic Function
 - ECU Information Display
 - IPC (Instrument Cluster Control Module)
 - Basic Function
 - ECU Information Display
 - PBM (Parking Brake Control Module)
 - Basic Function
 - ECU Information Display
 - TPM (Tire Pressure Monitoring System)
 - Basic Function
 - ECU Information Display
 - BCM (Body Control Module)
 - Basic Function
 - ECU Information Display
 - GSM (Gear Shift Module)
 - Basic Function
 - ECU Information Display
 - HCM (Headlamp Control Module)
 - Basic Function
 - ECU Information Display
 - RDCM (Rear Differential Control Module)
 - Basic Function
 - ECU Information Display
 - TCCM (Transfer Case Control Module)
 - Basic Function
 - ECU Information Display
 - TCU (Telematic control unit module)
 - Basic Function
 - ECU Information Display
 - VIM (Vehicle Immobilizer Module)
 - Basic Function
 - ECU Information Display
 - ATCM (All Terrain Control Module)
 - Basic Function
 - ECU Information Display
 - CHCM (Chassis Control Module)
 - Basic Function
 - ECU Information Display
 - FTCM (Folding Top Control Module)
 - Basic Function
 - ECU Information Display
 - FTCMB (Folding Top Control Module B)
 - Basic Function
 - ECU Information Display

- ECU Information Display
IPMA (Image Processing control Module A)
- Basic Function
 ECU Information Display
OCS (Restraints Occupancy System)
- Basic Function
 ECU Information Display
PAM (Parking Assist Control Module)
- Basic Function
 ECU Information Display
PSCM (Power steering control Module)
- Basic Function
 ECU Information Display
SASM (Steering angle sensor Module)
- Basic Function
 ECU Information Display
DDM (Driver's Door Module)
- Basic Function
 ECU Information Display
DSM (Driver's Seat Module)
- Basic Function
 ECU Information Display
PDM (Passenger's Door Module)
- Basic Function
 ECU Information Display
PSM (Passenger's Seat Module)
- Basic Function
 ECU Information Display
KVM (Keyless Vehicle Module)
- Basic Function
 ECU Information Display
RGTM (Rear Gate/Trunk Module)
- Basic Function
 ECU Information Display
AHU (Incontrol Touch Audio Head Unit)
- Basic Function
 ECU Information Display
CAV (Connect and View Module)
- Basic Function
 ECU Information Display
FCDIM (Front Control/Display Interface Module)
- Basic Function
 ECU Information Display
FCIM (Front Controls Interface Module)
- Basic Function
 ECU Information Display
HVAC (Heating Ventilation and Air Conditioning Control Module)
- Basic Function
 ECU Information Display
IPMB (Image Processing Module B)
- Basic Function
 ECU Information Display
NAV (Navigation Control Module)
- Basic Function
 ECU Information Display
- SODL (Side Object Detection - Left)
- Basic Function
 ECU Information Display
SODR (Side Object Detection - Right)
- Basic Function
 ECU Information Display
AAM (Audio Amplifier Module)
- Basic Function
 ECU Information Display
ACM (Audio Front Control Module)
- Basic Function
 ECU Information Display
DABM (Digital Audio Broadcast Module)
- Basic Function
 ECU Information Display
NCM (Navigation Control Module)
- Basic Function
 ECU Information Display
SRM (Satellite Audio Unit Module)
- Basic Function
 ECU Information Display
TVM (Television Module)
- Basic Function
 ECU Information Display
- S-TYPE 2006 ~ 2008**
ABS (ABS Control Module)
- Basic Function
 ECU Information Display
PBM (Parking Brake Control Module)
- Basic Function
 ECU Information Display
PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function
 ECU Information Display
- X-TYPE 2004 ~ 2008**
ABS (ABS Control Module)
- Basic Function
 ECU Information Display
DSM (Driver's Seat Module)
- Basic Function
 ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function
 ECU Information Display
- XF 2008 ~ 2009**
PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display
TCM (Transmission Control Module)
- Basic Function

- ECU Information Display
- GSM (Gear Shift Module)
 - Basic Function
 - ECU Information Display
- ABS (ABS Control Module)
 - Basic Function
 - ECU Information Display
- RCM (Restraints Control Module)
 - Basic Function
 - ECU Information Display
- OCS (Restraints Occupancy System)
 - Basic Function
 - ECU Information Display
- VIM (Vehicle Immobilizer Module)
 - Basic Function
 - ECU Information Display
- KVM (Keyless Vehicle Module)
 - Basic Function
 - ECU Information Display
- BCM (Body Control Module)
 - Basic Function
 - ECU Information Display
- BCMB (Body Control Module B)
 - Basic Function
 - ECU Information Display
- IPC (Instrument Cluster Control Module)
 - Basic Function
 - ECU Information Display
- ICP (Integrated Control Panel)
 - Basic Function
 - ECU Information Display
- PBM (Parking Brake Control Module)
 - Basic Function
 - ECU Information Display
- PAM (Parking Assist Control Module)
 - Basic Function
 - ECU Information Display
- HCM (Headlamp Control Module)
 - Basic Function
 - ECU Information Display
- ADCM (Adaptive Damping Control Module)
 - Basic Function
 - ECU Information Display
- DDM (Driver's Door Module)
 - Basic Function
 - ECU Information Display
- PDM (Passenger's Door Module)
 - Basic Function
 - ECU Information Display
- DSM (Driver's Seat Module)
 - Basic Function
 - ECU Information Display
- DCSM (Driver's Seat Climate Control Module)
 - Basic Function
 - ECU Information Display
- HVAC (Heating Ventilation and Air Conditioning Control)
- Module)
- Basic Function
 - ECU Information Display
- SODL (Side Object Detection - Left)
 - Basic Function
 - ECU Information Display
- SODR (Side Object Detection - Right)
 - Basic Function
 - ECU Information Display
- TPM (Tire Pressure Monitoring System)
 - Basic Function
 - ECU Information Display
- ICS (Impact Classification System)
 - Basic Function
 - ECU Information Display
- CCM (Adaptive Speed Control Control Module)
 - Basic Function
 - ECU Information Display
- ICM (Infotainment Control Module)
 - Basic Function
 - ECU Information Display
- FLR (Forward Looking Radar)
 - Basic Function
 - ECU Information Display
- FCDIM (Front Control/Display Interface Module)
 - Basic Function
 - ECU Information Display
- ACM (Audio Front Control Module)
 - Basic Function
 - ECU Information Display
- AAM (Audio Amplifier Module)
 - Basic Function
 - ECU Information Display
- DABM (Digital Audio Broadcast Module)
 - Basic Function
 - ECU Information Display
- NCM (Navigation Control Module)
 - Basic Function
 - ECU Information Display
- TEL (Cellular Telephone Control Module)
 - Basic Function
 - ECU Information Display
- TVM (Television Module)
 - Basic Function
 - ECU Information Display
- SRM (Satellite Audio Unit Module)
 - Basic Function
 - ECU Information Display
- APIM (Accessory Protocol Interface Module)
 - Basic Function
 - ECU Information Display
- XF 2010 ~ 2011**
- PCM (Powertrain Control Module)
 - Basic Function
 - ECU Information Display

TCM (Transmission Control Module)

- Basic Function

 ECU Information Display

GSM (Gear Shift Module)

- Basic Function

 ECU Information Display

ABS (ABS Control Module)

- Basic Function

 ECU Information Display

RCM (Restraints Control Module)

- Basic Function

 ECU Information Display

OCS (Restraints Occupancy System)

- Basic Function

 ECU Information Display

VIM (Vehicle Immobilizer Module)

- Basic Function

 ECU Information Display

KVM (Keyless Vehicle Module)

- Basic Function

 ECU Information Display

BCM (Body Control Module)

- Basic Function

 ECU Information Display

BCMB (Body Control Module B)

- Basic Function

 ECU Information Display

IPC (Instrument Cluster Control Module)

- Basic Function

 ECU Information Display

ICP (Integrated Control Panel)

- Basic Function

 ECU Information Display

PBM (Parking Brake Control Module)

- Basic Function

 ECU Information Display

PAM (Parking Assist Control Module)

- Basic Function

 ECU Information Display

HCM (Headlamp Control Module)

- Basic Function

 ECU Information Display

ADCM (Adaptive Damping Control Module)

- Basic Function

 ECU Information Display

RDCM (Rear Differential Control Module)

- Basic Function

 ECU Information Display

DDM (Driver's Door Module)

- Basic Function

 ECU Information Display

PDM (Passenger's Door Module)

- Basic Function

 ECU Information Display

DSM (Driver's Seat Module)

- Basic Function

 ECU Information Display

DCSM (Driver's Seat Climate Control Module)

- Basic Function

 ECU Information Display

HVAC (Heating Ventilation and Air Conditioning Control Module)

- Basic Function

 ECU Information Display

SODL (Side Object Detection - Left)

- Basic Function

 ECU Information Display

SODR (Side Object Detection - Right)

- Basic Function

 ECU Information Display

TPM (Tire Pressure Monitoring System)

- Basic Function

 ECU Information Display

ICS (Impact Classification System)

- Basic Function

 ECU Information Display

CCM (Adaptive Speed Control Control Module)

- Basic Function

 ECU Information Display

ICM (Infotainment Control Module)

- Basic Function

 ECU Information Display

FLR (Forward Looking Radar)

- Basic Function

 ECU Information Display

FCDIM (Front Control/Display Interface Module)

- Basic Function

 ECU Information Display

ACM (Audio Front Control Module)

- Basic Function

 ECU Information Display

AAM (Audio Amplifier Module)

- Basic Function

 ECU Information Display

DABM (Digital Audio Broadcast Module)

- Basic Function

 ECU Information Display

NCM (Navigation Control Module)

- Basic Function

 ECU Information Display

TEL (Cellular Telephone Control Module)

- Basic Function

 ECU Information Display

TVM (Television Module)

- Basic Function

 ECU Information Display

SRM (Satellite Audio Unit Module)

- Basic Function

 ECU Information Display

APIM (Accessory Protocol Interface Module)

- Basic Function

 ECU Information Display

XF 2012

PCM (Powertrain Control Module)

- Basic Function

ECU Information Display

TCM (Transmission Control Module)

- Basic Function

ECU Information Display

GSM (Gear Shift Module)

- Basic Function

ECU Information Display

ABS (ABS Control Module)

- Basic Function

ECU Information Display

RCM (Restraints Control Module)

- Basic Function

ECU Information Display

OCS (Restraints Occupancy System)

- Basic Function

ECU Information Display

VIM (Vehicle Immobilizer Module)

- Basic Function

ECU Information Display

KVM (Keyless Vehicle Module)

- Basic Function

ECU Information Display

BCM (Body Control Module)

- Basic Function

ECU Information Display

BCMB (Body Control Module B)

- Basic Function

ECU Information Display

IPC (Instrument Cluster Control Module)

- Basic Function

ECU Information Display

PBM (Parking Brake Control Module)

- Basic Function

ECU Information Display

PAM (Parking Assist Control Module)

- Basic Function

ECU Information Display

HCM (Headlamp Control Module)

- Basic Function

ECU Information Display

HCMB (Headlamp Control Module B)

- Basic Function

ECU Information Display

ADCM (Adaptive Damping Control Module)

- Basic Function

ECU Information Display

RDCM (Rear Differential Control Module)

- Basic Function

ECU Information Display

DDM (Driver's Door Module)

- Basic Function

ECU Information Display

PDM (Passenger's Door Module)

- Basic Function

ECU Information Display

SPMA (Seatbelt Pre-tensioner Control Module A)

- Basic Function

ECU Information Display

SPMB (Seatbelt Pre-tensioner Control Module B)

- Basic Function

ECU Information Display

DSM (Driver's Seat Module)

- Basic Function

ECU Information Display

PSM (Passenger's Seat Module)

- Basic Function

ECU Information Display

DCSM (Driver's Seat Climate Control Module)

- Basic Function

ECU Information Display

HVAC (Heating Ventilation and Air Conditioning Control Module)

- Basic Function

ECU Information Display

SODL (Side Object Detection - Left)

- Basic Function

ECU Information Display

SODR (Side Object Detection - Right)

- Basic Function

ECU Information Display

TPM (Tire Pressure Monitoring System)

- Basic Function

ECU Information Display

ICS (Impact Classification System)

- Basic Function

ECU Information Display

GWM (Gateway Module)

- Basic Function

ECU Information Display

CCM (Adaptive Speed Control Control Module)

- Basic Function

ECU Information Display

FCDIM (Front Control/Display Interface Module)

- Basic Function

ECU Information Display

FCIMB (Front Controls Interface Module B)

- Basic Function

ECU Information Display

ACM (Audio Front Control Module)

- Basic Function

ECU Information Display

AAM (Audio Amplifier Module)

- Basic Function

ECU Information Display

DABM (Digital Audio Broadcast Module)

- Basic Function

ECU Information Display

NCM (Navigation Control Module)

- Basic Function
ECU Information Display
TVM (Television Module)
- Basic Function
ECU Information Display
SRM (Satellite Audio Unit Module)
- Basic Function
ECU Information Display

XF 2013 ~ 2015

PCM (Powertrain Control Module)
- Basic Function
ECU Information Display
TCM (Transmission Control Module)
- Basic Function
ECU Information Display
TCCM (Transfer Case Control Module)
- Basic Function
ECU Information Display
GSM (Gear Shift Module)
- Basic Function
ECU Information Display
ABS (ABS Control Module)
- Basic Function
ECU Information Display
RCM (Restraints Control Module)
- Basic Function
ECU Information Display
OCS (Restraints Occupancy System)
- Basic Function
ECU Information Display
VIM (Vehicle Immobilizer Module)
- Basic Function
ECU Information Display
KVM (Keyless Vehicle Module)
- Basic Function
ECU Information Display
BCM (Body Control Module)
- Basic Function
ECU Information Display
BCMB (Body Control Module B)
- Basic Function
ECU Information Display
IPC (Instrument Cluster Control Module)
- Basic Function
ECU Information Display
PBM (Parking Brake Control Module)
- Basic Function
ECU Information Display
PAM (Parking Assist Control Module)
- Basic Function
ECU Information Display
HCM (Headlamp Control Module)
- Basic Function
ECU Information Display
HCMB (Headlamp Control Module B)

- Basic Function
ECU Information Display
ADCM (Adaptive Damping Control Module)
- Basic Function
ECU Information Display
RDCM (Rear Differential Control Module)
- Basic Function
ECU Information Display
DDM (Driver's Door Module)
- Basic Function
ECU Information Display
PDM (Passenger's Door Module)
- Basic Function
ECU Information Display
RGTM (Rear Gate/Trunk Module)
- Basic Function
ECU Information Display
SPMA (Seatbelt Pre-tensioner Control Module A)
- Basic Function
ECU Information Display
SPMB (Seatbelt Pre-tensioner Control Module B)
- Basic Function
ECU Information Display
DSM (Driver's Seat Module)
- Basic Function
ECU Information Display
PSM (Passenger's Seat Module)
- Basic Function
ECU Information Display
DCSM (Driver's Seat Climate Control Module)
- Basic Function
ECU Information Display
HVAC (Heating Ventilation and Air Conditioning Control Module)
- Basic Function
ECU Information Display
SODL (Side Object Detection - Left)
- Basic Function
ECU Information Display
SODR (Side Object Detection - Right)
- Basic Function
ECU Information Display
CHCM (Chassis Control Module)
- Basic Function
ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function
ECU Information Display
GWM (Gateway Module)
- Basic Function
ECU Information Display
CCM (Adaptive Speed Control Control Module)
- Basic Function
ECU Information Display
FCDIM (Front Control/Display Interface Module)
- Basic Function

ECU Information Display
FCIMB (Front Controls Interface Module B)
- Basic Function
 ECU Information Display
ACM (Audio Front Control Module)
- Basic Function
 ECU Information Display
AAM (Audio Amplifier Module)
- Basic Function
 ECU Information Display
DABM (Digital Audio Broadcast Module)
- Basic Function
 ECU Information Display
NCM (Navigation Control Module)
- Basic Function
 ECU Information Display
TVM (Television Module)
- Basic Function
 ECU Information Display
SRM (Satellite Audio Unit Module)
- Basic Function
 ECU Information Display

XF 2016

PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display
TCM (Transmission Control Module)
- Basic Function
 ECU Information Display
ABS (ABS Control Module)
- Basic Function
 ECU Information Display
RCM (Restraints Control Module)
- Basic Function
 ECU Information Display
IPC (Instrument Cluster Control Module)
- Basic Function
 ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function
 ECU Information Display
BCM (Body Control Module)
- Basic Function
 ECU Information Display
CCM (Adaptive Speed Control Control Module)
- Basic Function
 ECU Information Display
GSM (Gear Shift Module)
- Basic Function
 ECU Information Display
GWM (Gateway Module)
- Basic Function
 ECU Information Display
OCS (Restraints Occupancy System)
- Basic Function

ECU Information Display
TCCM (Transfer Case Control Module)
- Basic Function
 ECU Information Display
TCU (Telematic control unit module)
- Basic Function
 ECU Information Display
VIM (Vehicle Immobilizer Module)
- Basic Function
 ECU Information Display
ATCM (All Terrain Control Module)
- Basic Function
 ECU Information Display
CHCM (Chassis Control Module)
- Basic Function
 ECU Information Display
PAM (Parking Assist Control Module)
- Basic Function
 ECU Information Display
PSCM (Power steering control Module)
- Basic Function
 ECU Information Display
SASM (Steering angle sensor Module)
- Basic Function
 ECU Information Display
AHU (Incontrol Touch Audio Head Unit)
- Basic Function
 ECU Information Display
AUCM (Head-up Display Cooling Fan Module)
- Basic Function
 ECU Information Display
FCIMB (Front Controls Interface Module B)
- Basic Function
 ECU Information Display
HUD (Head Up Display)
- Basic Function
 ECU Information Display
HVAC (Heating Ventilation and Air Conditioning Control Module)
- Basic Function
 ECU Information Display
IMC (Incontrol Touch Pro Infotainment Master Controller)
- Basic Function
 ECU Information Display
IPMA (Image Processing control Module A)
- Basic Function
 ECU Information Display
IPMB (Image Processing Module B)
- Basic Function
 ECU Information Display
RHVAC (Rear Heating Ventilation and Air Conditioning Control Module)
- Basic Function
 ECU Information Display
SODL (Side Object Detection - Left)
- Basic Function

ECU Information Display
SODR (Side Object Detection - Right)
- Basic Function
 ECU Information Display
DDM (Driver's Door Module)
- Basic Function
 ECU Information Display
DRDM (Driver's Rear Door Module)
- Basic Function
 ECU Information Display
DSM (Driver's Seat Module)
- Basic Function
 ECU Information Display
PDM (Passenger's Door Module)
- Basic Function
 ECU Information Display
PRDM (Passenger's Rear Door Module)
- Basic Function
 ECU Information Display
PSM (Passenger's Seat Module)
- Basic Function
 ECU Information Display
KVM (Keyless Vehicle Module)
- Basic Function
 ECU Information Display
RGTM (Rear Gate/Trunk Module)
- Basic Function
 ECU Information Display
TBM (Deployable Towbar Control Module)
- Basic Function
 ECU Information Display
AAM (Incontrol Touch Pro Audio Amplifier Module)
- Basic Function
 ECU Information Display
ISC (Incontrol Touch Pro Infotainment Slave Controller)
- Basic Function
 ECU Information Display

XJ SERIES 2006 ~ 2007

PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display
ABS (ABS Control Module)
- Basic Function
 ECU Information Display
PBM (Parking Brake Control Module)
- Basic Function
 ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function
 ECU Information Display

XJ SERIES 2008 ~ 2009

PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display

ABS (ABS Control Module)
- Basic Function
 ECU Information Display
PBM (Parking Brake Control Module)
- Basic Function
 ECU Information Display
DCSM (Driver's Seat Climate Control Module)
- Basic Function
 ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function
 ECU Information Display

XJ SERIES 2010 ~ 2012

PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display
TCM (Transmission Control Module)
- Basic Function
 ECU Information Display
GSM (Gear Shift Module)
- Basic Function
 ECU Information Display
ABS (ABS Control Module)
- Basic Function
 ECU Information Display
RCM (Restraints Control Module)
- Basic Function
 ECU Information Display
OCS (Restraints Occupancy System)
- Basic Function
 ECU Information Display
VIM (Vehicle Immobilizer Module)
- Basic Function
 ECU Information Display
KVM (Keyless Vehicle Module)
- Basic Function
 ECU Information Display
BCM (Body Control Module)
- Basic Function
 ECU Information Display
IPC (Instrument Cluster Control Module)
- Basic Function
 ECU Information Display
PBM (Parking Brake Control Module)
- Basic Function
 ECU Information Display
PAM (Parking Assist Control Module)
- Basic Function
 ECU Information Display
HCM (Headlamp Control Module)
- Basic Function
 ECU Information Display
HCMB (Headlamp Control Module B)
- Basic Function
 ECU Information Display

ADCM (Adaptive Damping Control Module)

- Basic Function

 ECU Information Display

RDCM (Rear Differential Control Module)

- Basic Function

 ECU Information Display

DDM (Driver's Door Module)

- Basic Function

 ECU Information Display

PDM (Passenger's Door Module)

- Basic Function

 ECU Information Display

RGTM (Rear Gate/Trunk Module)

- Basic Function

 ECU Information Display

SPMA (Seatbelt Pre-tensioner Control Module A)

- Basic Function

 ECU Information Display

SPMB (Seatbelt Pre-tensioner Control Module B)

- Basic Function

 ECU Information Display

DSM (Driver's Seat Module)

- Basic Function

 ECU Information Display

PSM (Passenger's Seat Module)

- Basic Function

 ECU Information Display

RLSM (Rear Left Seat Module)

- Basic Function

 ECU Information Display

RRSM (Rear Right Seat Module)

- Basic Function

 ECU Information Display

DCSM (Driver's Seat Climate Control Module)

- Basic Function

 ECU Information Display

RDCSM (Rear Seat Climate Control Module)

- Basic Function

 ECU Information Display

HVAC (Heating Ventilation and Air Conditioning Control Module)

- Basic Function

 ECU Information Display

RHVAC (Rear Heating Ventilation and Air Conditioning Control Module)

- Basic Function

 ECU Information Display

SODL (Side Object Detection - Left)

- Basic Function

 ECU Information Display

SODR (Side Object Detection - Right)

- Basic Function

 ECU Information Display

RLM (Ride Level Control Module)

- Basic Function

 ECU Information Display

CCM (Adaptive Speed Control Control Module)

- Basic Function

 ECU Information Display

FCDIM (Front Control/Display Interface Module)

- Basic Function

 ECU Information Display

FCIMB (Front Controls Interface Module B)

- Basic Function

 ECU Information Display

ACM (Audio Front Control Module)

- Basic Function

 ECU Information Display

AAM (Audio Amplifier Module)

- Basic Function

 ECU Information Display

DABM (Digital Audio Broadcast Module)

- Basic Function

 ECU Information Display

NCM (Navigation Control Module)

- Basic Function

 ECU Information Display

REM (Rear Entertainment Control Module)

- Basic Function

 ECU Information Display

TVM (Television Module)

- Basic Function

 ECU Information Display

SRM (Satellite Audio Unit Module)

- Basic Function

 ECU Information Display

XJ SERIES 2013 ~ 2015

PCM (Powertrain Control Module)

- Basic Function

 ECU Information Display

TCM (Transmission Control Module)

- Basic Function

 ECU Information Display

TCCM (Transfer Case Control Module)

- Basic Function

 ECU Information Display

GSM (Gear Shift Module)

- Basic Function

 ECU Information Display

ABS (ABS Control Module)

- Basic Function

 ECU Information Display

RCM (Restraints Control Module)

- Basic Function

 ECU Information Display

OCS (Restraints Occupancy System)

- Basic Function

 ECU Information Display

VIM (Vehicle Immobilizer Module)

- Basic Function

 ECU Information Display

KVM (Keyless Vehicle Module)

- Basic Function

 ECU Information Display

BCM (Body Control Module)

- Basic Function

 ECU Information Display

IPC (Instrument Cluster Control Module)

- Basic Function

 ECU Information Display

PBM (Parking Brake Control Module)

- Basic Function

 ECU Information Display

PAM (Parking Assist Control Module)

- Basic Function

 ECU Information Display

HCM (Headlamp Control Module)

- Basic Function

 ECU Information Display

HCMB (Headlamp Control Module B)

- Basic Function

 ECU Information Display

RDCM (Rear Differential Control Module)

- Basic Function

 ECU Information Display

DDM (Driver's Door Module)

- Basic Function

 ECU Information Display

PDM (Passenger's Door Module)

- Basic Function

 ECU Information Display

RGTM (Rear Gate/Trunk Module)

- Basic Function

 ECU Information Display

DSM (Driver's Seat Module)

- Basic Function

 ECU Information Display

PSM (Passenger's Seat Module)

- Basic Function

 ECU Information Display

RLSM (Rear Left Seat Module)

- Basic Function

 ECU Information Display

RRSM (Rear Right Seat Module)

- Basic Function

 ECU Information Display

DCSM (Driver's Seat Climate Control Module)

- Basic Function

 ECU Information Display

RDCSM (Rear Seat Climate Control Module)

- Basic Function

 ECU Information Display

HVAC (Heating Ventilation and Air Conditioning Control Module)

- Basic Function

 ECU Information Display

RHVAC (Rear Heating Ventilation and Air Conditioning

Control Module)

- Basic Function

 ECU Information Display

SODL (Side Object Detection - Left)

- Basic Function

 ECU Information Display

SODR (Side Object Detection - Right)

- Basic Function

 ECU Information Display

CHCM (Chassis Control Module)

- Basic Function

 ECU Information Display

GWM (Gateway Module)

- Basic Function

 ECU Information Display

CCM (Adaptive Speed Control Control Module)

- Basic Function

 ECU Information Display

FCDIM (Front Control/Display Interface Module)

- Basic Function

 ECU Information Display

FCIMB (Front Controls Interface Module B)

- Basic Function

 ECU Information Display

ACM (Audio Front Control Module)

- Basic Function

 ECU Information Display

AAM (Audio Amplifier Module)

- Basic Function

 ECU Information Display

DABM (Digital Audio Broadcast Module)

- Basic Function

 ECU Information Display

NCM (Navigation Control Module)

- Basic Function

 ECU Information Display

REM (Rear Entertainment Control Module)

- Basic Function

 ECU Information Display

TVM (Television Module)

- Basic Function

 ECU Information Display

SRM (Satellite Audio Unit Module)

- Basic Function

 ECU Information Display

XJ SERIES 2016 ~

PCM (Powertrain Control Module)

- Basic Function

 ECU Information Display

TCM (Transmission Control Module)

- Basic Function

 ECU Information Display

ABS (ABS Control Module)

- Basic Function

 ECU Information Display

RCM (Restraints Control Module)	ECU Information Display
- Basic Function	
ECU Information Display	
IPC (Instrument Cluster Control Module)	
- Basic Function	
ECU Information Display	
PBM (Parking Brake Control Module)	
- Basic Function	
ECU Information Display	
TPM (Tire Pressure Monitoring System)	
- Basic Function	
ECU Information Display	
BCM (Body Control Module)	
- Basic Function	
ECU Information Display	
CCM (Adaptive Speed Control Control Module)	
- Basic Function	
ECU Information Display	
GSM (Gear Shift Module)	
- Basic Function	
ECU Information Display	
GWM (Gateway Module)	
- Basic Function	
ECU Information Display	
HCM (Headlamp Control Module)	
- Basic Function	
ECU Information Display	
OCS (Restraints Occupancy System)	
- Basic Function	
ECU Information Display	
RDCM (Rear Differential Control Module)	
- Basic Function	
ECU Information Display	
TCCM (Transfer Case Control Module)	
- Basic Function	
ECU Information Display	
TCU (Telematic control unit module)	
- Basic Function	
ECU Information Display	
VIM (Vehicle Immobilizer Module)	
- Basic Function	
ECU Information Display	
CHCM (Chassis Control Module)	
- Basic Function	
ECU Information Display	
IPMA (Image Processing control Module A)	
- Basic Function	
ECU Information Display	
PAM (Parking Assist Control Module)	
- Basic Function	
ECU Information Display	
PSCM (Power steering control Module)	
- Basic Function	
ECU Information Display	
SASM (Steering angle sensor Module)	
- Basic Function	
ECU Information Display	
FCIMB (Front Controls Interface Module B)	
- Basic Function	
ECU Information Display	
HVAC (Heating Ventilation and Air Conditioning Control Module)	
- Basic Function	
ECU Information Display	
IMC (Incontrol Touch Pro Infotainment Master Controller)	
- Basic Function	
ECU Information Display	
IPMB (Image Processing Module B)	
- Basic Function	
ECU Information Display	
RHVAC (Rear Heating Ventilation and Air Conditioning Control Module)	
- Basic Function	
ECU Information Display	
SODL (Side Object Detection - Left)	
- Basic Function	
ECU Information Display	
SODR (Side Object Detection - Right)	
- Basic Function	
ECU Information Display	
DDM (Driver's Door Module)	
- Basic Function	
ECU Information Display	
DSM (Driver's Seat Module)	
- Basic Function	
ECU Information Display	
PDM (Passenger's Door Module)	
- Basic Function	
ECU Information Display	
PSM (Passenger's Seat Module)	
- Basic Function	
ECU Information Display	
KVM (Keyless Vehicle Module)	
- Basic Function	
ECU Information Display	
RGTM (Rear Gate/Trunk Module)	
- Basic Function	
ECU Information Display	
RLSM (Rear Left Seat Module)	
- Basic Function	
ECU Information Display	
RRSM (Rear Right Seat Module)	
- Basic Function	
ECU Information Display	
AAM (Incontrol Touch Pro Audio Amplifier Module)	
- Basic Function	
ECU Information Display	
ISC (Incontrol Touch Pro Infotainment Slave Controller)	
- Basic Function	

ECU Information Display

XK SERIES 2007 ~ 2009

PCM (Powertrain Control Module)

- Basic Function

ECU Information Display

TCM (Transmission Control Module)

- Basic Function

ECU Information Display

ABS (ABS Control Module)

- Basic Function

ECU Information Display

RCM (Restraints Control Module)

- Basic Function

ECU Information Display

VIM (Vehicle Immobilizer Module)

- Basic Function

ECU Information Display

KVM (Keyless Vehicle Module)

- Basic Function

ECU Information Display

BCM (Body Control Module)

- Basic Function

ECU Information Display

BCMB (Body Control Module B)

- Basic Function

ECU Information Display

IPC (Instrument Cluster Control Module)

- Basic Function

ECU Information Display

ICP (Integrated Control Panel)

- Basic Function

ECU Information Display

PBM (Parking Brake Control Module)

- Basic Function

ECU Information Display

PAM (Parking Assist Control Module)

- Basic Function

ECU Information Display

HCM (Headlamp Control Module)

- Basic Function

ECU Information Display

ADCM (Adaptive Damping Control Module)

- Basic Function

ECU Information Display

DDM (Driver's Door Module)

- Basic Function

ECU Information Display

PDM (Passenger's Door Module)

- Basic Function

ECU Information Display

DSM (Driver's Seat Module)

- Basic Function

ECU Information Display

PSM (Passenger's Seat Module)

- Basic Function

ECU Information Display

HVAC (Heating Ventilation and Air Conditioning Control Module)

- Basic Function

ECU Information Display

TPM (Tire Pressure Monitoring System)

- Basic Function

ECU Information Display

ICS (Impact Classification System)

- Basic Function

ECU Information Display

FTCM (Folding Top Control Module)

- Basic Function

ECU Information Display

CCM (Adaptive Speed Control Control Module)

- Basic Function

ECU Information Display

ICM (Infotainment Control Module)

- Basic Function

ECU Information Display

FLR (Forward Looking Radar)

- Basic Function

ECU Information Display

FCDIM (Front Control/Display Interface Module)

- Basic Function

ECU Information Display

ACM (Audio Front Control Module)

- Basic Function

ECU Information Display

AAM (Audio Amplifier Module)

- Basic Function

ECU Information Display

NCM (Navigation Control Module)

- Basic Function

ECU Information Display

SRM (Satellite Audio Unit Module)

- Basic Function

ECU Information Display

APIM (Accessory Protocol Interface Module)

- Basic Function

ECU Information Display

BPM (Body Processor Module)

- Basic Function

ECU Information Display

XK SERIES 2010 ~ 2015

PCM (Powertrain Control Module)

- Basic Function

ECU Information Display

TCM (Transmission Control Module)

- Basic Function

ECU Information Display

GSM (Gear Shift Module)

- Basic Function

ECU Information Display

ABS (ABS Control Module)

- Basic Function
 - ECU Information Display
- RCM (Restraints Control Module)
 - Basic Function
 - ECU Information Display
- OCS (Restraints Occupancy System)
 - Basic Function
 - ECU Information Display
- VIM (Vehicle Immobilizer Module)
 - Basic Function
 - ECU Information Display
- KVM (Keyless Vehicle Module)
 - Basic Function
 - ECU Information Display
- BCM (Body Control Module)
 - Basic Function
 - ECU Information Display
- BCMB (Body Control Module B)
 - Basic Function
 - ECU Information Display
- IPC (Instrument Cluster Control Module)
 - Basic Function
 - ECU Information Display
- ICP (Integrated Control Panel)
 - Basic Function
 - ECU Information Display
- PBM (Parking Brake Control Module)
 - Basic Function
 - ECU Information Display
- PAM (Parking Assist Control Module)
 - Basic Function
 - ECU Information Display
- HCM (Headlamp Control Module)
 - Basic Function
 - ECU Information Display
- ADCM (Adaptive Damping Control Module)
 - Basic Function
 - ECU Information Display
- RDCM (Rear Differential Control Module)
 - Basic Function
 - ECU Information Display
- DDM (Driver's Door Module)
 - Basic Function
 - ECU Information Display
- PDM (Passenger's Door Module)
 - Basic Function
 - ECU Information Display
- DSM (Driver's Seat Module)
 - Basic Function
 - ECU Information Display
- PSM (Passenger's Seat Module)
 - Basic Function
 - ECU Information Display
- DCSM (Driver's Seat Climate Control Module)
 - Basic Function
 - ECU Information Display
- HVAC (Heating Ventilation and Air Conditioning Control Module)
 - Basic Function
 - ECU Information Display
- TPM (Tire Pressure Monitoring System)
 - Basic Function
 - ECU Information Display
- ICS (Impact Classification System)
 - Basic Function
 - ECU Information Display
- FTCM (Folding Top Control Module)
 - Basic Function
 - ECU Information Display
- CCM (Adaptive Speed Control Control Module)
 - Basic Function
 - ECU Information Display
- ICM (Infotainment Control Module)
 - Basic Function
 - ECU Information Display
- FLR (Forward Looking Radar)
 - Basic Function
 - ECU Information Display
- FCDIM (Front Control/Display Interface Module)
 - Basic Function
 - ECU Information Display
- ACM (Audio Front Control Module)
 - Basic Function
 - ECU Information Display
- AAM (Audio Amplifier Module)
 - Basic Function
 - ECU Information Display
- DABM (Digital Audio Broadcast Module)
 - Basic Function
 - ECU Information Display
- DACMC (Digital Audio Control Module C)
 - Basic Function
 - ECU Information Display
- NCM (Navigation Control Module)
 - Basic Function
 - ECU Information Display
- TEL (Cellular Telephone Control Module)
 - Basic Function
 - ECU Information Display
- SRM (Satellite Audio Unit Module)
 - Basic Function
 - ECU Information Display
- APIM (Accessory Protocol Interface Module)
 - Basic Function
 - ECU Information Display
- XE 2016**
 - PCM (Powertrain Control Module)
 - Basic Function
 - ECU Information Display
 - TCM (Transmission Control Module)
 - Basic Function

- ECU Information Display
- ABS (ABS Control Module)
 - Basic Function
 - ECU Information Display
- RCM (Restraints Control Module)
 - Basic Function
 - ECU Information Display
- IPC (Instrument Cluster Control Module)
 - Basic Function
 - ECU Information Display
- TPM (Tire Pressure Monitoring System)
 - Basic Function
 - ECU Information Display
- BCM (Body Control Module)
 - Basic Function
 - ECU Information Display
- CCM (Adaptive Speed Control Control Module)
 - Basic Function
 - ECU Information Display
- GSM (Gear Shift Module)
 - Basic Function
 - ECU Information Display
- GWM (Gateway Module)
 - Basic Function
 - ECU Information Display
- OCS (Restraints Occupancy System)
 - Basic Function
 - ECU Information Display
- TCU (Telematic control unit module)
 - Basic Function
 - ECU Information Display
- VIM (Vehicle Immobilizer Module)
 - Basic Function
 - ECU Information Display
- ATCM (All Terrain Control Module)
 - Basic Function
 - ECU Information Display
- CHCM (Chassis Control Module)
 - Basic Function
 - ECU Information Display
- IPMA (Image Processing control Module A)
 - Basic Function
 - ECU Information Display
- PAM (Parking Assist Control Module)
 - Basic Function
 - ECU Information Display
- PSCM (Power steering control Module)
 - Basic Function
 - ECU Information Display
- SASM (Steering angle sensor Module)
 - Basic Function
 - ECU Information Display
- DDM (Driver's Door Module)
 - Basic Function
 - ECU Information Display
- DRDM (Driver's Rear Door Module)
- Basic Function
 - ECU Information Display
- DSM (Driver's Seat Module)
 - Basic Function
 - ECU Information Display
- PDM (Passenger's Door Module)
 - Basic Function
 - ECU Information Display
- PRDM (Passenger's Rear Door Module)
 - Basic Function
 - ECU Information Display
- KVM (Keyless Vehicle Module)
 - Basic Function
 - ECU Information Display
- RGTM (Rear Gate/Trunk Module)
 - Basic Function
 - ECU Information Display
- TBM (Deployable Towbar Control Module)
 - Basic Function
 - ECU Information Display
- AHU (Incontrol Touch Audio Head Unit)
 - Basic Function
 - ECU Information Display
- AUCM (Head-up Display Cooling Fan Module)
 - Basic Function
 - ECU Information Display
- CAV (Connect and View Module)
 - Basic Function
 - ECU Information Display
- FCDIM (Front Control/Display Interface Module)
 - Basic Function
 - ECU Information Display
- FCIM (Front Controls Interface Module)
 - Basic Function
 - ECU Information Display
- HUD (Head Up Display)
 - Basic Function
 - ECU Information Display
- HVAC (Heating Ventilation and Air Conditioning Control Module)
 - Basic Function
 - ECU Information Display
- IPMB (Image Processing Module B)
 - Basic Function
 - ECU Information Display
- NAV (Navigation Control Module)
 - Basic Function
 - ECU Information Display
- SODL (Side Object Detection - Left)
 - Basic Function
 - ECU Information Display
- SODR (Side Object Detection - Right)
 - Basic Function
 - ECU Information Display
- AAM (Audio Amplifier Module)
 - Basic Function
 - ECU Information Display

ECU Information Display
ACM (Audio Front Control Module)
- Basic Function
 ECU Information Display
DABM (Digital Audio Broadcast Module)
- Basic Function
 ECU Information Display
NCM (Navigation Control Module)
- Basic Function
 ECU Information Display
SRM (Satellite Audio Unit Module)
- Basic Function
 ECU Information Display
TVM (Television Module)
- Basic Function
 ECU Information Display

F-PACE 2017 ~

PCM (Powertrain Control Module)
- Basic Function
 ECU Information Display
ABS (ABS Control Module)
- Basic Function
 ECU Information Display
CCM (Adaptive Speed Control Control Module)
- Basic Function
 ECU Information Display
BCM (Body Control Module)
- Basic Function
 ECU Information Display
GSM (Gear Shift Module)
- Basic Function
 ECU Information Display
GWM (Gateway Module)
- Basic Function
 ECU Information Display
IPC (Instrument Cluster Control Module)
- Basic Function
 ECU Information Display
OCS (Restraints Occupancy System)
- Basic Function
 ECU Information Display
RCM (Restraints Control Module)
- Basic Function
 ECU Information Display
TCCM (Transfer Case Control Module)
- Basic Function
 ECU Information Display
TCM (Transmission Control Module)
- Basic Function
 ECU Information Display
TCU (Telematic control unit module)
- Basic Function
 ECU Information Display
TPM (Tire Pressure Monitoring System)
- Basic Function

ECU Information Display
VIM (Vehicle Immobilizer Module)
- Basic Function
 ECU Information Display
ATCM (All Terrain Control Module)
- Basic Function
 ECU Information Display
CHCM (Chassis Control Module)
- Basic Function
 ECU Information Display
PAM (Parking Assist Control Module)
- Basic Function
 ECU Information Display
PSCM (Power steering control Module)
- Basic Function
 ECU Information Display
SASM (Steering angle sensor Module)
- Basic Function
 ECU Information Display
AHU (Incontrol Touch Audio Head Unit)
- Basic Function
 ECU Information Display
AUCM (Head-up Display Cooling Fan Module)
- Basic Function
 ECU Information Display
FCIM (Front Controls Interface Module)
- Basic Function
 ECU Information Display
HVAC (Heating Ventilation and Air Conditioning Control Module)
- Basic Function
 ECU Information Display
HUD (Head Up Display)
- Basic Function
 ECU Information Display
IMC (Incontrol Touch Pro Infotainment Master Controller)
- Basic Function
 ECU Information Display
IPMA (Image Processing control Module A)
- Basic Function
 ECU Information Display
IPMB (Image Processing Module B)
- Basic Function
 ECU Information Display
RHVAC (Rear Heating Ventilation and Air Conditioning Control Module)
- Basic Function
 ECU Information Display
SODL (Side Object Detection - Left)
- Basic Function
 ECU Information Display
SODR (Side Object Detection - Right)
- Basic Function
 ECU Information Display
DDM (Driver's Door Module)
- Basic Function

ECU Information Display

DSM (Driver's Seat Module)

- Basic Function

ECU Information Display

DRDM (Driver's Rear Door Module)

- Basic Function

ECU Information Display

PRDM (Passenger's Rear Door Module)

- Basic Function

ECU Information Display

RGTM (Rear Gate/Trunk Module)

- Basic Function

ECU Information Display

KVM (Keyless Vehicle Module)

- Basic Function

ECU Information Display

PDM (Passenger's Door Module)

- Basic Function

ECU Information Display

DRDM (Driver's Rear Door Module)

- Basic Function

ECU Information Display

PSM (Passenger's Seat Module)

- Basic Function

ECU Information Display

TBM (Deployable Towbar Control Module)

- Basic Function

ECU Information Display

AAM (Incontrol Touch Pro Audio Amplifier Module)

- Basic Function

ECU Information Display

ISC (Incontrol Touch Pro Infotainment Slave Controller)

- Basic Function

ECU Information Display

RANGE ROVER 2014 ~ 2015

PBM (Parking Brake Control Module)

- Advanced Function

Parking Brake Pad Replacement - Release to Service Position

Parking Brake Pad Replacement - Exit Maintenance Mode Application

CHCM (Chassis Control Module)

- Advanced Function

Air-Suspension Inflation

Air-Suspension Deflation

Function Improved

NEW RANGE ROVER SPORT 2016 ~

PBM (Parking Brake Control Module)

- Basic Function

DTC analysis

NEW RANGE ROVER SPORT 2016 ~: Cyprus

PCM (Powertrain Control Module) – Diesel

- Basic Function

DTC analysis

BCM (Body Control Module)

- Basic Function

DTC analysis

Freelander 2 (LR2) 2011 ~ 2012

RCM (Restraints Control Module)

- Basic Function

DTC analysis

LANDROVER

New Function Added

RANGE ROVER SPORT 2006 ~ 2009

VDM (Vehicle dynamics module (ABS))

- Advanced Function

Brake Bleed (petrol)

RLM (Ride Level Control Module)

- Advanced Function

Air-Suspension Inflation

Air-Suspension Deflation

RANGE ROVER SPORT 2010 ~ 2011

RLM (Ride Level Control Module)

- Advanced Function

Air-Suspension Inflation

Air-Suspension Deflation

FORD USA

Explorer 3.5L EcoBoost - Gas Turbocharged Direct Injection Vehicle Added

- PCM (PowerTrain Control Module)

- ABS (Anti-Lock Brake System)

- ACM (Audio Control Module)

- APIM (Accessory Protocol Interface Module)

- ATCM (All Terrain Control Module)

- BCM (Body Control Module)

- C-CM (Cruise Control Module)

- DACM-C (Digital Audio Control Module C)

- DDM (Driver's Door Module)

- DSM (Driver's Seat Module)

- DSP (Digital Signal Processing Module)

- FCDIM (Front Control/Display Interface Module)

- FCIM-B (Front Controls Interface Module B)

- GFM (Generic Function Module)

- GPSM (Global Positioning System Module)
- GWM (Gateway Module A)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- HVAC (Heating Ventilation Air Conditioning)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RHVAC (Rear Heating Ventilation Air Conditioning)
- RTM (Radio Transceiver Module)
- SCCM (Steering Column Control Module)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)

Explorer 2.3L EcoBoost - Gas Turbocharged Direct Injection Vehicle Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- ATCM (All Terrain Control Module)
- BCM (Body Control Module)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCDIM (Front Control/Display Interface Module)
- FCIM-B (Front Controls Interface Module B)
- GFM (Generic Function Module)
- GPSM (Global Positioning System Module)
- GWM (Gateway Module A)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- HVAC (Heating Ventilation Air Conditioning)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RHVAC (Rear Heating Ventilation Air Conditioning)

- RTM (Radio Transceiver Module)
- SCCM (Steering Column Control Module)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)

E-Series 4.6L 2V 2010 ~ 2014 System Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- GEM/SJB (Generic Electronic Module/Smart Junction Box)
- GPSM (Global Positioning System Module)
- IPC (Instrument Panel Control Module)
- PAM (Parking Aid Module)
- RCM (Restraint Control Module)
- SDARS (Satellite Digital Audio Receiver System)
- TBC (Trailer Brake Control Module)
- TCM (Transmission Control Module)

E-Series 4.6L 2V ~ 2003 System Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ECS (Electronic Crash Sensor)

E-Series 5.4L 2V 2000 ~ System Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ECS (Electronic Crash Sensor)

F150 5.0L TiVCT System Added

- BCM (Body Control Module)

F150 4.2L 2V 2005 ~ 2008 Vehicle Added

- PCM (Powertrain Control Module)
- 4X4 (4x4 Control Module)
- ABS (Anti-Lock Brake System)
- DSM (Driver's Seat Module)
- EATC (Electronic Automatic Temperature Control)
- IC (Instrument Cluster)
- PAM (Parking Aid Module)
- RCM (Restraint Control Module)
- VSM (Vehicle Security Module)

F-Series Super Duty 5.4L 2V ~ 2004 Vehicle Added

- PCM (Powertrain Control Module)
- ABS (Anti-Lock Brake System)
- GEM (Generic Electronic Module)
- HEC (Hybrid Electrical Cluster)
- OTC (Overhead Trip Computer)
- PAM (Parking Aid Module)
- PATS (Passive Anti-Theft System)
- RCM (Restraint Control Module)

- VSM (Vehicle Security Module)

Fiesta 1.6L TiVCT 2015 Vehicle Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- BCM (Body Control Module)
- DDM (Driver's Door Module)
- FCDIM (Front Control/Display Interface Module)
- FCIM (Front Controls Interface Module)
- GPSM (Global Positioning System Module)
- HVAC (Heating Ventilation Air Conditioning)
- IPC (Instrument Panel Control Module)
- OCSM (Occupant Classification System Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RFA (Remote Function Actuator)
- TCM (Transmission Control Module)
- TCU (Telematic Control Unit Module)

FOCUS 2.0L EcoBoost - Gas Turbocharged Direct Injection 2013 ~ 2014 Vehicle Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio control module)
- APIM (Accessory Protocol Interface Module)
- BCM (Body Control Module)
- DDM (Driver's Door Module)
- DSP (Digital Signal Processing Module)
- FCDIM (Front Control/Display Interface Module)
- FCIM (Front Controls Interface Module)
- GPSM (Global Positioning System Module)
- HCM (Headlamp Control Module)
- HVAC (Heating Ventilation Air Conditioning)
- ICM (Information Center Module)
- IPC (Instrument Panel Control Module)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RFA (Remote Function Actuator)
- SASM (Steering Angle Sensor Module)

FUSION 2.0L EcoBoost - Gas Turbocharged Direct Injection 2013 ~ 2014 Vehicle Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACCM (Air Conditioning Control Module)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- BCM (Body Control Module)
- BECM (Battery Energy Control Module)
- BECM-B (Battery Energy Control Module B)
- C-CM (Cruise Control Module)

- DACM-C (Digital Audio Control Module C)
- DCDC (DC to DC Converter Control Module)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCDIM (Front Control/Display Interface Module)
- FCIM (Front Controls Interface Module)
- GPSM (Global Positioning System Module)
- GWM (Gateway Module A)
- GSM (Gear Shift Module)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RACM (Rear Audio Control Module)
- RCM (Restraint Control Module)
- RTM (Radio Transceiver Module)
- SCCM (Steering Column Control Module)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SOBDM-C (Secondary OBD Control Module C)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)
- TCU (Telematic Control Unit Module)
- TRCM (Transmission Range Control Module)
- VDM (Vehicle Dynamic Module)

Mustang 3.7L TiVCT 2015 ~ 2016 Vehicle Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- BCM (Body Control Module)
- BCM-B (Body Control Module B)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCDIM (Front Control/Display Interface Module)
- FCIM (Front Controls Interface Module)
- GPSM (Global Positioning System Module)
- GWM (Gateway Module A)
- HUD (Head Up Display)
- ICM (Information Center Module)
- IPC (Instrument Panel Control Module)
- MRCM-A (Movable Roof Control Module A)
- MRCM-B (Movable Roof Control Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)

- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RCM (Restraint Control Module)
- RTM (Radio Transceiver Module)
- SCCM (Steering Column Control Module)
- SCM-E (Seat Control Module E)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)

Continental 2.0L EcoBoost - Gas Turbocharged Direct Injection 2017 Vehicle Added

- PCM (Powertrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Control Module)
- AWD (All Wheel Drive Module)
- BCM (Body Control Module)
- BCM-B (Body Control Module B)
- BECM-B (Battery Energy Control Module B)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DCM-H (Door Control Module H)
- DCM-G (Door Control Module G)
- DCM-E (Door Control Module E)
- DCM-F (Door Control Module F)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCIM (Front Controls Interface Module)
- GFM (Generic Function Module)
- GWM (Gateway Module A)
- GSM (Gear Shift Module)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RACM (Rear Audio Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RHVAC (Rear Heating Ventilation Air Conditioning)
- RTM (Radio Transceiver Module)
- SASM (Steering Angle Sensor Module)
- SCCM (Steering Column Control Module)
- SCM-B (Seat Control Module B)
- SCM-C (Seat Control Module C)
- SCM-D (Seat Control Module D)
- SCM-F (Seat Control Module F)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)

- SECM (Steering Effort Control Module)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)
- TCU (Telematic Control Unit Module)
- TRCM (Transmission Range Control Module)
- VDM (Vehicle Dynamic Module)

Continental 2.7L EcoBoost - Gas Turbocharged Direct Injection 2017 Vehicle Added

- PCM (Powertrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Control Module)
- AWD (All Wheel Drive Module)
- BCM (Body Control Module)
- BCM-B (Body Control Module B)
- BECM-B (Battery Energy Control Module B)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DCM-H (Door Control Module H)
- DCM-G (Door Control Module G)
- DCM-E (Door Control Module E)
- DCM-F (Door Control Module F)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCIM (Front Controls Interface Module)
- GFM (Generic Function Module)
- GWM (Gateway Module A)
- GSM (Gear Shift Module)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RACM (Rear Audio Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RHVAC (Rear Heating Ventilation Air Conditioning)
- RTM (Radio Transceiver Module)
- SASM (Steering Angle Sensor Module)
- SCCM (Steering Column Control Module)
- SCM-B (Seat Control Module B)
- SCM-C (Seat Control Module C)
- SCM-D (Seat Control Module D)
- SCM-F (Seat Control Module F)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SECM (Steering Effort Control Module)
- SOD-L (Side Obstacle Detection Control Module Left)

- SOD-R (Side Obstacle Detection Control Module Right)
- TCU (Telematic Control Unit Module)
- TRCM (Transmission Range Control Module)
- VDM (Vehicle Dynamic Module)

Continental 3.0L EcoBoost - Gas Turbocharged Direct Injection 2017 Vehicle Added

- PCM (Powertrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Control Module)
- AWD (All Wheel Drive Module)
- BCM (Body Control Module)
- BCM-B (Body Control Module B)
- BECM-B (Battery Energy Control Module B)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DCM-H (Door Control Module H)
- DCM-G (Door Control Module G)
- DCM-E (Door Control Module E)
- DCM-F (Door Control Module F)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCIM (Front Controls Interface Module)
- GFM (Generic Function Module)
- GWM (Gateway Module A)
- GSM (Gear Shift Module)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RACM (Rear Audio Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RHVAC (Rear Heating Ventilation Air Conditioning)
- RTM (Radio Transceiver Module)
- SASM (Steering Angle Sensor Module)
- SCCM (Steering Column Control Module)
- SCM-B (Seat Control Module B)
- SCM-C (Seat Control Module C)
- SCM-D (Seat Control Module D)
- SCM-F (Seat Control Module F)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SECM (Steering Effort Control Module)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)
- TCU (Telematic Control Unit Module)

- TRCM (Transmission Range Control Module)
- VDM (Vehicle Dynamic Module)

Continental 3.7L 2017 Vehicle Added

- PCM (Powertrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Control Module)
- AWD (All Wheel Drive Module)
- BCM (Body Control Module)
- BCM-B (Body Control Module B)
- BECM-B (Battery Energy Control Module B)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DCM-H (Door Control Module H)
- DCM-G (Door Control Module G)
- DCM-E (Door Control Module E)
- DCM-F (Door Control Module F)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCIM (Front Controls Interface Module)
- GFM (Generic Function Module)
- GWM (Gateway Module A)
- GSM (Gear Shift Module)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RACM (Rear Audio Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RHVAC (Rear Heating Ventilation Air Conditioning)
- RTM (Radio Transceiver Module)
- SASM (Steering Angle Sensor Module)
- SCCM (Steering Column Control Module)
- SCM-B (Seat Control Module B)
- SCM-C (Seat Control Module C)
- SCM-D (Seat Control Module D)
- SCM-F (Seat Control Module F)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SECM (Steering Effort Control Module)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)
- TCU (Telematic Control Unit Module)
- TRCM (Transmission Range Control Module)
- VDM (Vehicle Dynamic Module)

MKX 2.0L 2016 Vehicle Added

- PCM (PowerTrain Control Module)
- ABS (Anti-Lock Brake System)
- ACM (Audio Control Module)
- APIM (Accessory Protocol Interface Module)
- BCM (Body Control Module)
- C-CM (Cruise Control Module)
- DACM-C (Digital Audio Control Module C)
- DDM (Driver's Door Module)
- DSM (Driver's Seat Module)
- DSP (Digital Signal Processing Module)
- FCIM (Front Controls Interface Module)
- GPSM (Global Positioning System Module)
- GWM (Gateway Module A)
- GSM (Gear Shift Module)
- HCM (Headlamp Control Module)
- HSWM (Heated Steering Wheel Module)
- HUD (Head Up Display)
- IPC (Instrument Panel Control Module)
- IPM-A (Image Processing Module A)
- IPM-B (Image Processing Module B)
- OCSM (Occupant Classification System Module)
- PAM (Parking Aid Module)
- PDM (Passenger's Door Module)
- PSCM (Power Steering Control Module)
- RACM (Rear Audio Control Module)
- RCM (Restraint Control Module)
- RGTM (Rear Gate/Trunk Module)
- RTM (Radio Transceiver Module)
- SASM (Steering Angle Sensor Module)
- SCCM (Steering Column Control Module)
- SCM-B (Seat Control Module B)
- SCM-E (Seat Control Module E)
- SCM-G (Seat Control Module G)
- SCM-H (Seat Control Module H)
- SECM (Steering Effort Control Module)
- SOD-L (Side Obstacle Detection Control Module Left)
- SOD-R (Side Obstacle Detection Control Module Right)
- TCU (Telematic Control Unit Module)
- TRCM (Transmission Range Control Module)
- TRM (Trailer Module)
- VDM (Vehicle Dynamic Module)

CHRYSLER/JEEP/DODGE**LIBERTY (2006~2007)****New System added**

CCN (Instrument Cluster / Cabin Compartment Node)

- Basic Function
- DTC Analysis
- ECU Info

ORC (Occupant Restraint Control)

- Basic Function
- DTC Analysis
- ECU Info
- Special Function
- Configure for Side Airbags
- Configure for OCS

GRAND CHEROKEE (2011~2016)**New System added**

ASCM (Air suspension Control Module)

- Basic Function
- DTC Analysis
- Data Analysis
- ECU Info

GRAND CHEROKEE (2000~2005)**New Type System added**

PCM (Power Control Module)

- Basic Function
- DTC Analysis
- Data Analysis
- Actuator Test
- ECU Info
- Special Function
- Injector Kill Test
- Reset Memory
- O2 Heater System Test
- Purge Vapors Test
- Leak Detection Pump Test
- Check VIN

LIBERTY (2000~2005)**New Type System added**

PCM (Power Control Module)

- Basic Function
- DTC Analysis
- Data Analysis
- Actuator Test
- ECU Info
- Special Function
- Injector Kill Test
- Reset Memory
- O2 Heater System Test
- Purge Vapors Test
- Leak Detection Pump Test
- Check VIN

WRANGLER (2000~2005)**New Type System added**

PCM (Power Control Module)

- Basic Function
- DTC Analysis
- Data Analysis
- Actuator Test
- ECU Info

- Special Function
 - Injector Kill Test
 - Reset Memory
 - O2 Heater System Test
 - Purge Vapors Test
 - Leak Detection Pump Test
 - Check VIN

DURANGO (2000~2005)**New Type System added**

PCM (Power Control Module)

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuator Test
 - ECU Info
- Special Function
 - Injector Kill Test
 - Reset Memory
 - O2 Heater System Test
 - Purge Vapors Test
 - Leak Detection Pump Test
 - Check VIN

GRAND CARAVAN (2000~2005)**New Type System added**

PCM (Power Control Module)

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuator Test
 - ECU Info
- Special Function
 - Injector Kill Test
 - Reset Memory
 - O2 Heater System Test
 - Purge Vapors Test
 - Leak Detection Pump Test
 - Check VIN

TOWN/COUNTRY (2000~2005)**New Type System added**

PCM (Power Control Module)

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuator Test
 - ECU Info
- Special Function
 - Injector Kill Test
 - Reset Memory
 - O2 Heater System Test
 - Purge Vapors Test
 - Leak Detection Pump Test
 - Check VIN

Feedback

IRAQ: 2012 300 ABS, SRS new type added

POLAND: 2011 Town&country BSM new type added

Saudi Arabic: 2012 Charger AMP new type added

USA: 2016 200 EPS Communication Error bug fixed

GM USA**New Model & System added****- Buick Passenger
C Product Line 2000~2003**

- Powertrain
 - (K)3.8L V6 L36 Without Air Pump ECM
 - (K)3.8L V6 L36 With Air Pump ECM
 - (1)3.8L V6 L67 Engine Control Module
 - Transmission Control Module

-Body

- Body Control Module
- Cellular Telephone
- Driver Door Module
- Heating and Air Conditioning
- Instrument Panel Cluster
- Memory Seat Module
- OnStar
- Remote Function Actuation
- Supplemental Inflatable Restraint
- Vehicle Theft Deterrent

H Product Line 2000~2003

- Powertrain
 - (K)3.8L V6 L36 Without Air Pump ECM
 - (K)3.8L V6 L36 With Air Pump ECM
 - (K)3.8L V6 L36 Transmission Control Module
 - (1)3.8L V6 L67 Engine Control Module
 - (1)3.8L V6 L67 Transmission Control Module

-Body

- CD Changer
- Climate Control Panel
- Dash Integration Module
- Digital Radio Receiver
- Driver Door Module
- Head Up Display
- Instrument Panel Cluster
- Memory Seat Module
- OnStar
- Radio
- Rear Integration Module
- Remote Function Actuation
- Supplemental Inflatable Restraint
- Vehicle Theft Deterrent

N Product Line 2003Więcej informacji pod numerem 601-817-201 oraz na www.gscan.com.pl

-Powertrain

(F)2.2L L4 L61 Engine Control Module
(F)2.2L L4 L61 Transmission Control Module
(J)3.1L V6 LG8 Engine Control Module
(J)3.1L V6 LG8 Transmission Control Module
(E)3.4L V6 LA1 Engine Control Module
(E)3.4L V6 LA1 Transmission Control Module

-Body

Body Control Module
Heating and Air Conditioning
Instrument Panel Cluster
OnStar
Supplemental Inflatable Restraint

W Product Line 2000~2003

-Powertrain
(J)3.1L V6 LG8 Without Air Pump ECM
(J)3.1L V6 LG8 With Air Pump ECM
(J)3.1L V6 LG8 Transmission Control Module
(E)3.4L V6 LA1 Without Air Pump ECM
(E)3.4L V6 LA1 With Air Pump ECM
(E)3.4L V6 LA1 Transmission Control Module
(K)3.8L V6 L36 Without Air Pump ECM
(K)3.8L V6 L36 With Air Pump ECM
(K)3.8L V6 L36 Transmission Control Module
(1)3.8L V6 L67 Engine Control Module
(1)3.8L V6 L67 Transmission Control Module

-Body

Body Control Module
Heating and Air Conditioning
Instrument Panel Cluster
OnStar
Supplemental Inflatable Restraint

- Buick LD Trk/MPV/Incomplete**A Product Line 2002~2003**

-Powertrain
(E)3.4L V6 LA1 Engine Control Module
(E)3.4L V6 LA1 Without All Wheel Drive TCM
(E)3.4L V6 LA1 With All Wheel Drive TCM

-Body

Body Control Module
Digital Radio Receiver
Head Up Display
Heating and Air Conditioning
Instrument Panel Cluster
Memory Seat Module
OnStar
Personalization
Radio
Rear Seat Entertainment
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

B Product Line 2002~2003

-Powertrain
(E)3.4L V6 LA1 Engine Control Module
(E)3.4L V6 LA1 Without All Wheel Drive TCM
(E)3.4L V6 LA1 With All Wheel Drive TCM

-Body

Body Control Module
Digital Radio Receiver
Head Up Display
Heating and Air Conditioning
Instrument Panel Cluster
Memory Seat Module
OnStar
Personalization
Radio
Rear Seat Entertainment
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

**- Cadillac Passenger
D Product Line 2003**

-Powertrain
(M)2.6L V6 LY9 Engine Control Module
(M)2.6L V6 LY9 Transmission Control Module
(N)3.2L V6 LA3 Engine Control Module
(N)3.2L V6 LA3 Transmission Control Module

-Chassis

DRP/ABS/TCS/VSES

-Body

Amplifier (Bose)
Amplifier (Delco)
Climate Control Panel
Dash Integration Module
Digital Radio Receiver
Driver Door Switch
Driver Door Module
Passenger Door Module
Left Rear Door Module
Right Rear Door Module
Lt. Headlamp Leveling Mod.
Rt. Headlamp Leveling Mod.
Instrument Panel Cluster
Memory Seat Module
OnStar
Personalization
Rear Integration Module
Remote Function Actuation
Supplemental Inflatable Restraint
TV Antenna Module
Vehicle Theft Deterrent

E Product Line 2000~2002

- Powertrain
 - (9)4.6L V8 L37 Engine Control Module
 - (9)4.6L V8 L37 Transmission Control Module
 - (Y)4.6L V8 LD8 Engine Control Module
 - (Y)4.6L V8 LD8 Transmission Control Module

- Body
- Body Control Module
- Cellular Telephone
- Climate Control Panel
- Heating and Air Conditioning
- Instrument Panel Cluster
- Memory Mirror Module
- Memory Seat Module
- OnStar
- Radio
- Remote Function Actuation
- Supplemental Inflatable Restraint

K Product Line 2000~2003

- Powertrain
 - (9)4.6L V8 L37 Engine Control Module
 - (9)4.6L V8 L37 Transmission Control Module
 - (Y)4.6L V8 LD8 Engine Control Module
 - (Y)4.6L V8 LD8 Transmission Control Module

- Chassis
- DRP/ABS/TCS/VSES
- Magna Steer
- Rear Integration Module
- Tire Pressure Monitor

- Body
- Amplifier (Delco)
- Cellular Telephone
- Dash Integration Module
- Driver Door Switch
- Driver Door Module
- Passenger Door Module
- Left Rear Door Module
- Right Rear Door Module
- Instrument Panel Cluster
- Instrument Panel Module
- Memory Seat Module
- Navigation Display Head
- Navigation Module
- Navigation Radio
- Radio
- Rear Climate Control Panel
- Rear Integration Module
- Remote Function Actuation
- Supplemental Inflatable Restraint
- Tilt Telescope Module
- Vehicle Theft Deterrent

Y Product Line 2003

Product -Powertrain

(G)5.7L V8 LS1 Engine Control Module
(G)5.7L V8 LS1 Transmission Control Module
(S)5.7L V8 LS6 Engine Control Module

-Chassis
RTD

- Body
- Body Control Module
- Heating and Air Conditioning
- Instrument Panel Cluster
- Left Door Control Module
- Radio
- Remote Function Actuation
- Right Door Control Module
- Seat Control Module
- Supplemental Inflatable Restraint

- Cadillac LD Trk/MPV/Incomplete

C Product Line 2002~2003
-Powertrain
(N)6.0L V8 LQ9 Engine Control Module
(N)6.0L V8 LQ9 Transmission Control Module

-Chassis
4WAL 3 Sensor Under 15000 GVW
RTD (Autoride)/ EVO
ABS
ESC (If Equipped)
Rear Wheel Steering
Traction Assist (If Equipped)
VSES (If Equipped)

- Body
- Body Control Module
- CD Changer
- Chime
- Digital Radio Receiver
- Driver Door Module
- Driver Seat Module
- Heating and Air Conditioning Auto
- Heating and Air Conditioning Manual
- Instrument Panel Cluster
- OnStar
- Passenger Door Module
- Passenger Presence System
- Base Radio
- Uplevel Radio
- Navigation Radio
- Rear Aux. Climate Module
- Rear HVAC
- Rear Seat Audio
- Rear Seat Entertainment
- Supplemental Inflatable Restraint

K Product Line 2000~2003

R Product -Powertrain

(R) 5.7L V8 L31 Under 8600 GVW Without Air Pump ECM
(R) 5.7L V8 L31 Under 8600 GVW With Air Pump ECM
(R) 5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R) 5.7L V8 L31 Under 8600 GVW TCM
(R) 5.7L V8 L31 Equal to or Over 8600 GVW TCM
(R) 5.7L V8 L31 ATC Control Module
(N)6.0L V8 LQ9 Engine Control Module
(N)6.0L V8 LQ9 Transmission Control Module

-Chassis
4WAL 3 Sensor
RTD (Autoride)/ EVO
ABS
ESC (If Equipped)
Rear Wheel Steering
VSES (If Equipped)

-Body
Body Control Module
CD Changer
Chime
Digital Radio Receiver
Driver Door Module
Driver Seat Module
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
OnStar
Passenger Door Module
Passenger Presence System
Base Radio
Uplevel Radio
Navigation Radio
Rear Aux. Climate Module
Rear HVAC
Rear Seat Audio
Rear Seat Entertainment
Supplemental Inflatable Restraint

**- Chevrolet Passenger
C Product Line 2003**

-Powertrain
(K)3.8L V6 L36 Engine Control Module
(K)3.8L V6 L36 Transmission Control Module

-Body
Body Control Module
Cellular Telephone
Driver Door Module
Heating and Air Conditioning
Instrument Panel Cluster
Memory Seat Module
OnStar
Remote Function Actuation
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

F Product Line 2000~2002

-Powertrain
(K)3.8L V6 L36 Engine Control Module
(K)3.8L V6 L36 Transmission Control Module
(G)5.7L V8 LS1 Engine Control Module
(G)5.7L V8 LS1 Transmission Control Module

-Chassis
Anti-lock Brake System

-Body
Instrument Panel Cluster
Supplemental Inflatable Restraint

H Product Line 2003

-Powertrain
(K)3.8L V6 L36 Engine Control Module
(K)3.8L V6 L36 Transmission Control Module

-Body
Body Control Module
Cellular Telephone
Driver Door Module
Heating and Air Conditioning
Instrument Panel Cluster
Memory Seat Module
OnStar
Remote Function Actuation
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

J Product Line 2000~2003

-Powertrain
(7)1.4L L4 L95 Engine Control Module
(6)1.6L L4 L91 Engine Control Module
(3)1.8L L4 L79 Engine Control Module
(8)1.8L L4 L79 Engine Control Module
(Z)2.0L L4 L34 Engine Control Module
(6)2.2L L4 L42 Alternative Fuel AFEPCM
(6)2.2L L4 L42 Alternative Fuel TCM
(F)2.2L L4 L61 Engine Control Module
(F)2.2L L4 L61 Transmission Control Module
(4)2.2L L4 LN2 Engine Control Module
(4)2.2L L4 LN2 Transmission Control Module
(T)2.4L L4 LD9 Engine Control Module
(T)2.4L L4 LD9 Transmission Control Module
(T)2.4L L4 LD9 Supercharged Engine Control Module
(T)2.4L L4 LD9 Supercharged Transmission Control Module
MFA 4 Speed Automatic
MLS 4 Speed Automatic

-Chassis
Anti-lock Brake System

-Body

Body Control Module
Instrument Panel Cluster
OnStar
Radio
Supplemental Inflatable Restraint
Immobilizer
Remote Function Actuation

L Product Line 2003

-Powertrain
(Z)2.0L L4 L34 Engine Control Module
(Z)2.0L L4 L34 (MFA) 4 Speed Automatic
(Z)2.0L L4 L34 (MLS) 4 Speed Automatic
(L)2.5L L6 LBK Engine Control Module
(L)2.5L L6 LBK Transmission Control Module

-Chassis
Anti-lock Brake System Traction Control Yes
Anti-lock Brake System Traction Control No
-Body
ISU
Supplemental Inflatable Restraint

M Product Line 2003

-Powertrain
(4)0.8L L3 LBF Engine Control Module
(4)0.8L L3 LBF Transmission Control Module
(0)1.0L L4 LA2 Engine Control Module
(J)1.0L L4 LA2 Engine Control Module

-Chassis
Anti-lock Brake System
-Body
Immobilizer
Remote Function Actuation

N Product Line 2000~2003

-Powertrain
(7)1.4L L4 L95 Engine Control Module
(6)1.6L L4 L91 Engine Control Module
(3)1.8L L4 L79 Engine Control Module
(8)1.8L L4 L79 Engine Control Module
(Z)2.0L L4 L34 Engine Control Module
(T)2.4L L4 LD9 Engine Control Module
(T)2.4L L4 LD9 Transmission Control Module
(T)2.4L L4 LD9 Supercharged Engine Control Module
(T)2.4L L4 LD9 Supercharged Transmission Control Module
(J)3.1L V6 LG8 Without Air Pump ECM
(J)3.1L V6 LG8 With Air Pump ECM
(J)3.1L V6 LG8 Transmission Control Module
(E)3.4L V6 LA1 Without Air Pump ECM
(E)3.4L V6 LA1 With Air Pump ECM
(E)3.4L V6 LA1 Transmission Control Module
MFA 4 Speed Automatic

MLS 4 Speed Automatic
-Chassis
Anti-lock Brake System
-Body
Body Control Module
Instrument Panel Cluster
Radio
Supplemental Inflatable Restraint
Vehicle Theft Deterrent
Immobilizer
Remote Function Actuation

S Product Line 2001~2003

-Powertrain
(T)1.2L L4 LY4 Engine Control Module
(7)1.4L L4 L95 Engine Control Module
(A)1.4L L4 LBJ Engine Control Module
(Y)1.5L L4 LV8 Engine Control Module
(6)1.6L L4 L91 Engine Control Module
Transmission Control Module

-Body
Immobilizer
Remote Function Actuation

T Product Line 2003

-Powertrain
(T)1.2L L4 LY4 Engine Control Module
(7)1.4L L4 L95 Engine Control Module
(A)1.4L L4 LBJ Engine Control Module
(Y)1.5L L4 LV8 Engine Control Module
(6)1.6L L4 L91 Engine Control Module
Transmission Control Module

-Chassis
Anti-lock Brake System

-Body
Immobilizer
Remote Function Actuation

U Product Line 2003

-Powertrain
(6)1.6L L4 L91 Engine Control Module
(U)1.6L L4 L91 Engine Control Module
(Z)2.0L L4 L34 Engine Control Module
MFA 4 Speed Automatic
MLS 4 Speed Automatic

-Chassis
Anti-lock Brake System

-Body
Immobilizer

Remote Function Actuation**V Product Line 2003****-Powertrain**

(Z)2.0L L4 L34 Engine Control Module
(Z)2.0L L4 L34 (MFA) 4 Speed Automatic
(Z)2.0L L4 L34 (MLS) 4 Speed Automatic
(L)2.5L L6 LBK Engine Control Module
(L)2.5L L6 LBK Transmission Control Module

-Chassis

Anti-lock Brake System Traction Control Yes
Anti-lock Brake System Traction Control No

-Body

ISU
Supplemental Inflatable Restraint

W Product Line 2000~2003**-Powertrain**

(J)3.1L V6 LG8 Without Air Pump ECM
(J)3.1L V6 LG8 With Air Pump ECM
(J)3.1L V6 LG8 Transmission Control Module
(E)3.4L V6 LA1 Without Air Pump ECM
(E)3.4L V6 LA1 With Air Pump ECM
(E)3.4L V6 LA1 Transmission Control Module
(K)3.8L V6 L36 Without Air Pump ECM
(K)3.8L V6 L36 With Air Pump ECM
(K)3.8L V6 L36 Transmission Control Module
(1)3.8L V6 L67 Engine Control Module
(1)3.8L V6 L67 Transmission Control Module

-Body

Body Control Module
Digital Radio Receiver
Driver Information Center
Instrument Panel Cluster
OnStar
Personalization
Radio
Supplemental Inflatable Restraint

Y Product Line 2000~2003**-Powertrain**

(G)5.7L V8 LS1 Engine Control Module
(G)5.7L V8 LS1 Transmission Control Module
(S)5.7L V8 LS6 Engine Control Module

-Chassis

RTD

-Body

Body Control Module
Heating and Air Conditioning
Instrument Panel Cluster
Left Door Control Module
Radio

Remote Function Actuation**Right Door Control Module****Seat Control Module****Supplemental Inflatable Restraint****- Chevrolet LD Trk/MPV/Incomplete****C Product Line 2000~2003****-Powertrain**

(R)5.7L V8 L31 Alternative Fuels Bi-Fuel PCM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel AFECM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel TCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG PCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG AFECM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG TCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG PCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG AFECM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG TCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel PCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel AFECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel TCM
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module
(X)4.3L V6 LU3 Under 8600 GVW ECM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW ECM
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module

(V)4.8L V8 LR4 Without Throttle-actuated Control ECM
(V)4.8L V8 LR4 With Throttle-actuated Control ECM
(V)4.8L V8 LR4 Without Throttle-actuated Control TCM
(V)4.8L V8 LR4 With Throttle-actuated Control TCM
(V)4.8L V8 LR4 ATC Control Module

(Z)5.3L V8 L59 Without Throttle-actuated ECM
(Z)5.3L V8 L59 With Throttle-actuated ECM
(Z)5.3L V8 L59 Without Throttle-actuated Control TCM
(Z)5.3L V8 L59 With Throttle-actuated Control TCM
(Z)5.3L V8 L59 ATC Control Module

(T)5.3L V8 LM7 Without Throttle-actuated ECM
(T)5.3L V8 LM7 With Throttle-actuated ECM
(T)5.3L V8 LM7 Without Throttle-actuated Control TCM
(T)5.3L V8 LM7 With Throttle-actuated Control TCM
(T)5.3L V8 LM7 ATC Control Module

(R)5.7L V8 L31 Under 8600 GVW ECM
(R)5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R)5.7L V8 L31 Under 8600 GVW TCM
(R)5.7L V8 L31 Equal to or Over 8600 GVW TCM

(N)6.0L V8 LQ9 Engine Control Module
(N)6.0L V8 LQ9 Transmission Control Module
(U)6.0L V8 LQ4 Without Throttle-actuated ECM
(U)6.0L V8 LQ4 With Throttle-actuated ECM
(U)6.0L V8 LQ4 Without Throttle-actuated TCM
(U)6.0L V8 LQ4 With Throttle-actuated TCM

(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module 263 NVG
(1)6.6L V8 LB7 Diesel California Emissions ECM
(1)6.6L V8 LB7 Diesel Federal Emissions ECM
(1)6.6L V8 LB7 Transmission Control Module
(1)6.6L V8 LB7 ATC Control Module
(G)8.1L V8 L18 Engine Control Module
(G)8.1L V8 L18 Transmission Control Module 4 Speed
(G)8.1L V8 L18 Transmission Control Module 5 Speed
(G)8.1L V8 L18 ATC Control Module 2 Speed Active
(G)8.1L V8 L18 ATC Control Module 263 NVG

-Chassis
4WAL 3 Sensor
RTD (Autoride)/ EVO
ABS
ESC (If Equipped)
Rear Wheel Steering
Traction Assist (If Equipped)
VSES (If Equipped)

-Body
Body Control Module
CD Changer
Chime
Digital Radio Receiver
Driver Door Module
Driver Seat Module
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
OnStar
Passenger Door Module
Passenger Presence System
Radio Base
Radio Uplevel
Radio Navigation
Rear Aux. Climate Module
Rear HVAC
Rear Seat Audio
Rear Seat Entertainment
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

E Product Line 2000~2003

-Powertrain
(C) 2.0L L4 L34 Engine Control Module
(4) 2.2L L4 LN2 Engine Control Module
(4) 2.2L L4 LN2 Transmission Control Module

-Chassis
Electronic Brake Control Module
4WAL 3 Sensor
Auto Disconnect

-Body

Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

G Product Line 2000~2003

-Powertrain
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel PCM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel AFECM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel TCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG PCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG AFECM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG TCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG PCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG AFECM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG TCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel PCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel AFECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel TCM
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module
(X)4.3L V6 LU3 Under 8600 GVW ECM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW ECM
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module
(V)4.8L V8 LR4 Without Throttle-actuated Control ECM
(V)4.8L V8 LR4 With Throttle-actuated Control ECM
(V)4.8L V8 LR4 Without Throttle-actuated Control TCM
(V)4.8L V8 LR4 With Throttle-actuated Control TCM
(V)4.8L V8 LR4 ATC Control Module
(T)5.3L V8 LM7 Without Throttle-actuated ECM
(T)5.3L V8 LM7 With Throttle-actuated ECM
(T)5.3L V8 LM7 Without Throttle-actuated Control TCM
(T)5.3L V8 LM7 With Throttle-actuated Control TCM
(T)5.3L V8 LM7 ATC Control Module
(R)5.7L V8 L31 Under 8600 GVW ECM
(R)5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R)5.7L V8 L31 Under 8600 GVW TCM
(R)5.7L V8 L31 Equal to or Over 8600 GVW TCM
(U)6.0L V8 LQ4 Without Throttle-actuated ECM
(U)6.0L V8 LQ4 With Throttle-actuated ECM
(U)6.0L V8 LQ4 Without Throttle-actuated TCM
(U)6.0L V8 LQ4 With Throttle-actuated TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module 263 NVG

-Chassis
ABS

-Body
Body Control Module
Instrument Panel Cluster

Multifunction Alarm Module

OnStar

Radio

Remote Function Actuation

Supplemental Inflatable Restraint

Immobilizer

Passlock

H Product Line 2003

-Powertrain

(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG ECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel ECM
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Transmission Control Module
(V)4.8L V8 LR4 Under 8600 GVW ECM
(V)4.8L V8 LR4 Equal to or Over 8600 GVW ECM
(V)4.8L V8 LR4 Under 8600 GVW TCM
(V)4.8L V8 LR4 Equal to or Over 8600 GVW TCM
(V)4.8L V8 LR4 ATC Control Module 2 Speed Active
(T)5.3L V8 LM7 Without Throttle-Actuated ECM
(T)5.3L V8 LM7 With Throttle-Actuated ECM
(T)5.3L V8 LM7 Under 8600 GVW TCM
(T)5.3L V8 LM7 Equal to or Over 8600 GVW TCM
(T)5.3L V8 LM7 ATC Control Module 2 Speed Active
(T)5.3L V8 LM7 ATC Control Module BorgWarner
(U)6.0L V8 LQ4 Without Throttle-Actuated ECM
(U)6.0L V8 LQ4 With Throttle-Actuated ECM
(U)6.0L V8 LQ4 Under 8600 GVW TCM
(U)6.0L V8 LQ4 Equal to or Over 8600 GVW TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module BorgWarner
(U)6.0L V8 LQ4 ATC Control Module 263 NVG

-Chassis

ABS

-Body

Body Control Module

Instrument Panel Cluster

Multifunction Alarm Module

OnStar

Radio

Remote Function Actuation

Supplemental Inflatable Restraint

J Product Line 2000~2003

-Powertrain

(C)2.0L L4 L34 With TZ2 Engine Control Module
(C)2.0L L4 L34 Without TZ2 Engine Control Module
(4)2.5L V6 LE8 Engine Control Module
(4)2.2L L4 LN2 Engine Control Module
(4)2.2L L4 LN2 Transmission Control Module

-Chassis

Electronic Brake Control Module

K Product Line 2000~2003

-Powertrain

(R)5.7L V8 L31 Alternative Fuels Bi-Fuel PCM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel AFECM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel TCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG PCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG AFECM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG TCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG PCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG AFECM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG TCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel PCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel AFECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel TCM
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module
(X)4.3L V6 LU3 Under 8600 GVW ECM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW ECM
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module
(V)4.8L V8 LR4 Without Throttle-actuated Control ECM
(V)4.8L V8 LR4 With Throttle-actuated Control ECM
(V)4.8L V8 LR4 Without Throttle-actuated Control TCM
(V)4.8L V8 LR4 With Throttle-actuated Control TCM
(V)4.8L V8 LR4 ATC Control Module
(Z)5.3L V8 L59 Without Throttle-actuated ECM
(Z)5.3L V8 L59 With Throttle-actuated ECM
(Z)5.3L V8 L59 Without Throttle-actuated Control TCM
(Z)5.3L V8 L59 With Throttle-actuated Control TCM
(Z)5.3L V8 L59 ATC Control Module
(T)5.3L V8 LM7 Without Throttle-actuated ECM
(T)5.3L V8 LM7 With Throttle-actuated ECM
(T)5.3L V8 LM7 Without Throttle-actuated Control TCM
(T)5.3L V8 LM7 With Throttle-actuated Control TCM
(T)5.3L V8 LM7 ATC Control Module
(R)5.7L V8 L31 Under 8600 GVW ECM
(R)5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R)5.7L V8 L31 Under 8600 GVW TCM
(R)5.7L V8 L31 Equal to or Over 8600 GVW TCM
(N)6.0L V8 LQ9 Engine Control Module
(N)6.0L V8 LQ9 Transmission Control Module
(U)6.0L V8 LQ4 Without Throttle-actuated ECM
(U)6.0L V8 LQ4 With Throttle-actuated ECM
(U)6.0L V8 LQ4 Without Throttle-actuated TCM
(U)6.0L V8 LQ4 With Throttle-actuated TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module 263 NVG
(1)6.6L V8 LB7 Diesel California Emissions ECM
(1)6.6L V8 LB7 Diesel Federal Emissions ECM
(1)6.6L V8 LB7 Transmission Control Module
(1)6.6L V8 LB7 ATC Control Module

(G)8.1L V8 L18 Engine Control Module
(G)8.1L V8 L18 Transmission Control Module 4 Speed
(G)8.1L V8 L18 Transmission Control Module 5 Speed
(G)8.1L V8 L18 ATC Control Module 2 Speed Active
(G)8.1L V8 L18 ATC Control Module 263 NVG

-Chassis
4WAL 3 Sensor
RTD (Autoride)/ EVO
ABS
ESC (If Equipped)
Rear Wheel Steering
Traction Assist (If Equipped)
VSES (If Equipped)

-Body
Body Control Module
CD Changer
Chime
Digital Radio Receiver
Driver Door Module
Driver Seat Module
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
OnStar
Passenger Door Module
Passenger Presence System
Radio Base
Radio Uplevel
Radio Navigation
Rear Aux. Climate Module
Rear HVAC
Rear Seat Audio
Rear Seat Entertainment
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

L Product Line 2000~2003

-Powertrain
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active

-Chassis
4WAL 3 Sensor

-Body

Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

M Product Line 2000~2003

-Powertrain
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active

-Chassis
4WAL 3 Sensor

-Body
Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

S Product Line 2000~2003

-Powertrain
(4)2.2L L4 LN2 Engine Control Module
(4)2.2L L4 LN2 Transmission Control Module
(5)2.2L L4 L43 Engine Control Module
(5)2.2L L4 L43 Transmission Control Module
(H)2.2L L4 LN2 Engine Control Module
(H)2.2L L4 LN2 Transmission Control Module
(P)5.3L V8 LM4 ATC Control Module
(P)5.3L V8 LM4 Engine Control Module
(P)5.3L V8 LM4 Transmission Control Module
(S)4.2L L6 LL8 ATC Control Module 1 Speed Active
(S)4.2L L6 LL8 ATC Control Module 2 Speed Active
(S)4.2L L6 LL8 Engine Control Module
(S)4.2L L6 LL8 Transmission Control Module
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 Transmission Control Module
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 With Air Pump ECM
(W)4.3L V6 L35 Without Air Pump ECM
(X)4.3L V6 LF6 Transmission Control Module
(X)4.3L V6 LF6 With Air Pump ECM
(X)4.3L V6 LF6 Without Air Pump ECM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module

(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 Transmission Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM

-Chassis
4WAL 3 Sensor
Traction Assist (If Equipped)

-Body
Amplifier (Bose)
Body Control Module
Driver Door Module
Driver Seat Module
Heating and Air Conditioning
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
Lift Gate Module
Memory Seat Module
OnStar
Passenger Door Module
Passenger Seat Module
Radio
Rear HVAC/RSA
Rear Seat Audio
Remote Function Actuation
Roof and Door Module
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

T Product Line 2000~2003

-Powertrain
(4)2.2L L4 LN2 Engine Control Module
(4)2.2L L4 LN2 Transmission Control Module
(5)2.2L L4 L43 Engine Control Module
(5)2.2L L4 L43 Transmission Control Module
(H)2.2L L4 LN2 Engine Control Module
(H)2.2L L4 LN2 Transmission Control Module
(P)5.3L V8 LM4 ATC Control Module
(P)5.3L V8 LM4 Engine Control Module
(P)5.3L V8 LM4 Transmission Control Module
(S)4.2L L6 LL8 ATC Control Module 1 Speed Active
(S)4.2L L6 LL8 ATC Control Module 2 Speed Active
(S)4.2L L6 LL8 Engine Control Module
(S)4.2L L6 LL8 Transmission Control Module
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 Transmission Control Module
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 With Air Pump ECM
(W)4.3L V6 L35 Without Air Pump ECM
(X)4.3L V6 LF6 Transmission Control Module
(X)4.3L V6 LF6 With Air Pump ECM

(X)4.3L V6 LF6 Without Air Pump ECM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 Transmission Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM

-Chassis
4WAL 3 Sensor
Traction Assist (If Equipped)

-Body
Amplifier (Bose)
Body Control Module
Driver Door Module
Driver Seat Module
Heating and Air Conditioning
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
Lift Gate Module
Memory Seat Module
OnStar
Passenger Door Module
Passenger Seat Module
Radio
Rear HVAC/RSA
Rear Seat Audio
Remote Function Actuation
Roof and Door Module
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

**- GMC LD Trk/MPV/Incomplete
C Product Line 2000~2003**

-Powertrain
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel PCM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel AFECM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel TCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG PCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG AFECM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG TCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG PCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG AFECM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG TCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel PCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel AFECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel TCM
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module
(X)4.3L V6 LU3 Under 8600 GVW ECM

(X)4.3L V6 LU3 Equal to or Over 8600 GVW ECM
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module
(V)4.8L V8 LR4 Without Throttle-actuated Control ECM
(V)4.8L V8 LR4 With Throttle-actuated Control ECM
(V)4.8L V8 LR4 Without Throttle-actuated Control TCM
(V)4.8L V8 LR4 With Throttle-actuated Control TCM
(V)4.8L V8 LR4 ATC Control Module
(Z)5.3L V8 L59 Without Throttle-Actuated ECM
(Z)5.3L V8 L59 With Throttle-Actuated ECM
(Z)5.3L V8 L59 Without Throttle-actuated Control TCM
(Z)5.3L V8 L59 With Throttle-actuated Control TCM
(Z)5.3L V8 L59 ATC Control Module
(T)5.3L V8 LM7 Without Throttle-Actuated ECM
(T)5.3L V8 LM7 With Throttle-Actuated ECM
(T)5.3L V8 LM7 Without Throttle-actuated Control TCM
(T)5.3L V8 LM7 With Throttle-actuated Control TCM
(T)5.3L V8 LM7 ATC Control Module
(R)5.7L V8 L31 Under 8600 GVW ECM
(R)5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R)5.7L V8 L31 Under 8600 GVW TCM
(R)5.7L V8 L31 Equal to or Over 8600 GVW TCM
(N)6.0L V8 LQ9 Engine Control Module
(N)6.0L V8 LQ9 Transmission Control Module
(U)6.0L V8 LQ4 Without Throttle-Actuated ECM
(U)6.0L V8 LQ4 With Throttle-Actuated ECM
(U)6.0L V8 LQ4 Without Throttle-Actuated TCM
(U)6.0L V8 LQ4 With Throttle-Actuated TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module 263 NVG
(1)6.6L V8 LB7 Diesel California Emissions ECM
(1)6.6L V8 LB7 Diesel Federal Emissions ECM
(1)6.6L V8 LB7 Transmission Control Module
(1)6.6L V8 LB7 ATC Control Module
(G)8.1L V8 L18 Engine Control Module
(G)8.1L V8 L18 Transmission Control Module 4 Speed
(G)8.1L V8 L18 Transmission Control Module 5 Speed
(G)8.1L V8 L18 ATC Control Module 2 Speed Active
(G)8.1L V8 L18 ATC Control Module 263 NVG

-Chassis
4WAL 3 Sensor
RTD (Autoride)/ EVO
ABS
ESC (If Equipped)
Rear Wheel Steering
Traction Assist (If Equipped)
VSES (If Equipped)

-Body
Body Control Module
CD Changer
Chime
Digital Radio Receiver
Driver Door Module

Driver Seat Module
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
OnStar
Passenger Door Module
Passenger Presence System
Radio Base
Radio Uplevel
Radio Navigation
Rear Aux. Climate Module
Rear HVAC
Rear Seat Audio
Rear Seat Entertainment
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

E Product Line 2000~2003

-Powertrain
(C) 2.0L L4 L34 Engine Control Module
(4) 2.2L L4 LN2 Engine Control Module
(4) 2.2L L4 LN2 Transmission Control Module

-Chassis
Electronic Brake Control Module
4WAL 3 Sensor
Auto Disconnect

-Body
Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

G Product Line 2000~2003

-Powertrain
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel PCM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel AFECM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel TCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG PCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG AFECM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG TCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG PCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG AFECM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG TCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel PCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel AFECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel TCM
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module
(X)4.3L V6 LU3 Under 8600 GVW ECM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW ECM
(X)4.3L V6 LU3 Under 8600 GVW TCM

(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module
(V)4.8L V8 LR4 Without Throttle-actuated Control ECM
(V)4.8L V8 LR4 With Throttle-actuated Control ECM
(V)4.8L V8 LR4 Without Throttle-actuated Control TCM
(V)4.8L V8 LR4 With Throttle-actuated Control TCM
(V)4.8L V8 LR4 ATC Control Module
(T)5.3L V8 LM7 Without Throttle-Actuated ECM
(T)5.3L V8 LM7 With Throttle-Actuated ECM
(T)5.3L V8 LM7 Without Throttle-actuated Control TCM
(T)5.3L V8 LM7 With Throttle-actuated Control TCM
(T)5.3L V8 LM7 ATC Control Module
(R)5.7L V8 L31 Under 8600 GVW ECM
(R)5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R)5.7L V8 L31 Under 8600 GVW TCM
(R)5.7L V8 L31 Equal to or Over 8600 GVW TCM
(U)6.0L V8 LQ4 Without Throttle-Actuated ECM
(U)6.0L V8 LQ4 With Throttle-Actuated ECM
(U)6.0L V8 LQ4 Without Throttle-Actuated TCM
(U)6.0L V8 LQ4 With Throttle-Actuated TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module 263 NVG

-Chassis
ABS

-Body
Body Control Module
Instrument Panel Cluster
Multifunction Alarm Module
OnStar
Radio
Remote Function Actuation
Supplemental Inflatable Restraint
Immobilizer
Passlock

H Product Line 2003

-Powertrain
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG ECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel ECM
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Transmission Control Module
(V)4.8L V8 LR4 Under 8600 GVW ECM
(V)4.8L V8 LR4 Equal to or Over 8600 GVW ECM
(V)4.8L V8 LR4 Under 8600 GVW TCM
(V)4.8L V8 LR4 Equal to or Over 8600 GVW TCM
(V)4.8L V8 LR4 ATC Control Module 2 Speed Active
(T)5.3L V8 LM7 Without Throttle-Actuated ECM
(T)5.3L V8 LM7 With Throttle-Actuated ECM
(T)5.3L V8 LM7 Under 8600 GVW TCM
(T)5.3L V8 LM7 Equal to or Over 8600 GVW TCM
(T)5.3L V8 LM7 ATC Control Module 2 Speed Active
(T)5.3L V8 LM7 ATC Control Module BorgWarner
(U)6.0L V8 LQ4 Without Throttle-Actuated ECM
(U)6.0L V8 LQ4 With Throttle-Actuated ECM

(U)6.0L V8 LQ4 Under 8600 GVW TCM
(U)6.0L V8 LQ4 Equal to or Over 8600 GVW TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module BorgWarner
(U)6.0L V8 LQ4 ATC Control Module 263 NVG

-Chassis
ABS

-Body
Body Control Module
Instrument Panel Cluster
Multifunction Alarm Module
OnStar
Radio
Remote Function Actuation
Supplemental Inflatable Restraint

J Product Line 2000~2003

-Powertrain
(C)2.0L L4 L34 With TZ2 Engine Control Module
(C)2.0L L4 L34 Without TZ2 Engine Control Module
(4)2.5L V6 LE8 Engine Control Module
(4) 2.2L L4 LN2 Engine Control Module
(4) 2.2L L4 LN2 Transmission Control Module

-Chassis
Electronic Brake Control Module

K Product Line 2000~2003

-Powertrain
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel PCM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel AFECM
(R)5.7L V8 L31 Alternative Fuels Bi-Fuel TCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG PCM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG AFECM
(R)5.7L V8 L31 Alternative Fuels Dedicated LPG TCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG PCM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG AFECM
(U)6.0L V8 LQ4 Alternative Fuels Dedicated CNG TCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel PCM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel AFECM
(U)6.0L V8 LQ4 Alternative Fuels Bi-Fuel TCM
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module
(X)4.3L V6 LU3 Under 8600 GVW ECM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW ECM
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module
(V)4.8L V8 LR4 Without Throttle-actuated Control ECM
(V)4.8L V8 LR4 With Throttle-actuated Control ECM

(V)4.8L V8 LR4 Without Throttle-actuated Control TCM
(V)4.8L V8 LR4 With Throttle-actuated Control TCM
(V)4.8L V8 LR4 ATC Control Module
(Z)5.3L V8 L59 Without Throttle-actuated ECM
(Z)5.3L V8 L59 With Throttle-actuated ECM
(Z)5.3L V8 L59 Without Throttle-actuated Control TCM
(Z)5.3L V8 L59 With Throttle-actuated Control TCM
(Z)5.3L V8 L59 ATC Control Module
(T)5.3L V8 LM7 Without Throttle-actuated ECM
(T)5.3L V8 LM7 With Throttle-actuated ECM
(T)5.3L V8 LM7 Without Throttle-actuated Control TCM
(T)5.3L V8 LM7 With Throttle-actuated Control TCM
(T)5.3L V8 LM7 ATC Control Module
(R)5.7L V8 L31 Under 8600 GVW ECM
(R)5.7L V8 L31 Equal to or Over 8600 GVW ECM
(R)5.7L V8 L31 Under 8600 GVW TCM
(R)5.7L V8 L31 Equal to or Over 8600 GVW TCM
(N)6.0L V8 LQ9 Engine Control Module
(N)6.0L V8 LQ9 Transmission Control Module
(U)6.0L V8 LQ4 Without Throttle-actuated ECM
(U)6.0L V8 LQ4 With Throttle-actuated ECM
(U)6.0L V8 LQ4 Without Throttle-actuated TCM
(U)6.0L V8 LQ4 With Throttle-actuated TCM
(U)6.0L V8 LQ4 ATC Control Module 2 Speed Active
(U)6.0L V8 LQ4 ATC Control Module 263 NVG
(1)6.6L V8 LB7 Diesel California Emissions ECM
(1)6.6L V8 LB7 Diesel Federal Emissions ECM
(1)6.6L V8 LB7 Transmission Control Module
(1)6.6L V8 LB7 ATC Control Module
(G)8.1L V8 L18 Engine Control Module
(G)8.1L V8 L18 Transmission Control Module 4 Speed
(G)8.1L V8 L18 Transmission Control Module 5 Speed
(G)8.1L V8 L18 ATC Control Module 2 Speed Active
(G)8.1L V8 L18 ATC Control Module 263 NVG

-Chassis
4WAL 3 Sensor
RTD (Autoride)/ EVO
ABS
ESC (If Equipped)
Rear Wheel Steering
Traction Assist (If Equipped)
VSES (If Equipped)

-Body
Body Control Module
CD Changer
Chime
Digital Radio Receiver
Driver Door Module
Driver Seat Module
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
OnStar
Passenger Door Module

Passenger Presence System
Radio Base
Radio Uplevel
Radio Navigation
Rear Aux. Climate Module
Rear HVAC
Rear Seat Audio
Rear Seat Entertainment
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

L Product Line 2000~2003

-Powertrain
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active

-Chassis
4WAL 3 Sensor

-Body
Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

M Product Line 2000~2003

-Powertrain
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active

-Chassis
4WAL 3 Sensor

-Body
Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

S Product Line 2000~2003

-Powertrain

(4)2.2L L4 LN2 Engine Control Module
(4)2.2L L4 LN2 Transmission Control Module
(5)2.2L L4 L43 Engine Control Module
(5)2.2L L4 L43 Transmission Control Module
(H)2.2L L4 LN2 Engine Control Module
(H)2.2L L4 LN2 Transmission Control Module
(P)5.3L V8 LM4 ATC Control Module
(P)5.3L V8 LM4 Engine Control Module
(P)5.3L V8 LM4 Transmission Control Module
(S)4.2L L6 LL8 ATC Control Module 1 Speed Active
(S)4.2L L6 LL8 ATC Control Module 2 Speed Active
(S)4.2L L6 LL8 Engine Control Module
(S)4.2L L6 LL8 Transmission Control Module
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 Transmission Control Module
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 With Air Pump ECM
(W)4.3L V6 L35 Without Air Pump ECM
(X)4.3L V6 LF6 Transmission Control Module
(X)4.3L V6 LF6 With Air Pump ECM
(X)4.3L V6 LF6 Without Air Pump ECM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 Transmission Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM

-Chassis

4WAL 3 Sensor
Traction Assist (If Equipped)

-Body

Amplifier (Bose)
Body Control Module
Driver Door Module
Driver Seat Module
Heating and Air Conditioning
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
Lift Gate Module
Memory Seat Module
OnStar
Passenger Door Module
Passenger Seat Module
Radio
Rear HVAC/RSA
Rear Seat Audio
Remote Function Actuation
Roof and Door Module

Supplemental Inflatable Restraint
Vehicle Theft Deterrent

T Product Line 2000~2003

-Powertrain
(4)2.2L L4 LN2 Engine Control Module
(4)2.2L L4 LN2 Transmission Control Module
(5)2.2L L4 L43 Engine Control Module
(5)2.2L L4 L43 Transmission Control Module
(H)2.2L L4 LN2 Engine Control Module
(H)2.2L L4 LN2 Transmission Control Module
(P)5.3L V8 LM4 ATC Control Module
(P)5.3L V8 LM4 Engine Control Module
(P)5.3L V8 LM4 Transmission Control Module
(S)4.2L L6 LL8 ATC Control Module 1 Speed Active
(S)4.2L L6 LL8 ATC Control Module 2 Speed Active
(S)4.2L L6 LL8 Engine Control Module
(S)4.2L L6 LL8 Transmission Control Module
(W)4.3L V6 L35 ATC Control Module 1 Speed Active
(W)4.3L V6 L35 ATC Control Module 2 Speed Active
(W)4.3L V6 L35 Equal to or Over 8600 GVW ECM
(W)4.3L V6 L35 Equal to or Over 8600 GVW TCM
(W)4.3L V6 L35 Transmission Control Module
(W)4.3L V6 L35 Under 8600 GVW ECM
(W)4.3L V6 L35 Under 8600 GVW TCM
(W)4.3L V6 L35 With Air Pump ECM
(W)4.3L V6 L35 Without Air Pump ECM
(X)4.3L V6 LF6 Transmission Control Module
(X)4.3L V6 LF6 With Air Pump ECM
(X)4.3L V6 LF6 Without Air Pump ECM
(X)4.3L V6 LU3 ATC Control Module 1 Speed Active
(X)4.3L V6 LU3 ATC Control Module 2 Speed Active
(X)4.3L V6 LU3 Engine Control Module
(X)4.3L V6 LU3 Equal to or Over 8600 GVW TCM
(X)4.3L V6 LU3 Transmission Control Module
(X)4.3L V6 LU3 Under 8600 GVW TCM

-Chassis

4WAL 3 Sensor
Traction Assist (If Equipped)

-Body

Amplifier (Bose)
Body Control Module
Driver Door Module
Driver Seat Module
Heating and Air Conditioning
Heating and Air Conditioning Auto
Heating and Air Conditioning Manual
Instrument Panel Cluster
Lift Gate Module
Memory Seat Module
OnStar
Passenger Door Module
Passenger Seat Module
Radio

Rear HVAC/RSA
Rear Seat Audio
Remote Function Actuation
Roof and Door Module
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

- Chevrolet MPV
U Product Line 2000~2003

-Powertrain
(E) 3.4L V6 LA1 Without Air Pump ECM
(E) 3.4L V6 LA1 With Air Pump ECM
(E)3.4L V6 LA1 Without All Wheel Drive TCM
(E)3.4L V6 LA1 With All Wheel Drive TCM

-Body
Driver Information Center
Instrument Panel Cluster
OnStar
Radio
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

V Product Line 2000~2003

-Powertrain
(E) 3.4L V6 LA1 Without Air Pump ECM
(E) 3.4L V6 LA1 With Air Pump ECM
(E)3.4L V6 LA1 Without All Wheel Drive TCM
(E)3.4L V6 LA1 With All Wheel Drive TCM

-Body
Driver Information Center
Instrument Panel Cluster
OnStar
Radio
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

X Product Line 2000~2003

-Powertrain
(E) 3.4L V6 LA1 Without Air Pump ECM
(E) 3.4L V6 LA1 With Air Pump ECM
(E)3.4L V6 LA1 Without All Wheel Drive TCM
(E)3.4L V6 LA1 With All Wheel Drive TCM

-Body
Driver Information Center
Instrument Panel Cluster
OnStar
Radio
Supplemental Inflatable Restraint
Vehicle Theft Deterrent

PROTON

New Model & System added

Persona NFE

ABS

- Special Function
- Acceleration Sensor Calibration
- Variant Coding
- TMC Pressure Sensor Calibration

Power Steering

- Special Function
- Steering Angle Sensor Calibration

SAGA NFE

ABS

- Special Function
- Acceleration Sensor Calibration
- TMC Pressure Sensor Calibration

IRIZ

ABS

- Special Function
- Acceleration Sensor Calibration
- Variant Coding
- TMC Pressure Sensor Calibration

Power Steering

- Special Function
- Steering Angle Sensor Calibration

Preve/Suprima

ESP9

- Special Function
- Variant Coding
- Steering Angle Sensor Calibration
- Acceleration Sensor Calibration
- HCU Repair Bleed ESC

ABS9

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test
- ECU Information Display
- Special Function
- Variant Coding
- HCU Repair Bleed ESC

Exora/Exora Bold

EASY-U IAFM+ Engine

- Basic Function
- DTC analysis
- Data analysis

- Actuation Test
- ECU Information Display
- Special Function
 - First Initialization
 - Calibration
 - Key ID Register
 - Clear Keys
 - Model Name Read and Write
 - Reset Values

SAGA FLX**ESP9**

- Special Function
 - Variant Coding
 - Steering Angle Sensor Calibration
 - Acceleration Sensor Calibration
 - HCU Repair Bleed ESC

ABS9

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
 - ECU Information Display
- Special Function
 - Variant Coding
 - HCU Repair Bleed ESC

CHERY**TIGGO 3 (T11)****DVD System added**

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

AC System added

- Basic Function
- DTC analysis
- Data analysis
- ECU Information

TIGGO 3X Model added

- ENGINE
- AT
- ABS
- BCM
- SRS
- ICM
- DVD
- IMMO

- Parking radar assist

TIGGO 5 (T21) Model added

- ENGINE
- AT
- ABS
- TPMS
- BCM
- SRS
- ICM
- AC
- IMMO
- PEPS

ARRIZO 5 (M1A) Model added

- ENGINE
- AT
- ABS
- TPMS
- BCM
- SRS
- ICM
- AC
- IMMO
- PEPS

QQ3 (S15) Model added

- ENGINE
- ABS
- BCM
- SRS
- ICM
- IMMO

BRILLIANCE**H220 / H230****AT added**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information
- Special Function
 - VIN writing

IMMOBILIZER

- Special Function added
 - Read immobilizer to EMS
 - Read EMS to immobilizer
 - Key learning
 - Key erasing

Więcej informacji pod numerem 601-817-201 oraz na www.gscan.com.pl

Immobilizer reset
EMS reset
Add key

H320 / H330**IMMOBILIZER**

- Special Function added
- Read immobilizer to EMS
- Read EMS to immobilizer
- Key learning
- Key erasing
- Immobilizer reset
- EMS reset
- Add key

V5**IMMOBILIZER**

- Special Function added
- Read immobilizer to EMS
- Read EMS to immobilizer
- Key learning
- Key erasing
- Immobilizer reset
- EMS reset
- Add key

SAIPA**H220 / H230****AT added**

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information
- Special Function
- VIN writing

IMMOBILIZER

- Special Function added
- Read immobilizer to EMS
- Read EMS to immobilizer
- Key learning
- Key erasing
- Immobilizer reset
- EMS reset
- Add key

H320 / H330**IMMOBILIZER**

- Special Function added
- Read immobilizer to EMS

Read EMS to immobilizer
Key learning
Key erasing
Immobilizer reset
EMS reset
Add key

CHANGAN EADO Model added

- ENGINE
- AT
- ABS
- SRS
- BCM
- LCM
- Instrument

HOLDEN**New Functions added**

- Engine
- Support function
 - Program immobilizer function - SIDI
 - ECM Reset - SIDI

Engine

- Support function
- Clutch pedal position learn

Bug fixed

All model: DTC item added

IKCO**Peugeot 206 Local Engine – SSAT TU5 added**

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information
- Special Function
- Adaptive value resetting

Engine – BOSCH ME17 (TU5) added

- Basic Function
- DTC analysis
- Data analysis
- Actuation test
- ECU Information

- Special Function
Cruise control activation

ABS – Youfin added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information
- Special Function
 - Bleeding

HAIMA Haima S7 Model added

- ENGINE
- TCU
- ABS
- SAS
- EPS
- SRS
- ICM
- IST
- IMMO
- PEPS

Key learning - SSAT CIM added

- ECM ICU and Key Learning
- ECM Neutralizing
- ICU Neutralizing
- Status Reading

- Parking Brake Control Module
- Body
 - Body Control Module
 - Auxiliary Body Control Module
 - Inflatable Restraint Sensing and Diagnostic Module
 - Instrument Cluster
 - Headlamp Control Module
 - HVAC Control Module
 - Remote Control Door Lock Receiver
 - Parking Assist Control Module
 - Theft Deterrent Module
 - Power Steering Control Module

Astra-J New Type added

- Powertrain
 - Engine Control Module 1.6L (LUJ)
 - Fuel Pump Control Module
 - Transmission Control Module
- Chassis
 - Electronic Brake Control Module
 - Parking Brake Control Module
 - Multi-Axis Acceleration Sensor Module
 - Power Steering Control Module
 - Steering Wheel Angle Sensor Module
 - Suspension Control Module
- Body
 - Body Control Module
 - Inflatable Restraint Sensing and Diagnostic Module
 - Instrument Cluster
 - Chime Alarm Control Module
 - Remote Heater and Air Conditioning
 - Parking Assist Control Module
 - Vehicle Direction Camera Control Module
 - Trailer Interface Control Module
 - Radio
 - Telematics Communication Interface Control Module
 - HVAC Control Module
 - Engine Control Module 1.4L (LDD)
 - Vehicle Direction Camera Control Module
 - Distance Sensing Cruise Control Module
 - Radio Radio
 - Radio Chime (UL5)
 - HVAC Control Module
 - Front Seat Heating Control Module
 - Frontview Camera Module

OPEL / GM BRAZIL**Corsa-D New Type added**

- Engine Z 14 XEP, Z 13 DTJ, A 13 DTE
- ABS/ESP

Corsa-B New Type added

- Engine X 10 XE
- ABS 5.3

Astra-H New Type added

- Engine Z 14 XEP, Z 18 XER
- IPC ECU (Instrument Control Unit)
- SDM (Airbag)

Antara New Type added

- Powertrain
 - Engine Control Module
 - Fuel Pump Control Module
 - Transmission Control Module
 - Rear Differential Clutch Control Module
- Chassis
 - Electronic Brake Control Module

Insignia New Type added

- Powertrain
 - Engine Control Module 1.6L (LDE)
 - Engine Control Module 1.6L (LLU)
 - Engine Control Module 1.8L (2H0)
 - Engine Control Module 2.0L (LBS)
 - Engine Control Module 2.0L (LBX)
 - Engine Control Module 2.0L (LBY)
 - Engine Control Module 2.0L (LCD)
 - Engine Control Module 2.0L (LDK)
 - Engine Control Module 2.8L (LAU)

Engine Control Module 2.8L (LBW)
Engine Control Module 2.0L (LBQ)
Engine Control Module 2.0L (LBR)
Engine Control Module 2.0L (LHU)
Engine Control Module 1.4L (LUJ)
Engine Control Module 1.6L (LLU)
Engine Control Module 2.0L (LHV)
Fuel Pump Control Module
Rear Differential Clutch Control Module
- Chassis
 Electronic Brake Control Module
 Multi-Axis Acceleration Sensor Module
 Steering Wheel Angle Sensor Module
 Distance Sensing Cruise Control Module
 Parking Brake Control Module
- Body
 Body Control Module
 Inflatable Restraint Sensing and Diagnostic Module
 Instrument Cluster
 Remote Heater and Air Conditioning
 Chime Alarm Control Module
 Headlamp Control Module
 Parking Assist Control Module
 Vehicle Direction Camera Control Module
 Trailer Interface Control Module
 HVAC Control Module
 Front Seat Heating/Venting/Cooling/Memory Control Module
 Frontview Camera Module
 Chassis Control Module
 Radio
 Amplifier
 Human Machine Interface Control Module
 HVAC Controls
 Infotainment Control Touchpad
 Keyless Entry Control Module
 Left Side Object Detection Control Module
 Radio Controls
 Steering Column Lock Control Module
 Telematics Communication Interface Control Module

Feedback

Greece: Corsa-D, Astra-H Engine New Type Added
South Africa: Corsa-D Engine New Type Added
Russia: Astra-H Engine New Type Added

PERODUA**EFI System New Type Added**

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test

ECU Information Display

Feedback: BEZZA, 1KR-VE/1NR-VE, Malaysia

A/T System New Type Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- ECU Information Display

Feedback: BEZZA, 1KR-VE/1NR-VE, Malaysia

ABS System New Type Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- ECU Information Display

Feedback: BEZZA, 1KR-VE/1NR-VE, Malaysia

Eco IDLE System Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- ECU Information Display
- Special Function
 - Engine Start Counter
 - Eco Run ECU Initial Learning

Feedback: BEZZA, 1NR-VE, Malaysia

SAS(Steering Angle Sensor) System Added

- Basic Function
- Data analysis

Feedback: BEZZA, 1NR-VE, Malaysia

Body System Added New Type Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- ECU Information Display

Feedback: BEZZA, 1NR-VE, Malaysia

Body System Added New Type Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- ECU Information Display
- Special Function

Antena connection check
 Key Free Setting
 Smart Communication Test
 Transponder Communication Test
 Wireless communication test

Feedback: BEZZA, 1NR-VE, Malaysia

Meter System Added

- Basic Function
- Data analysis
- Actuation Test

Feedback: BEZZA, 1KR-VE/1NR-VE, Malaysia

COMBI System Added

- Basic Function
- DTC analysis
- Data analysis
- Actuation Test
- ECU Information Display

Feedback: BEZZA, 1KR-VE/1NR-VE, Malaysia

ETC.

G-scan Tab

1. Dodano funkcję przeglądu historii

- G-scan Tab zapamiętuje teraz historię do 30 poprzednio diagnozowanych pojazdów

Vehicle	Date	Description
TOYOTA	2017/04/13 14:06:34	International>16PIN CONNECTOR>Powertrain>TCCS/Engine/AT
TOYOTA	2017/04/13 13:33:06	International>16PIN CONNECTOR>SYSTEM SEARCH
PEUGEOT	2017/04/13 13:19:42	206>Active safety>ABS MK70
FUSO	2017/04/13 13:14:29	International>EURO 2/3/4>CHASSIS>ABS
HONDA	2017/04/10 16:26:01	International>16PIN CONNECTOR>SYSTEM SEARCH
DEMO SOFTWARE	2017/04/10 15:32:55	Test Car>Passenger Car>TCCS(Engine/AT)

2. Dodano funkcję bezpośredniego drukowania



3. Dodano funkcję wydruku po autowyszukiwaniu systemów



4. Wsparcie dla wyświetlaczy HD 4K (3840 x 2160)

G-scan2

1. Dodano funkcje przeglądania historii

- G-scan 2 zapamiętuje teraz historię do 30 poprzednio diagnozowanych pojazdów



Więcej informacji pod numerem 601-817-201 oraz na www.gscan.com.pl