

TOYOTA/LEXUS	2	FORD USA	55
NISSAN/INFINITI.....	2	FORD USA (LINCOLN)	59
HONDA /ACURA	3	FORD USA (MERCURY).....	61
MITSUBISHI	4	GM USA.....	61
MAZDA	4	CHRYSLER/JEEP/DODGE	66
SUZUKI/MARUTI.....	4	PERODUA	72
SUBARU	5	OPEL / GM BRAZIL	72
ISUZU.....	6	MAHINDRA.....	74
FUSO.....	7	SAIPA.....	75
HINO.....	7	H O L D E N.....	75
SSANGYONG	8	LUXGEN	75
AUDI/VW/SEAT/SKODA	10	CMC.....	76
FORD EU	12	CHERY	76
RENAULT / DACIA	13	DAEHAN	77
BMW	16	TRIAL S/W	78
LAND ROVER.....	17		
JAGUAR.....	19		
MERCEDES BENZ.....	19		
FIAT / ALFA ROMEO / LANCIA	30		
PEUGEOT	31		
CITROEN.....	34		
VOLVO.....	50		
PORSCHE.....	51		

TOYOTA/LEXUS**TCCS**

- Freeze frame bug fixed
- Special function bug fixed
 - AT Learning Value Initialization

Stop and Go

- Special function bug fixed
 - G sensor 0-point correction
 - G sensor 0-point correction initialization

Entry And Start

- Special function bug fixed
 - Key Code Registration

Precrash2

- DTC List added

Front Recognition Camera

- DTC List added

[Back to Index](#)**NISSAN/INFINITI****AT/CVT New Special Function added (CAN)**

- Special Function
 - Auxiliary Gearbox Clutch Point Learning
- Corresponding vehicle: Pulsar

HV Battery New Type added (CAN)

- Basic Function
 - Data analysis
 - Data Analysis
 - ECU Information Display
 - Special Function
 - IDM information clear
- Corresponding vehicle: Pathfinder HV

BCM New Type added (UDS)

- Basic Function
 - Data analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Special Function
 - Reset Setting Value
 - Reset Setting Value
 - Auto ACC Function (Audio/Navi Set After IGN Off)

- Door Lock-Unlock Set
- Auto Unlock Type
- Auto Lock Function
- Auto Unlock Function
- Signature Light Setting
- Autofold Function
- Set R-DEF Timer
- Set I/L D-Unlock Intcon
- Fog Lamp Override
- Auto Lock Set
- Answer Back
- Answerback Keyless Lock Unlock
- Welcome Light OP Set
- Custom A/Light Setting
- Ill Delay Set
- Twilight ON
- Wiper Link
- Daytime Running Light Setting
- Wiper Speed Setting
- Rain Sensor
- FR RR Drip
- Rear Wiper Link With Reverse Setting
- 3-Time Flasher Setting
- Inside Ant Diagnosis
- Lock/Unlock By I-Key
- Engine Start By I-Key
- Trunk/Glass Hatch Open
- Auto Lock Set
- Short Cranking Output
- IGN/ACC Battery Saver
- Answer Back
- Answer Back I-Key Lock Unlock
- Answerback I-Key Lock Unlock
- Answerback Keyless Lock Unlock
- Welcome Light OP Set
- Intelligent Key Link Set
- Remote Engine Starter
- Touch Sensor Unlock Function Setting
- Confirm Dongle ID
- Confirm TCU ID
- Siren Set
- Security Alarm Set

AFS New Type added (CAN)

- Basic Function
 - Data analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
 - Special Function
 - Steering Angle Sensor Adjustment
 - Levelizer Adjustment
- Corresponding vehicle: INFINITI Q50 HV

Precrash Seatbelt New Type added (CAN)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic Function
 - Data analysis
 - Data Analysis
 - ECU Information Display
 - Special Function
 - Door Opening Retract Retry
- Corresponding vehicle: INFINITI Q50 HV

OCCUPANT DETECTION New Type added (KWP)

- Basic Function
 - Data analysis
 - Special Function
 - Zero Point Reset Function
- Corresponding vehicle: INFINITI Q50 HV

Feedback

Engine, ABS DTC Description added – England request
Brake DTC Description added
Pathfinder HV response – Saudi Arabia request

[Back to Index](#)**HONDA /ACURA****New Type Added**

- BCM_Lighting
- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation

- BCM_Doorlocks
- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation

- BCM_Keyless
- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation
 - Advanced Function
 - Keyless Check

- BCM_Security
- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation
 - Advanced Function
 - History Data Clear
 - History Data

- BCM_Wiper
- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation

New Function Added

- Engine : Malaysia, USA
- Advanced Function
 - Electric Waste Gate Test
 - DI Fuel Pressure Test

Function Improved

- Engine(Old) : USA
- Basic Function
 - Data analysis extended

- Engine : Malaysia
- Basic Function
 - DTC analysis extended

- Engine(New) : USA
- Basic Function
 - DTC analysis extended
 - Data analysis extended

- FCW/LDW/High Beam Support/Traffic Sign Recognition
System : Opti-AIM
- Advanced Function
 - Static Camera Aiming (Beta)

- VSA
- Advanced Function
 - Left Front CAS Regulator Valve Test
 - Right Front CAS Regulator Valve Test
 - Left Rear CAS Regulator Valve Test
 - Right Rear CAS Regulator Valve Test

- Engine(New) : USA
- Basic Function
 - Data analysis extended

- Engine : Malaysia
- Basic Function
 - DTC analysis extended
 - Data analysis extended

Bug Fixed

- Engine : USA
- Basic Function
 - DTC analysis
 - Data analysis
- BCM_Gauge :
- Advanced Function

PAX Warning Reset

[Back to Index](#)

MITSUBISHI

OUTLANDER (GF7W)

- 2017 model added

OUTLANDER-PHEV (GG2W)

- 2017 model added

TRITON (KL1T)

- 2017 model added

ASX (GA1W) (Feedback from Germany)

IMMO

- Special Function added
Key Registration

[Back to Index](#)

MAZDA

ATENZA/MAZDA6 2.0L 2.5L System and Special Function Added

- RKE(Remote Keyless Entry)
- Special Ignition ON added

BSM Aiming Special Function Added

- CX-3 2.0L PE
- CX-5 2.0L PE
- CX-5 2.2L SH
- CX-5 2.5L PY
- DEMIO/VERISA/MAZDA2 1.5L S5
- ATENZA/MAZDA6 2.2L SH (Diesel)

[Back to Index](#)

SUZUKI/MARUTI

New System Added

Dual Camera Brake Support: Japan

- Basic Function
DTC analysis extended
Data analysis extended
ECU Information

- Advanced Function

- Clear Aiming Adjustment Value
- Aiming Adjustment
- Aiming Readjustment

NEW TYPE ADDED

EPI : Mexico

- Basic Function
DTC analysis
ECU Info

CVT : Cambodia

- Basic Function
DTC analysis
Data analysis
ECU Info
- Advanced Function
CVT G Sensor Calibration
Learning Value Initialization
Electric Oil Pump Air Bleed

Radar Brake Support : Japan

- Basic Function
DTC analysis
Data analysis
ECU Info
- Advanced Function
Aiming

Hustler 2016 : Korea

EPI

- Basic Function
DTC analysis
Data analysis
Actuation Test
ECU Info

EPI : UAE

- Basic Function
DTC analysis
Data analysis
Actuation Test
ECU Info

Function Improved

SRS : Malaysia

- Basic Function
DTC analysis extended

SRS : Japan

- Basic Function
DTC analysis extended

Bug Fixed**Radar Brake Support : Japan**

- Basic Function
- Data analysis

EPI : Japan

- Basic Function
- Actuation

SRS : Japan

- Basic Function
- Data analysis

BCM :

- Advanced Function
- Guide me Light to Home

[Back to Index](#)**SUBARU****New System Added****TPM(Tire pressure monitor)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display
- Support function
 - ID Registration

BCM(Body Control Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display
- Support function
 - Function Check
 - Integ. Unit customizing

Infotainment

- Basic function
 - DTC Analysis
 - ECU Information Display

Revers automatic braking

- Basic function
 - DTC Analysis
 - ECU Information Display

Telematics

- Basic function

- DTC Analysis
- ECU Information Display

New functions added**Meter(Combination meter)**

- Basic function
- Actuation Test

Meter(Combination meter)

- Basic function
- Actuation Test
- Support function
- Customize

BCM(Body Control Module)

- Basic function
- Actuation Test
- Support function
 - Keyless ID registration
 - Keyless ID erasure
 - Initial keyless setting
 - Initial button setting
 - Customize

PSS(Power steering system)

- Basic function
- Data Analysis
- Support function
- Clear vehicle specific assist map

BSD-L(Blind spot detection left side)

- Basic function
- Data Analysis
- Actuation Test
- Support function
- RADAR Alignment

BSD-R(Blind spot detection right side)

- Basic function
- Data Analysis
- Actuation Test
- Support function
- RADAR Alignment

Bug fixed

- Engine : DTC items added
- Eyesite : special function stabilized

[Back to Index](#)

ISUZU**New system added****F/G Series : Allison transmission 16P Type 1**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Clear basic learn values

F/G Series : Allison transmission 16P Type 2

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Clear basic learn values

F/G Series : Allison transmission 12P

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display
- Support function
 - Clear Throttle Calibration
 - Re-Init. Adaptive Parameters
 - Re-Init. Fast Adaptive Parameters
 - Init. Auto-Detect Parameters
 - Display CIN

F/G Series : 4HK1 – TC EURO5

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - DPD Automatic regeneration
 - DPD normal regeneration control
 - DPD slow regeneration control
 - DPD status resetting
 - Engine oil exchange reset
 - Injector ID Code Read
 - Injector programming
 - Supply Pump Initialization

F/G Series : 6HK1 – TC EURO5

- Basic function
 - DTC Analysis

- Data Analysis
- Actuation Test
- ECU Information Display
- Support function
 - Injector ID Code Read
 - Injector programming
 - Injector Quantity Trim
 - Supply Pump Initialization

F/G Series : ECOSTOP

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display
- Support function
 - G Sensor 0 Point Learning
 - Program Vehicle Configuration Data
 - Replace Module
 - ECO Stop Correction
 - Program VIN (Vehicle Identification Number)

F/G Series : SRS Airbag

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display

F/G Series : BCM(MIMAMORI)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display
- Support function
 - Change Threshold Value
 - Forced DRM Data Record
 - Clear DRM Data
 - Clear EDR Data
 - ECU Lock
 - Clear Hour Meter Data
 - Clear Fuel Consumption Measure Data
 - Clear All Mimamori Data

F/G Series : METER

- Basic function
 - Data Analysis
 - ECU Information Display

F/G Series : HSA(ISS/HSA)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display

F/G Series : FMS(CAN Converter)

- Basic function

DTC Analysis
Data Analysis
ECU Information Display

- Support function
 - Reset All Accumulation Data
 - Program VIN (Vehicle Identification Number)
 - Program Vehicle Configuration Data
 - Replace Module

F/G Series : ABS/ASR

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Program VIN (Vehicle Identification Number)
 - Replace Module
 - Initialization Steering Central Position
 - Forced Learning Steering Central Position

F/G Series : ABS/ASR ADVICS

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display

F/G Series : Wabco EBS

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information Display

New function added**F/G Series : Smoother**

- Support function
 - CLU GSU position learning(manual)
 - Clutch learning
 - Gear learning

F/G Series : Smoother

- Support function
 - CLU GSU position learning(manual)
 - Clutch learning
 - Gear learning

Bug fixed

N Series – 4HK1-TC EURO4: Menu fixed (Japan)
F Series – Smoother: Communication stabilized
F Series – SRS Airbag DTC added
LD/LV Series – Smoother: Communication stabilized

[Back to Index](#)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

FUSO**Canter Euro 5**

EZGO (Hill Start Assist Control unit) added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

HLAL (Control unit 'Automatic headlamp adjustment') added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

HVAC added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

[Back to Index](#)**HINO****HINO 500 Euro 5**

ES Start added

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Information

ABS added

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Information

Immobilizer added

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Information

VCS (Vehicle Control System) added

- Basic Function
 - DTC analysis

Data analysis
ECU Information

HINO 700 Euro 5

SCR added

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Information

Transmission (ASTRONIC) added

- Basic Function
 - DTC analysis
 - Data analysis
 - ECU Information

[Back to Index](#)

SSANGYONG

New Model added

G4 REXTON

ECM – GSL G20DTR

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification

ECM – D22DTR

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Engine Variant Coding
 - Injector Coding
 - VIN Write
 - Fuel Pressure Silence Test
 - Fuel Pressure Dynamic Test
 - IMV Dynamic Test
 - Injector Calibration
 - DPF Regeneration (IDLE)
 - DPF Regeneration (Drive)
 - LNT Desulfurization
 - DPF Reset
 - Differential Pressure Sensor
 - LNT Reset
 - EGR Reset
 - EGR Initial Learn
 - Throttle Reset

Throttle Initial Learn
Oxygen Sensor Reset
RPC Reset
Air Flow Sensor(HFM) Reset
Cam/Crank Sensor Reset
Main Relay Reset
Swirl Control Valve Reset
Swirl Control Valve Initial Learn
VGT Initial Learn

TCM – MB 7 A/T

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification
- Advanced Function
 - Lock-Up Re-Operation Release
 - TCU adaption Reset
 - TCU Coding
 - TCU SCN/CNN Coding
 - PLCD Calibration
 - TCU Registration

TCM – AISIN 6 A/T

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - N' Position Learn
 - TCU RESET

ABS – ABS/ESP(MANDO)

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Coding Erase
 - Longitudinal acceleration sensor
 - Air Bleeding

AIRBAG

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

TCCU

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

SSPS

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

TGS Lever

- Basic Function
 - DTC Analysis

TPMS**Basic Function**

- DTC Analysis
 - Data Analysis
 - System Identification
- Advanced Function
 - TPMS Coding

BCM

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - REKES Key Coding
 - BCM Reset

SKM

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

GCU

- Basic Function
 - System Identification
- Advanced Function
 - Glowplug Learning
 - Glowplug Target Temperature
 - Glowplug Coding

FCM

- Basic Function
 - DTC Analysis
 - Data Analysis

IMMOBILIZER - GASOLINE

- Advanced Function
 - EMS Registration
 - Transponder Registration

IMMOBILIZER - DIESEL

- Advanced Function

EMS Registration**Transponder Registration****REXTON(New MUSSO) SUT****ECM – GSL G20DTR**

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification

ECM – D22DTR

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Engine Variant Coding
 - Injector Coding
 - VIN Write
 - Fuel Pressure Silence Test
 - Fuel Pressure Dynamic Test
 - IMV Dynamic Test
 - Injector Calibration
 - DPF Regeneration (IDLE)
 - DPF Regeneration (Drive)
 - LNT Desulfurization
 - DPF Reset
 - Differential Pressure Sensor
 - LNT Reset
 - EGR Reset
 - EGR Initial Learn
 - Throttle Reset
 - Throttle Initial Learn
 - Oxygen Sensor Reset
 - RPC Reset
 - Air Flow Sensor(HFM) Reset
 - Cam/Crank Sensor Reset
 - Main Relay Reset
 - Swirl Control Valve Reset
 - Swirl Control Valve Initial Learn
 - VGT Initial Learn

TCM – AISIN 6 A/T

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - N' Position Learn
 - TCU RESET

ABS – ABS/ESP(MANDO)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Coding Erase
 - Longitudinal acceleration sensor
 - Air Bleeding

AIRBAG

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

TCCU

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

SSPS

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

TGS Lever

- Basic Function
 - DTC Analysis

TPMS

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification
- Advanced Function
 - TPMS Coding

BCM

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - REKES Key Coding
 - BCM Reset

SKM

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

GCU

- Basic Function
 - System Identification
- Advanced Function
 - Glowplug Learning
 - Glowplug Target Temperature
 - Glowplug Coding

FCM

- Basic Function
 - DTC Analysis
 - Data Analysis

IMMOBILIZER - GASOLINE

- Advanced Function
 - EMS Registration
 - Transponder Registration

IMMOBILIZER - DIESEL

- Advanced Function
 - EMS Registration
 - Transponder Registration

[Back to Index](#)**AUDI/VW/SEAT/SKODA****Self Leveling Suspension (UDS Type) New Type Added**

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Engine Electronics (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting
 - Adaptation

Engine Electronics LT3 (KWP Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting
 - Adaptation
 - Coding

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Coding II

Steering Wheel Electronics (CAN Type) New Type Added

- Basic Function
 - Data analysis
- Special function
 - Long Coding

On Board Camera (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Transmission Electronics (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Brake Electronics (UDS Type) New Type Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting
 - Adaptation

Auto HVAC (UDS Type) New Type Added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting
 - Adaptation

Steering Assistance (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Gear Shift (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Information Electronics (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Multicont Seat Driver (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Multicont. Seat Pass. (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Reductant Control (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Door Electronics-Passenger (UDS Type) New Type Added

- Basic Function
 - Data analysis
 - Actuation Test
- Special function added
 - Basic setting

Battery Regulation (CAN Type) New Type Added

- Basic Function
 - Data analysis
- Special function added
 - Long Adaptation
 - Long Coding

UDS Type Brake Electronics System

- Bleed Brakes Function improved

CAN Type All System

- Actuation Test improved

Engine Electronics (BOSCH Protocol)

- Communication stabilized

[Back to Index](#)

FORD EU**Expedition/Expedition EL 5.4L 3V ~ 2007 Vehicle Added**

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- EATC(Electronic Automatic Temperature Control)
- IC(Instrument Cluster)
- LTM(Liftgate/Trunk Module)
- PAM(Parking Aid Module)
- PRB(Power Running Board)
- RCM(Restraint Control Module)
- RCU(Audio Rear Control Unit)
- RETM(Rear Entertainment Module)
- SDARS(Satellite Digital Audio Receiver System)
- TCM(Transmission Control Module)
- VDM(Vehicle Dynamic Module)
- 4X4(4x4 Control Module)
- PATS(Passive Anti Theft System)
- VSM(Vehicle Security Module)

Expedition/Expedition EL 5.4L 3V 2008 ~ Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- GPSM(Global Positioning System Module)
- HVAC(Heating Ventilation Air Conditioning)
- IC(Instrument Cluster)
- LTM(Liftgate/Trunk Module)
- PAM(Parking Aid Module)
- PRB(Power Running Board)
- RCM(Restraint Control Module)
- RCU(Audio Rear Control Unit)
- RETM(Rear Entertainment Module)
- SDARS(Satellite Digital Audio Receiver System)
- TBC(Trailer Brake Control Module)
- TCCM(Transfer Case Control Module)
- TCM(Transmission Control Module)
- VDM(Vehicle Dynamic Module)

- 4X4(4x4 Control Module)
- PATS(Passive Anti Theft System)

Expedition/Expedition EL 5.4L 2V 2003 ~ 2004 Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- DCSM(Driver-Dual Climate Control Seat Module)
- DSM(Driver's Seat Module)
- GEM(Generic Electronic Module)
- EATC(Electronic Automatic Temperature Control)
- IC(Instrument Cluster)
- PAM(Parking Aid Module)
- RCM(Restraint Control Module)
- VDM(Vehicle Dynamic Module)
- RIM(Remote Immobilizer Module)
- VSM(Vehicle Security Module)

Expedition/Expedition EL 5.4L 2V ~ 2002 Vehicle Added

- PCM(Powertrain Control Module)
- 4WAS(Air Suspension)
- ABS(Anti-Lock Brake System)
- GEM(Generic Electronic Module)
- HEC(Hybrid Electrical Cluster)
- RAP(Remote Anti-Theft/Personality Module)
- RCM(Restraint Control Module)

Expedition/Expedition EL 4.6L 2V 2003 ~ 2004 Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- GPSM(Global Positioning System Module)
- EATC(Electronic Automatic Temperature Control)
- IC(Instrument Cluster)
- LTM(Liftgate/Trunk Module)
- PAM(Parking Aid Module)
- PRB(Power Running Board)
- RCM(Restraint Control Module)
- RCU(Audio Rear Control Unit)
- RETM(Rear Entertainment Module)
- SDARS(Satellite Digital Audio Receiver System)
- TCM(Transmission Control Module)
- VDM(Vehicle Dynamic Module)
- 4X4(4x4 Control Module)
- RIM(Remote Immobilizer Module)
- PAM(Parking Aid Module)
- VDM(Vehicle Dynamic Module)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- VSM(Vehicle Security Module)

FIESTA 1.6L Duratorq-Turbo Diesel Common Rail Injection 2008 ~ 2010 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- BCMii(Body Control Module)
- FCDIM(Front Control/Display Interface Module)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- PSCM(Power Steering Control Module)
- RCM(Restraint Control Module)
- RFA(Remote Function Actuator)
- SRM(Speech Recognition Module)

FOCUS 2.0L Duratorq-Turbo Diesel Common Rail Injection 2011 ~ 2014 Vehicle Added

PCM(PowerTrain Control Module)
ABS(Anti-Lock Brake System)
ACM(Audio Control Module)
AHCM(Auxiliary Heater Control Module)
BCMii(Body Control Module)
DDM(Driver's Door Module)
FCDIM(Front Control/Display Interface Module)
HCM(Headlamp Control Module)
HVAC(Heating Ventilation Air Conditioning)
IPM-A(Image Processing Module A)
IPM-B(Image Processing Module B)
IPC(Instrument Panel Control Module)
PAM(Parking Aid Module)
PDM(Passenger's Door Module)
PSCM(Power Steering Control Module)
RCM(Restraint Control Module)
RFA(Remote Function Actuator)
RGTM(Rear Gate/Trunk Module)
SASM(Steering Angle Sensor Module)
SRM(Speech Recognition Module)
SOD-L(Side Obstacle Detection Control Module Left)
SOD-R(Side Obstacle Detection Control Module Right)
TRM(Trailer Module)

Ranger 2.2L Duratorq-Turbo Diesel Common Rail Injection 2015 ~ Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- ATCM(All Terrain Control Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DDM(Driver's Door Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)

- GWM(Gateway Module A)
- HCM(Headlamp Control Module)
- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RDCM(Reductant Control Module)
- RCM(Restraint Control Module)
- RGTM(Rear Gate/Trunk Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Colume Control Module)
- TCU(Telemetic Control Unit Module)
- TRM(Trailer Module)

[Back to Index](#)

RENAULT / DACIA

New Model added

- Talisman

Injection

- Basic Function

DTC analysis
Data analysis
Actuation test
ECU information

- Advanced Function

Read Configuration
Enter injector codes
Cabin filter regeneration
Adaptives after replacing cabin filter
Air Flowmeter Programming
Fuel Pump Programming
Engine Adaptives [RZ003]
EGR Valve Programming
Catalytic Converter
Cruise control/Speed Limiter Programming
Air Damper Valve Programming
Adaptives On Air Intake Flap Fault
Particle Filter Pressure Diff. Sensor
Engine Adaptives [RZ002]
Proportional Richness Sensor Programming
Rail Pressure Sensor Adaptives
EGR Bypass Programming
Swirl Flap Programming
Swirl Flap
Number Of Starting Cycles [RZ079]
Stop And Start Function
Starter Adaptatives
High Pressure Pump Counter [RZ079]
Injection Pump Adaptatives [RZ077]

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Cylinder 1 Injector Code
 - Cylinder 2 Injector Code
 - Cylinder 3 Injector Code
 - Cylinder 4 Injector Code
 - V.I.N write
 - Number of Starting Cycle [VP343]
 - High Pressure Pump Counter [VP344]
 - Number Of Starting 1
 - Number Of Starting 2
 - Number Of Starting 3
 - Number Of Starting 4
 - Alternator Setpoint Voltage
- Airbag / Pretensioners
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - Read configuration
 - Lock computer
 - Unlock computer
 - Write date of last after saled operation
- Instrument panel
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - Read configuration
 - Oil service and odometry miles-km
- Airconditioning
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - Computer reinitialisation
 - Geographical Zone
- Automatic Gearbox
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - V.I.N write
- Parking brake
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - Read configuration
 - Vehicle Configuration
 - Activate Maintenance Mode
 - Deactivate Maintenance Mode
 - Accelerometer
 - V.I.N write
- A.B.S
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - Read configuration
 - Lock Computer
 - Unlock computer
 - Side on Which Steering Wheel Fitted
 - V.I.N write
- UPC
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - High Pressure Pump counter [RZ012]
 - Number Of Strating Cycles
 - High Pressure Pump counter [VP027]
 - Stater Wear Counter
 - Computer Initialisation
 - Resetting Internal Protection
- UCH
 - Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
 - Advanced Function
 - Read configuration
 - Valve set selection
 - Following tyre change
- CAPTUR**
 - Injection
 - Basic Function
 - DTC analysis

Data analysis
Actuation test
ECU information
- Advanced Function
 Read Configuration
 Enter injector codes
 Cabin filter regeneration
 Adaptives after replacing cabin filter
 Air Flowmeter Programming
 Fuel Pump Programming
 Engine Adaptives [RZ003]
 EGR Valve Programming
 Catalytic Converter
 Cruise control/Speed Limiter Programming
 Air Damper Valve Programming
 Adaptives On Air Intake Flap Fault
 Particle Filter Pressure Diff. Sensor
 Engine Adaptives [RZ002]
 Proportional Richness Sensor Programming
 Rail Pressure Sensor Adaptives
 EGR Bypass Programming
 Swirl Flap Programming
 Swirl Flap
 Number Of Starting Cycles [RZ079]
 Stop And Start Function
 Starter Adaptatives
 High Pressure Pump Counter [RZ079]
 Injection Pump Adaptatives [RZ077]
 Cylinder 1 Injector Code
 Cylinder 2 Injector Code
 Cylinder 3 Injector Code
 Cylinder 4 Injector Code
 V.I.N write
 Number of Starting Cycle [VP343]
 High Pressure Pump Counter [VP344]
 Number Of Starting 1
 Number Of Starting 2
 Number Of Starting 3
 Number Of Starting 4
 Alternator Setpoint Voltage

A.B.S

- Basic Function
 DTC analysis
 Data analysis
 Actuation test
 ECU information
- Advanced Function
 Read Configuration
 Check target teeth
 Steering wheel angle offset sensor
 Transverse acceleration offset sensor
 Brake pressure offset sensor
 Longitudinal acceleration sensor offset
 Reset

Steering wheel angle sensor
Write Date of Last After Sales Operation
Speedo index
Acceleration Sensor
Hill Start
Bleed rear R/H wheel
Bleed rear L/H wheel
Bleed front R/H wheel
Bleed front L/H wheel
R/H Rear Wheel Solenoid Valves
L/H Rear Wheel Solenoid Valves
R/H Front Wheel Solenoid Valves
L/H Front Wheel Solenoid Valves
V.I.N write

Instrument panel

- Basic Function
 DTC analysis
 Data analysis
 Actuation test
 ECU information
 Advanced Function
 Read Configuration
 Computer Initialisation
 Language Version
 ADAC Display Type
 Odometer in Km
 Odometer in Miles
 V.I.N write

UCH

- Basic Function
 DTC analysis
 Data analysis
 Actuation test
 ECU information
- Advanced Function
 Read Configuration
 Hazard Warning Lights Illumination by ABS
 Second Fitting Alarm
 Alarm
 V.I.N write

Airbag / Pretensioners

- Basic Function
 DTC analysis
 Data analysis
 Actuation test
 ECU information
- Advanced Function
 Read configuration
 Lock computer
 Unlock computer

Airconditioning

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
- Advanced Function
 - Computer reinitialisation
 - V.I.N write

Automatic Gearbox

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information

Variable P.A.S

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
- Advanced Function
 - V.I.N write

UPC

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
- Advanced Function
 - Read Configuration
 - Computer Reinitialisation
 - Resetting Internal Protection
 - V.I.N write

Parking Brakre

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
- Advanced Function
 - V.I.N write

Telematic CTRL Unit

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
- Advanced Function
 - Reset

Hands-free Module

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU information
- Advanced Function
 - Read Configuration

Feedback

LATVIA : Trafic II ph2 – Injection New type added
 AUS : 2013 Master – ABS bleeding bug fixed
 ESP : 2006 Kangoo MUX – Injection Communication bug fixed

[Back to Index](#)

BMW

3 Series – E46 (1999 – 2005)

DME N40 engine added (Feedback from Greece)

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

EWS (Electronic immobilizer)

- Special Function
 - Add production date
 - Key status

5 Series – E39 (1995 – 2003)

EWS (Electronic immobilizer)

- Special Function
 - Add production date
 - Key status

7 Series – E38 (1994 – 2001)

EWS (Electronic immobilizer)

- Special Function
 - Add production date
 - Key status

X5 – E53 (2000 – 2006)

DME M57 engine sensor data bug fixed (Feedback from Australia)

EWS (Electronic immobilizer)

- Special Function
 - Add production date
 - Key status

3 Series – E90 / E91 / E92 / E93 (2006 - 2011)**DME (Digital Engine Electronics) (Feedback from Cyprus)**

- Special Function added
 - Injection quantity compensation
 - Delete engine adaptation value
 - CO adjustment
 - Nitrogen oxide catalytic converter: Regeneration
 - Nitrogen oxide catalytic converter: Replacement

7 Series – E65 / E66 (2002 - 2008)**DME M57 engine added (Feedback from Poland)**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

X5 – E70 (2007 - 2012)**AL (Active steering) (Feedback from Taiwan)**

- Special Function added
 - Start-up of active steering

4 series – F32 / F33 / F36 / F82 / F83 (2013 - present)**ACSM (Crash Safety Module)**

- Special Function added
 - Activation of rollover protection

CTM (Convertible-top module)

- Special Function added
 - CTM service mode

7 series – F01 / F02 / F03 / F04 (2009 - 2015)**EME (Electrical machine electronics)**

- Special Function added
 - Instruct rotor position sensor

SME (Battery management electronics)

- Special Function added
 - Starting up the high-voltage battery unit

X5 – F15 (2013 - present)**SCR (Selective Catalytic Reduction) added**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

LHML (LED main light module, left) added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test

ECU Information**LHMR (LED main light module, right) added**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

X6 – F16 (2014 - present)**SCR (Selective Catalytic Reduction) added**

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

LHML (LED main light module, left) added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

LHMR (LED main light module, right) added

- Basic Function
 - DTC analysis
 - Data analysis
 - Actuation test
 - ECU Information

[Back to Index](#)**LAND ROVER****New Functions Added****Discovery 4 (LR4) 2014 ~ 2015**

PCM (Powertrain Control Module) - 306DT - V6 3.0 Hi Pwr Diesel non cDPF

- Advanced Function
 - Oil Service Counter Reset

Discovery 4 (LR4) 2012 ~ 2013**RLM (Ride Level Control Module)**

- Advanced Function
 - Air Suspension Deflation
 - Air Suspension Inflation
 - Set/Unset Air Suspension Geometry Setup
 - Set/Unset Air Suspension Tight Tolerance Mode (Headlamp Setting)
 - Set/Unset Air Suspension Manufacturing/Freeze Mode

IPC (Instrument Cluster Control Module)

- Advanced Function
- Service Interval Reset (Petrol)

RANGE ROVER 2010 ~ 2012**IPC (Instrument Cluster Control Module)**

- Advanced Function
- Service Interval Reset (Petrol)

RANGE ROVER 2013**IPC (Instrument Cluster Control Module)**

- Advanced Function
- Service Interval Reset (Petrol)

RANGE ROVER SPORT 2010 ~ 2011**IPC (Instrument Cluster Control Module)**

- Advanced Function
- Service Interval Reset (Petrol)

RANGE ROVER SPORT 2012 ~ 2013**IPC (Instrument Cluster Control Module)**

- Advanced Function
- Service Interval Reset (Petrol)

Function Improved**RANGE ROVER SPORT 2006~ 2009 : Cyprus****PCM (Powertrain Control Module)**

- Basic Function
- DTC analysis extended

Bug Fixed**Freelander 2 (LR2) 2007 ~ 2010****PCM (Powertrain Control Module)**

- Advanced Function
- Injector Replacement

Discovery 3 (LR3) 2005 ~ 2009**SASM (Steering Angle Sensor Module)**

- Basic Function
- ECU Information

Range Rover Evoque 2012 ~ 2013**HCMB (Headlamp Control Module B)**

- Communication open stabilized

PSCM (Power Steering Control Module)

- Basic Function
- DTC analysis
- Data analysis

Discovery 4 (LR4) 2010 ~ 2011**ABS (ABS Control Module)**

- Advanced Function
- Brake Bleed

RLM (Ride Level Control Module)

- Advanced Function
- Set/un-set air suspension geometry set-up

Discovery 4 (LR4) 2012 ~ 2013**ABS (ABS Control Module)**

- Advanced Function
- Brake Bleed

PBM (Parking Brake Control Module)

- Advanced Function
- Drive The Parking Brake To The Mounting Position
- Drive The Parking Brake To The Latching Position
- Parking Brake Unjam Procedure

Discovery 4 (LR4) 2014 ~ 2015**ABS (ABS Control Module)**

- Advanced Function
- Brake Bleed

PBM (Parking Brake Control Module)

- Advanced Function
- Drive The Parking Brake To The Mounting Position
- Drive The Parking Brake To The Latching Position
- Parking Brake Unjam Procedure

RANGE ROVER 2010 ~ 2012**ABS (ABS Control Module)**

- Advanced Function
- Brake Bleed

PBM (Parking Brake Control Module)

- Advanced Function
- Parking Brake - Drive The Parking Brake To The Mounting Position
- Parking Brake - Drive The Parking Brake To The Latching Position
- Parking Brake - Parking Brake Unjam Procedure

Range Rover 2014 ~ 2015**CHCMB (Chassis Control Module B)**

- Advanced Function
- Air-suspension inflation
- Air-suspension deflation

CHCM (Chassis Control Module)

- Advanced Function
- Air-suspension inflation

RANGE ROVER 2016 ~**CHCMB (Chassis Control Module B)**

- Advanced Function
- Air-suspension inflation
- Air-suspension deflation

Range Rover Sport 2010 ~ 2011

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

ABS (ABS Control Module)

- Advanced Function
- Brake Bleed

Range Rover Sport 2012 ~ 2013**ABS (ABS Control Module)**

- Advanced Function
- Brake Bleed

PBM (Parking Brake Control Module)

- Advanced Function
 - Parking Brake - Drive The Parking Brake To The Mounting Position
 - Parking Brake - Drive The Parking Brake To The Latching Position
 - Parking Brake - Parking Brake Unjam Procedure

Range Rover Sport 2014 ~ 2015**CHCMB (Chassis Control Module B)**

- Advanced Function
 - Air-suspension inflation
 - Air-suspension deflation

Range Rover Sport 2016**CHCMB (Chassis Control Module B)**

- Advanced Function
 - Air-suspension inflation
 - Air-suspension deflation

Defender 2011**PCM (Powertrain Control Module)**

- Advanced Function
 - High pressure fuel pump replacement reset

[Back to Index](#)**JAGUAR****New Type Added****X-Type 2004****ABS (ABS Control Module)**

- Basic Function
 - DTC Analysis
 - Data Analysis
 - ECU Information

Bug Fixed**XF 2016 ~****ABS (ABS Control Module)**

- Advanced Function
 - Brake bleed
 - Parking Brake Pad Replacement - Release to Service Position

Parking Brake Pad Replacement - Exit Maintenance**Mode Application****Parking Brake Activation****S-Type 2005****GEM (General Electronics Control Module)**

- Basic Function
- DTC Erase

XF 2008 ~ 2009**PCM (Powertrain Control Module)**

- Advanced Function
- Fuel Lift Pump

X-Type 2010 ~ 2011**PCM (Powertrain Control Module)**

- Advanced Function
- Fuel Lift Pump

X-Type 2012**PCM (Powertrain Control Module)**

- Advanced Function
- Fuel Lift Pump

[Back to Index](#)**MERCEDES BENZ****New function added**

A-CLASS(176)/AMG GT(190)/B-CLASS(246)
C-CLASS(204)/C-CLASS(205)/CLA-CLASS(117)/CL-CLASS(217)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/G-CLASS(463)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)/S-CLASS(217)/S-CLASS(222)/SL-CLASS(231)/SLK-CLASS(172)

DTA - Mbrace or TELEAID/GPS Box

- Basic function
 - Actuation Test
- Support function
 - Control unit reset
 - H4/27 (Center instrument panel speaker)
 - Self-test
 - Transfer VIN to control unit 'mbrace'.

A-CLASS(176)/AMG GT(190)/B-CLASS(246)
C-CLASS(204)/C-CLASS(205)/CLA-CLASS(117)/CL-CLASS(217)/G-CLASS(463)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/GLK-CLASS(204)/M-CLASS(166)/S-CLASS(217)/S-CLASS(222)

PTCU - Common powertrain controller

- Support function

Teach in component 'M16/46 (Low-pressure exhaust gas recirculation actuator motor)'.
Teach in component 'M16/57 (Exhaust flap controller actuator motor)'.
Teach-in process after replacement of component 'B28/18 (Low-pressure exhaust gas recirculation differential pressure sensor)'

A-CLASS(176)/AMG GT(190)/B-CLASS(246)
C-CLASS(204)/GLK-CLASS(204)/SL-CLASS(231)

PTS - Parktronic system

- Basic function
 - Actuation Test
- Support function
 - Trailer hitch
 - Volume and frequency
 - Width of license plate bracket

A-CLASS(176)/AMG GT(190)/B-CLASS(246)
C-CLASS(205)/CLA-CLASS(117)/CL-CLASS(217)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(213)/G-CLASS(463)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/S-CLASS(217)/S-CLASS(222)/SL-CLASS(231)/SLK-CLASS(172)/V-CLASS(447)

DAB/SDAR - Digital/Satellite radio

- Basic function
 - Actuation Test

A-CLASS(176)/AMG GT(190)/B-CLASS(246)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)/SL-CLASS(231)/SLK-CLASS(172)/V-CLASS(447)

SG-AWF - Collision prevention assist

- Basic function
 - Actuation Test
- Support function
 - Resetting of learned values of component 'A90 (COLLISION PREVENTION ASSIST controller unit)'

A-CLASS(176)/AMG GT(190)/B-CLASS(246)
CLA-CLASS(117)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)/SL-CLASS(231)/SLK-CLASS(172)

DTR - Distronic

- Support function
 - Calibration of long range radar sensor

A-CLASS(176)/B-CLASS(246)/C-CLASS(204)
C-CLASS(205)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/E-CLASS(213)/GLA-CLASS(156)/GLC-CLASS(253)/GLK-CLASS(204)/SLK-CLASS(172)/Sprinter(907)/V-CLASS(447)

ME/CDI/CNG - Engine control unit

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic function
 - Actuation Test

A-CLASS(176)/B-CLASS(246)/C-CLASS(204)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)

Multifunction control unit

- Support function
 - Control unit reset
 - Reset of coding
 - Restoration of communication with the control unit

A-CLASS(176)/B-CLASS(246)/C-CLASS(204)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)/SL-CLASS(231)/SLK-CLASS(172)/SLS-CLASS(197)

IC - Instrument cluster

- Basic function
 - Actuation Test
- Support function
 - Control unit reset

A-CLASS(176)/B-CLASS(246)/C-CLASS(204)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLK-CLASS(204)/M-CLASS(166)/SLK-CLASS(172)/Sprinter(906)/V-CLASS(447)

NAV - Navigation module

- Basic function
 - Actuation Test
- Support function
 - Unlocking of component 'Navigation module'

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/SL-CLASS(231)/SLK-CLASS(172)

RFK - Backup camera

- Basic function
 - Actuation Test
- Support function
 - Calibration of reversing camera
 - Calibration of steering angle sensor

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/SL-CLASS(231)/SLK-CLASS(172)

SOUND - Sound system

- Basic function
 - Actuation Test
- Support function
 - Restart MOST ring
 - Self-test

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/SL-CLASS(231)/V-CLASS(447)

PTS - Parktronic system

- Support function
 - Trailer hitch
 - Volume and frequency

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

EZS/EIS - Electronic ignition lock

- Support function
 - Activation of control unit 'N73 (Electronic ignition lock control unit)'
 - Teach-in of a spare key

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

SAM-F/SAM-D - Signal acquisition and actuation module front/driver side

- Basic function
 - Actuation Test
- Support function
 - Activate demo mode of exterior lights.
 - Confirmation of battery change
 - Denormalization: Left rear power window
 - Denormalization: Right rear power window
 - Erase alarm sources
 - Reset of reading of frequency counter 'F33k1 (Circuit 30g relay)'

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

TSTH/STH - Stationary heater with remote control

- Support function
 - Activation of stationary heater in test mode
 - Function check
 - Teach in component 'A8/3 (Stationary heater radio remote control transmitter)'.
 - Unlock component 'A6 (Stationary heater heater unit)'.

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/GLA-CLASS(156)

PTCU - Common powertrain controller

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic function
 - Actuation Test
- Support function
 - Teach in component 'B79/3 (Manual transmission main shifter shaft position sensor)'.

A-CLASS(176)/B-CLASS(246)/CLA-CLASS(117)/GLA-CLASS(156)

VG - Transfer case

- Support function
 - Function test of component 'Y68/3 (All-wheel drive solenoid valve)' while driving
 - Replacement of component 'Transfer case'
 - Resetting of learned values of component 'Y68/3 (All-wheel drive solenoid valve)'
 - Resetting the oil service data
 - Y68/3 (All-wheel drive solenoid valve)

A-CLASS(176)/CLA-CLASS(117)/GLA-CLASS(156)/GLE-CLASS(292)

PSD/MSC - Sliding roof control

- Basic function
 - Actuation Test
- Support function
 - Teach-in process of anti-pinch protection

AMG GT(190)/C-CLASS(205)/CL-CLASS(217)/G-CLASS(463)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)/V-CLASS(447)

SOUND - Sound system

- Basic function
 - Actuation Test
- Support function
 - Restart MOST ring

AMG GT(190)/C-CLASS(205)/CL-CLASS(217)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

TPM - Tire pressure monitor

- Support function
 - A69/1 (Left front tire pressure sensor)
 - A69/2 (Right front tire pressure sensor)
 - A69/3 (Left rear tire pressure sensor)
 - A69/4 (Right rear tire pressure sensor)
 - Write identification numbers of tire pressure sensors.

AMG GT(190)/G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

COU [ZBE] - Audio/COMAND operating unit

- Basic function
 - Actuation Test
- Support function
 - Control unit reset

B-CLASS(246)/C-CLASS(204)/CLA-CLASS(117)/E-

CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)

Head-up display

- Basic function
- Actuation Test

B-CLASS(246)/GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)

Sound generator for exhaust system

- Basic function
- Actuation Test

C-CLASS(204)/CL-CLASS(216)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)/S-CLASS(221)/SL-CLASS(231)/SLK-CLASS(172)

SGR - Radar sensors control unit

- Support function
- Reset learned values

C-CLASS(204)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)

AVE-H - Rear audio video unit

- Support function
- Output of test sound
- Self-test of control unit 'DVD player'

C-CLASS(204)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)/S-CLASS(221)

DVD player

- Support function
- Self-test of control unit 'DVD player'

C-CLASS(204)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)/S-CLASS(221)/SL-CLASS(231)/SLK-CLASS(172)

SGR - Radar sensors control unit

- Basic function
- Actuation Test
- Support function
- Reset learned values
- Write VIN

C-CLASS(204)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)/V-CLASS(447)

ES - Electrical power steering

- Support function

Control unit reset

Denormalization of steering limiter

Normalization

Resetting the center position of the steering

C-CLASS(204)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLK-CLASS(204)/SL-CLASS(231)/SLK-CLASS(172)

Suspension

- Support function
- Level calibration
- Reset of compressor operating time

C-CLASS(204)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/GLK-CLASS(204)/M-CLASS(166)

ABS/ESP - Electronic stability program

- Basic function
- Actuation Test
- Support function
- Calibrate separation and intake valves in component 'A7/3 (Traction system hydraulic unit)'
- ESP(R) calibration at standstill
- Reset offset value of signal 'Steering angle'
- Resetting the operating hours counter of component 'M56 (Vacuum pump)'
- Teach in component 'B37/1 (Pedal angle sensor)'
- Teach in control unit 'N30/6 (Regenerative braking system control unit)' again

C-CLASS(205)/CL-CLASS(217)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/E-CLASS(213)/G-CLASS(463)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/S-CLASS(217)/S-CLASS(222)/SL-CLASS(231)/SLK-CLASS(172)/Sprinter(907)

ETC - Electronic transmission control

- Basic function
- Data Analysis
- Actuation Test
- Support function
- Adaptation procedure for torque converter lockup clutch
- Resetting the life data of the switching elements
- Standstill adaptation
- Teach-in of position sensor of park pawl

C-CLASS(205)/CL-CLASS(217)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/E-CLASS(213)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/R-CLASS(251)/S-CLASS(217)/S-CLASS(222)/SL-CLASS(231)/SLK-CLASS(172)

ME/CDI/CNG - Engine control unit

- Basic function
- Actuation Test

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Support function

- Activate fuel pump
- Enabling of engine start after crash event
- Resetting of adaptation values
- Teach in of throttle valve stop
- Teach in process after replacement of the combustion engine

C-CLASS(205)/CL-CLASS(217)/E-CLASS(207)/E-CLASS(212)/S-CLASS(217)/S-CLASS(222)

SG-EM - Power electronics

- Support function
- Lock/Unlock high-voltage component lock

C-CLASS(205)/CL-CLASS(217)/E-CLASS(213)/GLC-CLASS(463)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

AB - Airbag

- Basic function
- Data Analysis

C-CLASS(205)/CL-CLASS(217)/E-CLASS(213)/GLC-CLASS(463)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

IC - Instrument cluster

- Basic function
- Data Analysis
- Actuation Test

C-CLASS(205)/CL-CLASS(217)/E-CLASS(213)/GLA-CLASS(156)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

ABS/ESP - Electronic stability program

- Basic function
- Data Analysis
- Actuation Test
- Support function
- Calibration of component 'Electric parking brake'
- Resetting value 'Clutch grip point'
- Resetting value 'Offset value for steering wheel angle'
- Test of component 'S9/1 (Brake light switch)'

C-CLASS(205)/CL-CLASS(217)/E-CLASS(213)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

FSCU/FSCU-L - Control unit Fuel pump

- Basic function
- Actuation Test

C-CLASS(205)/CL-CLASS(217)/E-CLASS(213)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

Suspension

- Basic function
- Actuation Test
- Support function

Level calibration

Reset of compressor operating time

C-CLASS(205)/CL-CLASS(217)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

ATA - ATA [EDW]/tow-away/interior protection

- Basic function
- Actuation Test

C-CLASS(205)/CL-CLASS(217)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

MFK - Multifunction camera

- Basic function
- Actuation Test

C-CLASS(205)/CL-CLASS(217)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

PSD/MSD - Sliding roof control

- Basic function
- Actuation Test
- Support function
- Teach-in process of anti-pinch protection

C-CLASS(205)/CL-CLASS(217)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

SG-AWF - Collision prevention assist

- Support function
- Resetting of learned values of component 'A90 (COLLISION PREVENTION ASSIST controller unit)'

C-CLASS(205)/CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/M-CLASS(166)/S-CLASS(222)/Sprinter(906)/Sprinter(907)

ME/CDI/CNG - Engine control unit

- Basic function
- Actuation Test
- Support function
- Activate fuel pump.
- Injector injection quantity adjustment
- Replace component 'Diesel particulate filter'.
- Reset learned values for AdBlue(R) metering.
- Reset learned values of components 'NOx sensor upstream of SCR catalytic converter' and 'NOx sensor downstream of SCR catalytic converter'.
- Reset values of HFM drift compensation.
- Reset values of quantity mean value adaptation.
- Teach in of throttle valve stop
- Teach-in of diesel particulate filter after replacement of control unit 'N3/9 (CDI control unit)'
- Teach-in of intake port shutoff
- Teach-in process after replacement of component 'Air filter'
- Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of SCR

catalytic converter)'

Teach-in process after replacement of component

'B28/8 (Differential pressure sensor (DPF))'

Teach-in process after replacement of component

'G3/2 (Oxygen sensor upstream of catalytic converter)'

Teach-in process after replacement of component

'Oxidation catalytic converter'

Teach-in process after replacement of component

'SCR catalytic converter'

Teach-in process after replacement of component

'Y129 (AdBlue(R) metering valve)'

Teach-in process after replacement of component

'Y74 (Pressure regulating valve)'

Teach-in process after replacement of component

'Y94 (Quantity control valve)'

C-CLASS(205)/E-CLASS(213)/G-CLASS(463)/GLA-CLASS(156)/GLC-CLASS(253)/S-CLASS(222)/Sprinter(907)

AHE - Trailer recognition

- Basic function

Actuation Test

- Support function

Erasing of initialization values

Initialization

C-CLASS(205)/E-CLASS(213)/G-CLASS(463)/GLA-CLASS(156)/S-CLASS(222)

ME/CDI/CNG - Engine control unit

- Basic function

Data Analysis

Actuation Test

- Support function

Activate fuel pump.

Enabling of engine start after crash event

Injector injection quantity adjustment

Resetting the event memory for loss of

synchronization between crankshaft and camshaft

Teach-in process after replacement of component

'Oxidation catalytic converter'

Teach-in process after replacement of component

'Y74 (Pressure regulating valve)'

Teach-in process after replacement of component

'Y94 (Quantity control valve)'

Teach-in process of component 'M16/46 (Low-pressure exhaust gas recirculation actuator motor)'

Teach-in process of component 'M16/6 (Throttle valve actuator)'

Teach-in process of component 'M55 (Intake port shutoff actuator motor)'

Teach-in process of component 'Y27/9 (Exhaust gas recirculation actuator)'

CL-CLASS(216)/CLS-CLASS(218)/E-CLASS(207)/E-

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/S-CLASS(221)/SL-CLASS(231)

DSP/PPAMKS - Pneumatic pump for seat

- Basic function

Actuation Test

CL-CLASS(216)/S-CLASS(221)

AAC - Automatic air conditioning

- Support function

Breaking in procedure after replacement of refrigerant compressor

Teach in of actuator motors after actuator motor replacement

Teach in of rotary potentiometers for the air outlets

CL-CLASS(217)/G-CLASS(463)/S-CLASS(217)/S-CLASS(222)/SL-CLASS(231)

ME/CDI/CNG - Engine control unit

- Basic function

Actuation Test

- Support function

Activation of fuel pump

Resetting of adaptation values

Teach in of throttle valve stop

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

360' - Camera

- Support function

360' camera

Calibration of 360' camera at front end

Calibration of 360' camera at rear end

Calibration of 360' camera in left outside mirror

Calibration of 360' camera in right outside mirror

Calibration of multiple 360' cameras

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

ABS/ESP - Electronic stability program

- Basic function

Actuation Test

- Support function

Activate function 'Tire pressure loss warning'.

ESP(R) calibration at standstill

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

COU [ZBE] - Audio/COMAND operating unit

- Basic function

Actuation Test

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

DS-LF/AMKS-LF - Dynamic/Active seat

- Basic function

Actuation Test

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

DS-RF/AMKS-RF - Dynamic/Active seat

- Basic function
- Actuation Test

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

ES - Electrical power steering

- Support function
- Reset learned values
- Variant coding reset

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

NSA - Night View Assist

- Basic function
- Actuation Test
- Support function
- Calibration

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

PSD/MSC - Sliding roof control

- Basic function
- Actuation Test

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

Suspension

- Basic function
- Actuation Test
- Support function
- Calibration of component 'B24/12 (ABC lateral acceleration sensor)'
- Calibration of stroke of suspension struts
- Control unit reset
- Level calibration
- Release of system pressure
- Resetting of calibration values
- Vehicle load condition comparison

CL-CLASS(217)/S-CLASS(217)/S-CLASS(222)

ZAN - Audio/COMAND display

- Basic function
- Actuation Test
- Support function
- Control unit reset

CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/E-CLASS(213)/G-CLASS(463)/GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)/S-CLASS(222)/Sprinter(907)

ME/CDI/CNG - Engine control unit

- Support function
- Activate fuel pump.
- Injector injection quantity adjustment
- Injector injection quantity adjustment (Manual entry)
- Quick teach-in of values of zero quantity calibration
- Replace component 'Diesel particulate filter'.
- Reset learned values for AdBlue(R) metering.

Reset learned values of components 'NOx sensor upstream/downstream of SCR catalytic converter'

Reset values of HFM drift compensation.

Reset values of quantity mean value adaptation.

Teach in of throttle valve stop

Teach in used diesel particulate filter.

Teach-in process after replacement of component 'Air filter'

Teach-in process after replacement of component 'B16/15 (Temperature sensor upstream of SCR catalytic converter)'

Teach-in process after replacement of component 'B28/8 (Differential pressure sensor (DPF))'

Teach-in process after replacement of component 'G3/2 (Oxygen sensor upstream of catalytic converter)'

Teach-in process after replacement of component 'Oxidation catalytic converter'

Teach-in process after replacement of component 'SCR catalytic converter'

Teach-in process after replacement of component 'Y129 (AdBlue(R) metering valve)'

Teach-in process after replacement of component 'Y74 (Pressure regulating valve)'

CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

360' - Camera

- Basic function
- Actuation Test
- Support function
- Calibration of 360' camera at front end
- Calibration of 360' camera at rear end
- Calibration of 360' camera in left outside mirror
- Calibration of 360' camera in right outside mirror
- Calibration of multiple 360' cameras

CLS-CLASS(218)/E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)/S-CLASS(221)/SL-CLASS(231)/SLS-CLASS(197)

SOUND - Sound system

- Basic function
- Actuation Test
- Support function
- Electrical self-test of speakers
- Fan self-test
- LEDs self-test
- Restart MOST ring
- Test of microphone for sound system

CLS-CLASS(218)/GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)

PTS - Parktronic system

- Basic function

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Actuation Test

- Support function
 - Trailer hitch
 - Volume and frequency
 - Width of license plate bracket

E-CLASS(207)/E-CLASS(212)/GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)

360' - Camera

- Support function
 - 360' camera
 - Calibration of 360' camera at front end
 - Calibration of 360' camera at rear end
 - Calibration of 360' camera in left outside mirror
 - Calibration of 360' camera in right outside mirror
 - Calibration of multiple 360' cameras

E-CLASS(211)/R-CLASS(251)

Suspension

- Support function
 - Fill left rear suspension struts
 - Fill right rear suspension struts
 - Move toward calibrated level (automatic)
 - Move toward calibrated level (manually)
 - Pneumatic test of component A9/1 (AIRmatic compressor unit)

G-CLASS(461)/Sprinter(906)

ME/CDI/CNG - Engine control unit

- Basic function
 - Actuation Test
- Support function
 - Activate fuel pump
 - Adjustment of injector injection quantities
 - B2/14 (Hot film mass air flow sensor)
 - Deletion of values
 - Exhaust gas recirculation valve teach-in
 - Inspect charge air system for leaks
 - Learning of the throttle valve stop
 - Regeneration of diesel particulate filter
 - Regeneration of diesel particulate filter when driving
 - Reset fill factor of air filter
 - Reset quantity mean value adaptation data
 - Reset values for HFM drift compensation
 - Resetting the lambda values
 - Teach in component Diesel oxidation catalytic converter
 - Teach in component Differential pressure sensor
 - Teach in component Pressure control valve
 - Teach-in process after replacement of component DPF
 - Teaching in the DPF after replacing the engine control unit
 - Test of compression
 - Write VIN

G-CLASS(463)/GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

AAC - Automatic air conditioning

- Basic function
 - Actuation Test
- Support function
 - Breaking-in of refrigerant compressor
 - Normalization of actuator motors
 - Teach-in of actuator motors

G-CLASS(463)/S-CLASS(222)

AVE-H - Rear audio video unit

- Basic function
 - Actuation Test
- Support function
 - Control unit reset
 - Self-test

G-CLASS(463)/S-CLASS(222)

D-FOL - Display in left rear passenger

- Basic function
 - Actuation Test
- Support function
 - Control unit reset

G-CLASS(463)/S-CLASS(222)

D-FOR - Display in right rear passenger

- Basic function
 - Actuation Test
- Support function
 - Control unit reset

G-CLASS(463)/S-CLASS(222)

Left rear ESE - Left electrical seat adjustment

- Basic function
 - Actuation Test

G-CLASS(463)/S-CLASS(222)

Right rear ESE - Right electrical seat adjustment

- Basic function
 - Actuation Test

GLA-CLASS(156)/GLC-CLASS(253)/GL-CLASS(166)/M-CLASS(166)/S-CLASS(222)

SG-EM - Power electronics

- Support function
 - Perform voltage adjustment
 - Reset of 'L20 (Electric machine rotor position sensor)' component

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

ABS/ESP - Electronic stability program

- Basic function

- Actuation Test
- Support function
 - Calibration of component 'A7/3 (Traction system hydraulic unit)'
 - Calibration of component 'B24/15 (Yaw rate sensor for lateral and longitudinal acceleration)'

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

DS-LF/AMKS-LF - Dynamic/Active seat

- Support function
 - Actuation of air cushion of lower lumbar support
 - Actuation of air cushion of upper lumbar support
 - Actuation of air cushion 'Seat cushion length'
 - Actuation of air cushions in seat side bolsters
 - Check compressed air line between control unit 'N32/29 (Driver multicontour seat control unit)' and air cushion for kinks and blockage

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

DS-RF/AMKS-RF - Dynamic/Active seat

- Support function
 - Actuation of air cushion of lower lumbar support
 - Actuation of air cushion of upper lumbar support
 - Actuation of air cushion 'Seat cushion length'
 - Actuation of air cushions in seat side bolsters
 - Check compressed air line between control unit 'N32/30 (Front passenger multicontour seat control unit)' and air cushion for kinks and blockage

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

HBF - Rear control panel

- Basic function
 - Actuation Test

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

PSD/MSC - Sliding roof control

- Basic function
 - Actuation Test
- Support function
 - Teach-in process of anti-pinch protection

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

RevETR-LF - Left front reversible emergency tensioning retractor

- Support function
 - A76 (Left front reversible emergency tensioning retractor)

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

RevETR-RF - Right front reversible emergency tensioning retractor

- Support function
 - A76/1 (Right front reversible emergency tensioning retractor)

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

SAM-R/BSN - Rear signal acquisition and actuation module/Battery sensor

- Basic function
 - Actuation Test

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

Suspension

- Basic function
 - Actuation Test
- Support function
 - High-pressure test
 - Teach in of sensors

GLA-CLASS(156)/GL-CLASS(166)/GLE-CLASS(292)/M-CLASS(166)

VG - Transfer case

- Support function
 - Actuate component 'Interaxle differential lock'
 - Actuate component 'Y108 (Transfer case switchover magnet)'
 - Calibration of component 'N15/7 (Transfer case control module)'
 - Shift transfer case

GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)

HKS - Tailgate control

- Basic function
 - Actuation Test
- Support function
 - N121/1 (Liftgate control control unit)

GLA-CLASS(156)/GL-CLASS(166)/M-CLASS(166)

Suspension

- Basic function
 - Actuation Test
 - Support function
 - Level calibration
 - Reset of compressor operating time

GLA-CLASS(156)/S-CLASS(222)

ABS/ESP - Electronic stability program

- Support function
 - Normalization M64/1 (Left rear seat active belt buckle motor)
 - Normalization M64/2 (Right rear seat active belt buckle motor)

Replace component 'M64/1 (Left rear seat active belt buckle motor)'.
Replace component 'M64/2 (Right rear seat active belt buckle motor)'.

S-CLASS(222)

AHE - Trailer recognition

- Basic function
- Actuation Test
- Support function
- Erasing of initialization values
- Initialization

S-CLASS(222)

FLANFS - Fire extinguishing system and emergency fresh air system

- Basic function
- Actuation Test

S-CLASS(222)

TSTH/STH - Stationary heater with remote control

- Support function
- Activation of stationary heater in test mode
- Measurement of fuel flow rate
- Unlock component 'A6n1 (Stationary heater control unit)'.

Sprinter(906)

ABS/ESP - Electronic stability program

- Basic function
- Actuation Test
- Support function
- Bleeding routine in exceptional cases
- Calibration of component [Acceleration sensor]

Sprinter(906)/Sprinter(907)

ME/CDI/CNG - Engine control unit

- Basic function
- Actuation Test
- Support function
- B2/12 (Hot film mass air flow sensor)
- Test of compression

Sprinter(909)

IC - Instrument cluster

- Basic function
- Actuation Test

V-CLASS(447)

AAC - Automatic air conditioning

- Basic function
- Data Analysis
- Actuation Test

V-CLASS(447)

ABS/ESP - Electronic stability program

- Basic function
- Data Analysis
- Actuation Test
- Support function
- Bleeding routine in exceptional cases
- Calibration of yaw rate sensor for lateral and longitudinal acceleration

V-CLASS(447)

EFB - Electric parking brake

- Basic function
- Actuation Test
- Support function
- Bedding in brake : Driving mode
- Bedding in brake : Dynamometer mode
- Calibration
- Control unit reset
- Move to the assembly position

V-CLASS(447)

IC - Instrument cluster

- Basic function
- Data Analysis
- Actuation Test

V-CLASS(447)

ME/CDI/CNG - Engine control unit

- Basic function
- Data Analysis
- Actuation Test
- Support function
- Activate fuel pump
- Compression test
- Initialization after replacement of components: Air filter
- Initialization after replacement of components: Diesel particulate filter / Oxidation catalytic converter
- Initialization after replacement of components: Differential pressure sensor of diesel particular filter
- Initialization after replacement of components: Hot film mass air flow sensor
- Initialization after replacement of components: Intake port shutoff
- Initialization after replacement of components: NOx sensors
- Initialization after replacement of components: Oxygen sensor
- Initialization after replacement of components: Pressure regulator valve
- Initialization after replacement of components: Quantity control valve
- Initialization after replacement of components: Reset learned values for AdBlue(R) metering.

Initialization after replacement of components: SCR catalytic converter
Initialization after replacement of components: Temperature sensor upstream of SCR catalytic converter
Initialization after replacement of components: Throttle valve
Initialization after replacement of components: Y130 (AdBlue(R) injection valve)
Injector injection quantity adjustment (Manual entry)
Quick teach-in of values of zero quantity calibration
Regeneration of diesel particulate filter at standstill
Regeneration of the diesel particulate filter while driving
Reset values of HFM drift compensation
Reset values of quantity mean value adaptation
Teach in diesel particulate filter again

New system added

C-CLASS(205)/CL-CLASS(217)/GLC-CLASS(253)/S-CLASS(217)/S-CLASS(222)

DTA - Mbrace or TELEAID/GPS Box

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

AGW - Audio gateway

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

AUDIO/COMAND

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

EZS/EIS - Electronic ignition lock

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

ME/CDI/CNG - Engine control unit

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

PTS - Parktronic system

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

RD - Radio

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(906)

TPM - Tire pressure monitor

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(909)

KG/RFL - KEYLESS GO/Radio frequency locking/Electric central locking

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

Sprinter(909)

ME/CDI/CNG - Engine control unit

- Basic function
- DTC Analysis
- DTC EraseMemory
- ECU Information Display

New chassis added

- Sprinter(909)

Bug fixed

- 360' - Camera
- AAC - Automatic air conditioning
- AB - Airbag
- ABS/ESP - Electronic stability program
- AGW - Audio gateway
- AHE - Trailer recognition
- ATA - ATA [EDW]/tow-away/interior protection
- AUDIO/COMAND
- AVE-H - Rear audio video unit
- COU [ZBE] - Audio/COMAND operating unit
- DAB/SDAR - Digital/Satellite radio
- D-FOL - Display in left rear passenger
- D-FOR - Display in right rear passenger
- DS-LF/AMKS-LF - Dynamic/Active seat
- DSP/PPAMKS - Pneumatic pump for seat

- DS-RF/AMKS-RF - Dynamic/Active seat
- DTA - Mbrace or TELEAID/GPS Box
- DTR - DISTRONIC
- DVD player
- EFB - Electric parking brake
- ES - Electrical power steering
- ESM - Electronic selector module
- ETC - Electronic transmission control
- EZS/EIS - Electronic ignition lock
- FLANFS - Fire extinguishing system and emergency fresh air system
- FSCU/FSCU-L - Control unit Fuel pump
- HBF - Rear control panel
- Head-up display
- HKS - Tailgate control
- IC - Instrument cluster
- ISM - Intelligent servo module
- KG/RFL - KEYLESS GO/Radio frequency locking/Electric central locking
- LCP/HBF - Lower/Rear control panel
- Left rear ESE - Left electrical seat adjustment
- ME/CDI/CNG - Engine control unit
- MFK - Multifunction camera
- Multifunction control unit
- NAV - Navigation module
- NSA - Night View Assist
- OCP - Overhead control panel
- PSD/MS - Sliding roof control
- PSE - Pneumatic system equipment
- PTCU - Common powertrain controller
- PTS - Parktronic system
- RD - Radio
- RevETR-LF - Left front reversible emergency tensioning retractor
- RevETR-RF - Right front reversible emergency tensioning retractor
- RFK - Backup camera
- Right rear ESE - Right electrical seat adjustment
- SAM-F/SAM-D - Signal acquisition and actuation module front/driver side
- SAM-P - Passenger-side signal acquisition and actuation module
- SAM-R/BSN - Rear signal acquisition and actuation module/Battery sensor
- SCM [MRM] - Steering column module
- SCR - Selective catalytic reduction
- SG-AWF - Collision prevention assist
- SG-EM - Power electronics
- SGR - Radar sensors control unit
- SOUND - Sound system
- Sound generator for exhaust system
- Suspension
- TPM - Tire pressure monitor
- TSG - Driver door
- TSTH/STH - Stationary heater with remote control

- UCP - Upper control panel
- VG - Transfer case
- ZAN - Audio/COMAND display

[Back to Index](#)

FIAT / ALFA ROMEO / LANCIA

New System Added

Magneti Marelli IAW 9GF CF6/EOBD Injection (1.2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Reset self-learned functions
 - Self-adaptation parameters reset
 - Phonic wheel learn reset
 - Throttle position learning
 - Replacement of timing sensor or cam
 - Replacement of RPM sensor or distribution belt
 - Clutch pedal learning
 - Neutral signal learn

Bosch EDC17C49 CF5+/EOBD Diesel Injection (1.6, 2.0)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Oil change (only for version with DPF)
 - Reset self-learned functions
 - Particle filter replacement (only for version with DPF)
 - Particle filter regeneration
 - Replacement of control unit and injectors
 - Rail pressure sensor replacement
 - Differential pressure sensor replacement (only for version with DPF)
 - Replacement of Lambda sensor
 - Air flow meter sensor replacement
 - EGR valve replacement
 - Glow plug preheating circuit test
 - Clutch pedal learning
 - Neutral signal learn
 - Speed limit
 - Injector programming

Bosch Motronic ME 2.1 (2.5 V6, 3.0 V6)

- Basic function
 - DTC Analysis

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Data Analysis
Actuation Test
ECU Information Display

Magneti Marelli IAW 59F Injection

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Self-adaptation reset
 - Phonic wheel learn reset

Bosch Motronic ME7.3H4 EOBD Injection

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display

Marelli 8F3 CF5/EOBD Diesel Injection (1.3)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Oil change (only for version with DPF)
 - Reset self-learned functions
 - Particle filter replacement (only for version with DPF)
 - Particle filter regeneration
 - Replacement of control unit and injectors
 - Rail pressure sensor replacement
 - Differential pressure sensor replacement (only for version with DPF)
 - Replacement of Lambda sensor
 - Air flow meter sensor replacement
 - Phonic wheel replacement
 - Glow plug preheating circuit test
 - Injector programming

Marelli SELESPEED CFC328F Automatic Gearbox

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Accumulator depressurization
 - Clutch drain
 - Production/Service final calibration
 - Clutch self-calibration enable
 - Actuator base adjustment

Longitudinal acceleration signal learn
Reset self-learned functions
Delete statistical data
Clutch replacement
Electropump replacement
Steering wheel levers replacement

Body Computer Marelli

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display
- Support function
 - Power supply mode
 - Indicators command
 - Door opening/closing acoustic signal

AISIN Q-System Automatic Gearbox

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display

Bosch ABS 5.7

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information Display

[Back to Index](#)**PEUGEOT****108 Vehicle Added****Engine (ME17_9_52)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Electric throttle learning
 - VIN

Engine (V46)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

ECU Information
- Special Function
 Initialising the auto adaptive
 Matching
 Replacement of the motorised butterfly housing
 Replacement of the accelerator pedal
 Replacement of injectors
 Replacement of the exhaust camshaft dephasing
solenoid valve
 Replacement of the inlet camshaft dephasing
solenoid valve
 Engine speed sensor programming procedure

ABS (RBV)

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test
- Special Function
 Air Bleeding(Japan Domestic)
 Air Bleeding(International)
 Accumulator 0 Down Drive
 Yaw Rate / G Sensor 0 Point Clear (For ECB)
 Linear Valve Learning Value Initialization
 Back Up Memory Clear
 Test Mode
 Inspection Mode
 ECB Utility
 VSC Sensor Neutral Memorization

EPS (EPS_T)

- Basic function
 DTC Analysis
 Data Analysis
- Special Function
 Torque Sensor Adjustment

Air conditioning

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test
 ECU Information
- Special Function
 Automatic setting of all of the reduction motors

Hands-free unit

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test

Instrument panel

- Basic function
 DTC Analysis

Data Analysis
Actuation Test

Airbag

- Basic function
 DTC Analysis
 Data Analysis

Stop Start ECU

- Basic function
 DTC Analysis
- Special Function
 Initialisation of the air conditioning presence
information

 Calibration of the nominal value of the accelerometer
 Clearing the nominal value of the accelerometer
 Replacement of starter motor

607 Vehicle Added**Engine (3FZ MM4MP2)**

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test
 ECU Information
- Special Function
 Initialising the auto adaptive

Engine (RFN MM4MP2 (Motorised butterfly))

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test
 ECU Information
- Special Function
 Initialising the auto adaptive

Engine (RFN MM48P (Mechanical throttle housing))

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test
 ECU Information
- Special Function
 Initialising the auto adaptive

Engine (R6F MM4.8P)

- Basic function
 DTC Analysis
 Data Analysis
 Actuation Test
 ECU Information
- Special Function
 Initialising the auto adaptive

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Engine (XFX BOSCH ME7.4.6)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive Configuration

Engine (4HX BOSCH EDC15C2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (RHS BOSCH EDC15C2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (RHZ BOSCH EDC15C2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Diesel fuel additive control unit

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Automatic gearbox (RFN MM48P (Mechanical throttle housing))

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - AT Initialising the autoadaptive
 - Oil wear counter

Built in systems interface

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Multifunction display

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Various Display Modes
 - AMF Configuration of options
 - Various User Languages

Parking aid

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Radio

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - VIN code
 - Radio Configuration

CD player

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - CD changer configuration

Instrument panel

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Instrument panel Configuration

Carphone

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information
- Special Function
 - Instrument panel Configuration

Hands Free Kit

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Instrument panel Configuration

On-board navigation system

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

Visibility Lighting

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation

Airbags

- Basic function
 - DTC Analysis
 - ECU Information

Driver's door control pad

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Passenger's door control pad

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Heating ventilation

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Storing of the driving position

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test

ECU Information[Back to Index](#)**CITROEN****Xsara Picasso Vehicle Added****Engine (RFN MM6LP)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (6FZ SAGEM S2000PM1)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive Configuration

Engine (6FZ SAGEM S2000PM2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive Configuration

Engine (1.6L NFV BOSCH M744)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (NFS BOSCH ME745)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Initialising the auto adaptive

Engine (NFU BOSCH ME745)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (N6A BOSCH ME745)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (NFR BOSCH ME745)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (NFS BOSCH ME749)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (NFU BOSCH ME749)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (N6A BOSCH ME749)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Engine (2.0L BOSCH EDC15C2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test

ECU Information

Engine (9HY BOSCH EDC16C3 DV6TED4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Injectors IMA 4pts
 - Injectors IMA 5pts
 - Forced Regeneration Of The Particulate Filter While Stationary
 - Forced regeneration of the Particulate filter while driving
 - Particulate Filter Replacement

Engine (9HZ BOSCH EDC16C34 DV6TED4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Injectors IMA 4pts
 - Injectors IMA 5pts
 - Forced Regeneration Of The Particulate Filter While Stationary
 - Forced regeneration of the Particulate filter while driving
 - Particulate Filter Replacement

Gearbox ECU (Auto gearbox BVA_AL4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - AT Initialising the autoadaptive
 - Oil wear counter

Gearbox ECU (Controlled manual gearbox ECU)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Programming sequence
 - Gearbox actuator initialisation
 - Set gearbox actuator to removal position
 - Set gearbox actuator to refitting position

Airbag

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic function
 - DTC Analysis
 - ECU Information
- Special Function
 - Airbag Lock
 - Airbag Unlock

Anti-lock brake system (ABS8.1 BOSCH)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Anti-lock brake system (ABS8 BOSCH)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Anti-lock brake system (ESP8.1 BOSCH)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Longitudinal acceleration sensor calibration
 - Steering wheel angle sensor calibration

Anti-lock brake system (ESP BOSCH5.7)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Steering wheel angle sensor calibration

Anti-lock brake system (ESP8 BOSCH)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Steering wheel angle sensor calibration

Anti-lock brake system (ABS8.1 BOSCH)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

- Special Function
 - Initialising the auto adaptive Configuration

BSI

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - ECUs Present
 - Maintenance
 - VIN code
 - Programming by default
 - customer mode
 - Engine immobiliser code and key
 - Resetting to zero
 - [Option] Heating/ventilation
 - [Option] Warnings
 - [Option] Lighting/Signaling
 - [Option] Visibility
 - [Option] Opening and access
 - [Option] Engine compartment
 - [Option] Passenger compartment
 - [Option] Locking/Unlocking
 - [Option] Fuel information
 - [Option] Miscellaneous
 - [Option] Alarm
 - [Option] Show-Room

Instrument panel

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Radio

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - VIN code
 - Radio Configuration

CD player

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function

CD changer configuration	sensor
Parking aid	Replacement of the fuel flow regulator
- Basic function	Replacement of the ancillary drive belt
DTC Analysis	Replacement of the exhaust manifold
Data Analysis	Replacement of the turbocharger
Actuation Test	Replacement of starter motor
ECU Information	Replacement of the clutch
Alarm	Replacement of the engine flywheel
- Basic function	Replacement of the diesel high pressure rail
DTC Analysis	Programming the air mixer stops
Actuation Test	Programming the EGR valve stops
ECU Information	Programming of the stops of the turbocharger
- Special Function	Cleaning the EGR valve
Alarm Configuration	Cleaning the EGR exchanger bypass
Switch module under the steering wheel	Particle filter regeneration
- Basic function	Reinitialisation of the denox system faults
DTC Analysis	Temporary reactivation of the stop and start function
Data Analysis	Filling of the additive reservoir or pouch
ECU Information	Filling of the urea reservoir
Diesel additive function	Draining and filling of the urea solution reservoir
- Basic function	Replacement of the high pressure pump
DTC Analysis	Replacement of the low pressure fuel pump+ of the
Data Analysis	fuel filter or of the pipes
Actuation Test	Replacement of the air mixer
ECU Information	Replacement of the particle emission filter
- Special Function	differential pressure sensor
Particle filter replacement	Particle filter replacement
Additive tank top up or replacement(low additive level LED illuminated)	Replacement of the nox sensor
Rain sensor Brightness	Replacement of the precatalyser
- Basic function	Replacement of the denox catalytic converter
DTC Analysis	Replacement of the reservoir of the gauge pump
Data Analysis	module of the denox system pipes or of the urea injector
ECU Information	Replacement of the cylinder block
Multifunction display	Replacement of the cylinder head without the air
- Basic function	flow sensor
DTC Analysis	Replacement of the cylinder head with the air flow
Engine (DCM6.2)	sensor
- Basic function	Replacement of the battery
DTC Analysis	Replacement of the flowmeter
Data Analysis	Replacement of the engine block without the
Actuation Test	flowmeter
ECU Information	Replacement of the camshaft
- Special Function	Replacement of the reversible alternator
Replacement of the EGR valve	Replacement of the power accumulator or of the
Replacement of the engine block with the air flow	voltage retaining device
Engine (VD46)	
- Basic function	
DTC Analysis	
Data Analysis	
Actuation Test	
ECU Information	
- Special Function	
Replacement of the exhaust manifold	
Initialisation of the autoadaptive values	

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Temporary reactivation of the stop and start function
(for a maximum distance of 10 km)

- Work on the ancillaries battery
- Replacement of one or more petrol injectors
- Replacement of the inlet camshaft dephaser
- Replacement of the exhaust camshaft dephaser
- Cylinder head replacement
- Replacement of the turbocharger
- Replacement of the ancillaries battery
- Replacement of starter motor
- Replacement of the clutch
- Replacement of the alternator
- Replacement of the turbocharging pressure regulation valve
- Replacement of the engine flywheel
- Replacement of the accelerator pedal
- Replacement of the motorised butterfly housing

Engine (MEV17_4_2 EP6C)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative
 - Motorised throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (MEV17_4_2 EP6CM)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative
 - Motorised throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor

- Inlet and exhaust camshaft dephasing electrovalve
- Inlet pressure sensor
- Variable valve lift motor
- Variable valve lift system position sensor
- Canister discharge electrovalve
- Timing

Engine (5FV MED17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (5FN MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (5FM MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (5FE MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (9HR-DV6CTED)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement of Injector
 - Initialisation of diesel injector
 - Forced regeneration vehicle stationary
 - Change of high pressure pump with its fuel flow regulator

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Replacement of the EGR valve
 Change of air mixer
 Replacement of the turbo
 Replacement of the air flow sensor
 Replacement of the engine block without the air flow sensor
 Replacement of the engine block with the air flow sensor
 Replacement of the additive reservoir of the pump or of the pipes
 Replacement of the particle emission filter
 Replacement of the oxygen sensor

Engine (9HP-DV6DTE4-92CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle

Stationary

Replacement Of The Particle Emission Filter
 Initialisation Of The 4 Diesel Injectors
 Change of EGR Valve
 Replacement Of The EGR Exchanger
 Change Of Air Mixer
 Replacement Of The Turbo
 Replacement Of The Additive Reservoir Of Pump

Or Pipes

Replacement Of The High Pressure Pump Or

Regulation Valve

Replacement Of The Exhaust Manifold
 Replacement Of The Cylinder Head
 Replacement Of The Diesel High Pressure Rail
 Filling Of The Diesel Additive Tank
 Replacement Of The Oxygen Sensor
 Replacement of 4 injectors

Engine (9HJ-DV6DTE4-90CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle

Stationary

Replacement Of The Particle Emission Filter
 Initialisation Of The 4 Diesel Injectors
 Change of EGR Valve
 Replacement Of The EGR Exchanger
 Replacement Of The Additive Reservoir Of Pump

Or Pipes

Replacement Of The High Pressure Pump Or

Regulation Valve

Replacement Of The Exhaust Manifold

Replacement Of The Cylinder Head
 Replacement Of The Diesel High Pressure Rail
 Filling Of The Diesel Additive Tank
 Replacement of 4 injectors

Engine (RHH-DW10CTED4-163CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle

Stationary

Change of EGR valve
 Change of air mixer
 Replacement of the turbo
 Replacement of the particle emission filter
 Replacement of the oxygen sensor
 Replacement of the EGR exchanger
 Filling of the diesel additive adding reservoir
 Replacement of the ancillary drive belt
 Replacement of the exhaust manifold
 Air flow sensor replacement
 Replacement of the differential pressure sensor
 Replacement of the high pressure pump or the flow regulation valve

Replacement of the diesel additive reservoir+ pump/pipes

Replacement of the diesel high pressure rail
 Replacement of the additive reservoir+ pump or pipes

Filling of the diesel additive tank
 Change of engine block without the flowmeter
 Change of engine block with the flowmeter
 Replacement of the cylinder head

Engine (RHE-DW10CTED4-150CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle

Stationary

Change of EGR valve
 Change of air mixer
 Replacement of the turbo
 Replacement of the particle emission filter
 Replacement of the oxygen sensor
 Replacement of the EGR exchanger
 Filling of the diesel additive adding reservoir
 Replacement of the ancillary drive belt
 Replacement of the exhaust manifold

Air flow sensor replacement
Replacement of the differential pressure sensor
Replacement of the high pressure pump or the flow regulation valve
Replacement of the diesel additive reservoir+ pump/pipes
Replacement of the diesel high pressure rail
Replacement of the additive reservoir+ pump or pipes
Filling of the diesel additive tank
Change of engine block without the flowmeter
Change of engine block with the flowmeter
Replacement of the cylinder head

Engine (5FU MEVD17_4_2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptive
 - Motorised throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (ME745 NFU)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (ME745 N6A)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (ME745 N6B)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (EDC17C60)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement of 4 injectors
 - Replacement of the EGR valve
 - Replacement of the turbocharger
 - Replacement of the clutch
 - Replacement of the engine flywheel
 - Programming the air mixer stops
 - Programming the EGR valve stops
 - Programming of the stops of the turbocharger
 - Cleaning the EGR valve
 - Particle filter regeneration
 - Filling of the additive reservoir or pouch
 - Filling of the urea reservoir
 - Draining and filling of the urea solution reservoir
 - Replacement of the high pressure pump
 - Replacement of the low pressure fuel pump+ of the fuel filter or of the pipes
 - Replacement of the air mixer
 - Particle filter replacement
 - Replacement of the precatyser
 - Replacement of the cylinder block
 - Replacement of the battery
 - Replacement of the flowmeter
 - Regeneration of the denox catalytic converter
 - Reinitialization of the denox system faults
 - Reinitialization following replacement of the urea injector
 - Forcing of the stop and start
 - Replacement of the diesel additive reservoir+ of the pump or of the pipes
 - Replacement of the NOX sensor
 - Replacement of the deNOX catalytic converter
 - Replacement of the urea injector
 - Replacement of the denox system reservoir+ gauge-pump module or pipes

Engine (MED17_4_4)

- Basic function
 - DTC Analysis
 - Data Analysis

Actuation Test
ECU Information
- Special Function
Replacement of the exhaust manifold
Initialisation of the autoadaptive values
Temporary reactivation of the stop and start function
(for a maximum distance of 10 km)
Work on the ancillaries battery
Replacement of one or more petrol injectors
Replacement of the inlet camshaft dephaser
Cylinder head replacement
Replacement of the turbocharger
Replacement of the ancillaries battery
Replacement of starter motor
Replacement of the clutch
Replacement of the alternator
Replacement of the turbocharging pressure
regulation valve
Replacement of the engine flywheel
Replacement of the motorised butterfly housing
Work on the timing belt

Engine (V46.32 Y2)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function
Initialising the auto adaptive
Motorised throttle unit
Injectors
Inlet camshaft dephaser
Inlet camshaft dephaser solenoid valve
Cylinder reference sensor
Accelerator pedal

Engine (V46.32 Y4)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function
Initialising the auto adaptive
Motorised throttle unit
Injectors
Inlet camshaft dephaser
Inlet camshaft dephaser solenoid valve
Cylinder reference sensor
Accelerator pedal

Engine (V46.32 STTD Y2)

- Basic function
DTC Analysis

Data Analysis
Actuation Test
ECU Information
- Special Function
Initialising the auto adaptive
Motorised throttle unit
Injectors
Inlet camshaft dephaser
Inlet camshaft dephaser solenoid valve
Cylinder reference sensor
Accelerator pedal

Engine (V46.32 STTD Y4)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function
Initialising the auto adaptive
Motorised throttle unit
Injectors
Inlet camshaft dephaser
Inlet camshaft dephaser solenoid valve
Cylinder reference sensor
Accelerator pedal

Gearbox ECU (BVA_AM6_AT6_EURO5)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function
Programming of the neutral position
Replacement of the automatic gearbox oil

Gearbox ECU (CFC300P)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information

Gearbox ECU (BVA_AT8)

- Basic function
DTC Analysis
Data Analysis
Actuation Test
ECU Information

Gearbox ECU (BVA_AL4)

- Basic function
DTC Analysis
Data Analysis

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Actuation Test ECU Information	ECU Information - Special Function Read wheel transmitter module identifiers Write wheel transmitter module identifiers by references Initialisation of the wheel transmitter modules Initialisation of a single wheel transmitter module
Gearbox ECU (BVAAM6_AT6_UDS) - Basic function DTC Analysis Actuation Test ECU Information	Dynamic headlamp height adjuster (BEMP_2) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Airbag ECU - Basic function DTC Analysis Data Analysis ECU Information - Special Function Locking Unlocking	Dynamic headlamp height adjuster (LADCT) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Built-In system interface - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Battery charge status unit - Basic function Data Analysis ECU Information
ESP 8.1 - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Calibration of the steering wheel angle sensor Air Bleeding Longitudinal Acceleration Sensor Calibration Reactivation of automatic application of the electric parking brake Deactivation of the automatic application of the electric parking brake function Deactivation of the electric vacuum pump diagnostics strategy Activation of the electric vacuum pump diagnostics strategy	Electric secondary brake - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Brake cable replacement Electric parking brake replacement
Power steering electric pump - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Air conditioning - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Under inflation detection - Basic function DTC Analysis Data Analysis	Engine relay unit - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
	Instrument panel - Basic function DTC Analysis Data Analysis

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Actuation Test
ECU Information

Actuation Test
ECU Information

Control panel dot matrix display

- Basic function
- DTC Analysis
- Actuation Test
- ECU Information

Hands-free starting access electronic module

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

Telematics

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

Electronic key reader

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Anti-theft alarm

- Basic function
- DTC Analysis
- Actuation Test
- ECU Information

Electric steering lock

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

Seat driver position memory module

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

DS5 Vehicle Added

Engine (DCM6.2)

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information
- Special Function
- Replacement of the EGR valve
- Replacement of the engine block with the air flow sensor
- Replacement of the fuel flow regulator
- Replacement of the ancillary drive belt
- Replacement of the exhaust manifold
- Replacement of the turbocharger
- Replacement of starter motor
- Replacement of the clutch
- Replacement of the engine flywheel
- Replacement of the diesel high pressure rail
- Programming the air mixer stops
- Programming the EGR valve stops
- Programming of the stops of the turbocharger
- Cleaning the EGR valve
- Cleaning the EGR exchanger bypass
- Particle filter regeneration
- Reinitialisation of the denox system faults
- Temporary reactivation of the stop and start function
- Filling of the additive reservoir or pouch
- Filling of the urea reservoir
- Draining and filling of the urea solution reservoir
- Replacement of the high pressure pump

Parking assistance

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information
- Special Function
- Manual configuration

Diesel additive pump

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Multiplexed control panel

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

Controls under the steering wheel

- Basic function
- DTC Analysis
- Data Analysis

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Replacement of the low pressure fuel pump+ of the fuel filter or of the pipes
Replacement of the air mixer
Replacement of the particle emission filter differential pressure sensor
Particle filter replacement
Replacement of the nox sensor
Replacement of the precatalyser
Replacement of the denox catalytic converter
Replacement of the reservoir of the gauge pump module of the denox system pipes or of the urea injector
Replacement of the cylinder block
Replacement of the cylinder head without the air flow sensor
Replacement of the cylinder head with the air flow sensor
Replacement of the battery
Replacement of the flowmeter
Replacement of the engine block without the flowmeter
Replacement of the camshaft
Replacement of the reversible alternator
Replacement of the power accumulator or of the voltage retaining device

Engine (VD46)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement of the exhaust manifold
 - Initialisation of the autoadaptive values
 - Temporary reactivation of the stop and start function (for a maximum distance of 10 km)
 - Work on the ancillaries battery
 - Replacement of one or more petrol injectors
 - Replacement of the inlet camshaft dephaser
 - Replacement of the exhaust camshaft dephaser
 - Cylinder head replacement
 - Replacement of the turbocharger
 - Replacement of the ancillaries battery
 - Replacement of starter motor
 - Replacement of the clutch
 - Replacement of the alternator
 - Replacement of the turbocharging pressure regulation valve
 - Replacement of the engine flywheel
 - Replacement of the accelerator pedal
 - Replacement of the motorised butterfly housing

Engine (MEV17_4_2 EP6C)

- Basic function

DTC Analysis
Data Analysis
Actuation Test
ECU Information
- Special Function

- Initialisation of auto adaptative
- Motorised throttle unit
- Upstream and downstream oxygen sensors
- Accelerator pedal sensor
- Injectors
- Catalytic converter
- Fuel sender/pump module
- Inlet and exhaust camshaft phase sensor
- Inlet and exhaust camshaft dephasing electrovalve
- Inlet pressure sensor
- Variable valve lift motor
- Variable valve lift system position sensor
- Canister discharge electrovalve
- Timing

Engine (MEV17_4_2 EP6CM)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative
 - Motorised throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (5FV MED17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (5FN MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Actuation Test
- ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (5FM MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (5FE MED 17.4.2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialisation of auto adaptative

Engine (9HR-DV6CTED)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement of Injector
 - Initialisation of diesel injector
 - Forced regeneration vehicle stationary
 - Change of high pressure pump with its fuel flow regulator
 - Replacement of the EGR valve
 - Change of air mixer
 - Replacement of the turbo
 - Replacement of the air flow sensor
 - Replacement of the engine block without the air flow sensor
 - Replacement of the engine block with the air flow sensor
 - Replacement of the additive reservoir of the pump or of the pipes
 - Replacement of the particle emission filter
 - Replacement of the oxygen sensor

Engine (9HP-DV6DTE4-92CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function

Forced Regeneration Of The Particle Filter Vehicle Stationary

Replacement Of The Particle Emission Filter

Initialisation Of The 4 Diesel Injectors

Change of EGR Valve

Replacement Of The EGR Exchanger

Change Of Air Mixer

Replacement Of The Turbo

Replacement Of The Additive Reservoir Of Pump

Or Pipes

Replacement Of The High Pressure Pump Or

Regulation Valve

Replacement Of The Exhaust Manifold

Replacement Of The Cylinder Head

Replacement Of The Diesel High Pressure Rail

Filling Of The Diesel Additive Tank

Replacement Of The Oxygen Sensor

Replacement of 4 injectors

Engine (9HJ-DV6DTE4-90CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement Of The Particle Emission Filter
 - Initialisation Of The 4 Diesel Injectors
 - Change of EGR Valve
 - Replacement Of The EGR Exchanger
 - Replacement Of The Additive Reservoir Of Pump Or Pipes
 - Replacement Of The High Pressure Pump Or Regulation Valve
 - Replacement Of The Exhaust Manifold
 - Replacement Of The Cylinder Head
 - Replacement Of The Diesel High Pressure Rail
 - Filling Of The Diesel Additive Tank
 - Replacement of 4 injectors

Engine (RHH-DW10CTED4-163CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle Stationary
 - Change of EGR valve
 - Change of air mixer
 - Replacement of the turbo
 - Replacement of the particle emission filter
 - Replacement of the oxygen sensor
 - Replacement of the EGR exchanger

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Filling of the diesel additive adding reservoir
Replacement of the ancillary drive belt
Replacement of the exhaust manifold
Air flow sensor replacement
Replacement of the differential pressure sensor
Replacement of the high pressure pump or the flow regulation valve
Replacement of the diesel additive reservoir+ pump/pipes
Replacement of the diesel high pressure rail
Replacement of the additive reservoir+ pump or pipes
Filling of the diesel additive tank
Change of engine block without the flowmeter
Change of engine block with the flowmeter
Replacement of the cylinder head

Engine (RHE-DW10CTED4-150CV)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Forced Regeneration Of The Particle Filter Vehicle Stationary
 - Change of EGR valve
 - Change of air mixer
 - Replacement of the turbo
 - Replacement of the particle emission filter
 - Replacement of the oxygen sensor
 - Replacement of the EGR exchanger
 - Filling of the diesel additive adding reservoir
 - Replacement of the ancillary drive belt
 - Replacement of the exhaust manifold
 - Air flow sensor replacement
 - Replacement of the differential pressure sensor
 - Replacement of the high pressure pump or the flow regulation valve
 - Replacement of the diesel additive reservoir+ pump/pipes
 - Replacement of the diesel high pressure rail
 - Replacement of the additive reservoir+ pump or pipes
 - Filling of the diesel additive tank
 - Change of engine block without the flowmeter
 - Change of engine block with the flowmeter
 - Replacement of the cylinder head

Engine (5FU MEVD17_4_2 EURO 5)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

- Special Function
 - Initialisation of auto adaptative
 - Motorised throttle unit
 - Upstream and downstream oxygen sensors
 - Accelerator pedal sensor
 - Injectors
 - Catalytic converter
 - Fuel sender/pump module
 - Inlet and exhaust camshaft phase sensor
 - Inlet and exhaust camshaft dephasing electrovalve
 - Inlet pressure sensor
 - Variable valve lift motor
 - Variable valve lift system position sensor
 - Canister discharge electrovalve
 - Timing

Engine (ME745 NFU)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (ME745 N6A)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (ME745 N6B)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive

Engine (EDC17C60)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement of 4 injectors
 - Replacement of the EGR valve
 - Replacement of the turbocharger
 - Replacement of the clutch
 - Replacement of the engine flywheel

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Programming the air mixer stops
Programming the EGR valve stops
Programming of the stops of the turbocharger
Cleaning the EGR valve
Particle filter regeneration
Filling of the additive reservoir or pouch
Filling of the urea reservoir
Draining and filling of the urea solution reservoir
Replacement of the high pressure pump
Replacement of the low pressure fuel pump+ of the fuel filter or of the pipes
Replacement of the air mixer
Particle filter replacement
Replacement of the precatalyser
Replacement of the cylinder block
Replacement of the battery
Replacement of the flowmeter
Regeneration of the denox catalytic converter
Reinitialization of the denox system faults
Reinitialization following replacement of the urea injector
Forcing of the stop and start
Replacement of the diesel additive reservoir+ of the pump or of the pipes
Replacement of the NOX sensor
Replacement of the deNOX catalytic converter
Replacement of the urea injector
Replacement of the denox system reservoir+ gauge-pump module or pipes

Engine (MED17_4_4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Replacement of the exhaust manifold
 - Initialisation of the autoadaptive values
 - Temporary reactivation of the stop and start function (for a maximum distance of 10 km)
 - Work on the ancillaries battery
 - Replacement of one or more petrol injectors
 - Replacement of the inlet camshaft dephaser
 - Cylinder head replacement
 - Replacement of the turbocharger
 - Replacement of the ancillaries battery
 - Replacement of starter motor
 - Replacement of the clutch
 - Replacement of the alternator
 - Replacement of the turbocharging pressure regulation valve
 - Replacement of the engine flywheel
 - Replacement of the motorised butterfly housing
 - Work on the timing belt

Engine (V46.32 Y2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive
 - Motorised throttle unit
 - Injectors
 - Inlet camshaft dephaser
 - Inlet camshaft dephaser solenoid valve
 - Cylinder reference sensor
 - Accelerator pedal

Engine (V46.32 Y4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive
 - Motorised throttle unit
 - Injectors
 - Inlet camshaft dephaser
 - Inlet camshaft dephaser solenoid valve
 - Cylinder reference sensor
 - Accelerator pedal

Engine (V46.32 STTD Y2)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive
 - Motorised throttle unit
 - Injectors
 - Inlet camshaft dephaser
 - Inlet camshaft dephaser solenoid valve
 - Cylinder reference sensor
 - Accelerator pedal

Engine (V46.32 STTD Y4)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Initialising the auto adaptive
 - Motorised throttle unit

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Injectors Inlet camshaft dephaser Inlet camshaft dephaser solenoid valve Cylinder reference sensor Accelerator pedal	Data Analysis Actuation Test ECU Information
Gearbox ECU (BVA_AM6_AT6_EURO5) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Programming of the neutral position Replacement of the automatic gearbox oil	ESP 8.1 - Basic function DTC Analysis Data Analysis Actuation Test ECU Information - Special Function Calibration of the steering wheel angle sensor Air Bleeding Longitudinal Acceleration Sensor Calibration Reactivation of automatic application of the electric parking brake Deactivation of the automatic application of the electric parking brake function Deactivation of the electric vacuum pump diagnostics strategy Activation of the electric vacuum pump diagnostics strategy
Gearbox ECU (CFC300P) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Power steering electric pump - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Gearbox ECU (BVA_AT8) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Under inflation detection - Basic function DTC Analysis Data Analysis ECU Information - Special Function Read wheel transmitter module identifiers Write wheel transmitter module identifiers by references Initialisation of the wheel transmitter modules Initialisation of a single wheel transmitter module
Gearbox ECU (BVA_AL4) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information	Dynamic headlamp height adjuster (BEMP_2) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Gearbox ECU (BVA_AM6_AT6_UDS) - Basic function DTC Analysis Actuation Test ECU Information	Dynamic headlamp height adjuster (LADCT) - Basic function DTC Analysis Data Analysis Actuation Test ECU Information
Airbag ECU - Basic function DTC Analysis Data Analysis ECU Information - Special Function Locking Unlocking	
Built-In system interface - Basic function DTC Analysis	

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Battery charge status unit

- Basic function
- Data Analysis
- ECU Information

- Basic function

- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

Electric secondary brake

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Brake cable replacement
 - Electric parking brake replacement

Parking assistance

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Manual configuration

Air conditioning

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Diesel additive pump

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

Engine relay unit

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Multiplexed control panel

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Instrument panel

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Controls under the steering wheel

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Control panel dot matrix display

- Basic function
 - DTC Analysis
 - Actuation Test
 - ECU Information

Hands-free starting access electronic module

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Telematics

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Electronic key reader

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

Anti-theft alarm

- Basic function
 - DTC Analysis
 - Actuation Test
 - ECU Information

Electric steering lock

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

Seat driver position memory module

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

[Back to Index](#)

VOLVO**XC90 2006 New Type added****ECM(Engine Control Module)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

TCM(Transmission Control Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Control module adaptation
 - Reset adaptation
 - Gearbox oil change counter reset
 - Position sensor calibration

ABS(Anti-Lock Brake System)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Steering calibration
 - Pressure sensor calibration
 - Lateral accelerometer
 - Longitudinal accelerometer
 - Yaw rate sensor
 - Roll rate sensor
 - DSTC+ STC Reset config
 - ABS Reset config

SRS(Supplemental Restraint System)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information
- Special Function
 - Calibrating the occupant weight sensor (OWS)
 - Configuring the number of seats
 - Storing the ID number for the occupant weight

sensor(OWS)**CEM(Central Electrical Module)**

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Reset low voltage counters

DIM(Driver Information Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Resetting the service reminder indicator (SRI)
 - Service Reminder Reset(MANUAL)
 - Testing all indicators and lamps in the driver information module (DIM)

DDM(Driver Door Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - DDM Window position setup

PDM(Passenger Door Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - PDM Window position setup

PSM(Power Seat Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information

CCM(Climate Control Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

SAS(Steering Wheel Angle Sensor Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

UEM(Up Electrical Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Siren configuration

REM(Rear Electrical Module)

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - ECU Information
- Special Function
 - Bi-xenon sensor calibration

- DTC Analysis
- ECU Information

POSIP (Porsche Supplement Impact Protection)

- Basic function
 - DTC Analysis
 - ECU Information

Air conditioning

- Basic function
 - DTC Analysis
 - ECU Information

PTM (Porsche Traction Management)

- Basic function
 - DTC Analysis
 - ECU Information

Instrument cluster

- Basic function
 - DTC Analysis
 - ECU Information

[Back to Index](#)

PORSCHE

911(997) Vehicle Added

DME (Digital engine electronics)

- Basic function
 - DTC Analysis
 - Data Analysis
 - ECU Information

PDK (Tiptronic)

- Basic function
 - DTC Analysis
 - ECU Information

PDK Selector lever

- Basic function
 - DTC Analysis
 - ECU Information

PSM (Porsche Stability Management)

- Basic function
 - DTC Analysis
 - ECU Information

PAS (Porsche Access System)

- Basic function

Gateway

- Basic function
 - DTC Analysis
 - ECU Information

VEH. ELECTRICAL. SYS

- Basic function
 - DTC Analysis
 - ECU Information

Steering col. switch

- Basic function
 - DTC Analysis
 - ECU Information

Park Assist

- Basic function
 - DTC Analysis
 - ECU Information

Seat Memory

- Basic function
 - DTC Analysis
 - ECU Information

PASM (Porsche Active Suspension Management)

- Basic function
 - DTC Analysis
 - ECU Information

Convertible top

- Basic function

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

DTC Analysis
ECU Information

Chronometer

- Basic function
- DTC Analysis
- ECU Information

Front-end electronics

- Basic function
- DTC Analysis
- ECU Information

Rear-end electronics

- Basic function
- DTC Analysis
- ECU Information

Driver's door

- Basic function
- DTC Analysis
- ECU Information

Passenger's door

- Basic function
- DTC Analysis
- ECU Information

Cornering light

- Basic function
- DTC Analysis
- ECU Information

Cayenne (958) (from 2011) Vehicle Added

DME (Digital engine electronics)

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Tiptronic transmission control

- Basic function
- DTC Analysis
- ECU Information

PSM (Porsche Stability Management)

- Basic function
- DTC Analysis
- ECU Information

Airbag

- Basic function
- DTC Analysis
- ECU Information

Instrument cluster

- Basic function
- DTC Analysis
- ECU Information
- Special Function
- Oil service
- Main maintenance
- Intermediate maintenance
- Set total mileage
- Calibrate fuel-level sensor
- Save fuel-level sensor comparison values to Rear-end electronics control unit
- Restore fuel level sensor comparison values to Rear-end electronics control unit

Parking brake

- Basic function
- DTC Analysis
- ECU Information

Tire pressure monitoring system

- Basic function
- DTC Analysis
- ECU Information

Air conditioner

- Basic function
- DTC Analysis
- ECU Information

External amplifier

- Basic function
- DTC Analysis
- ECU Information

Front-end electronics

- Basic function
- DTC Analysis
- ECU Information

Rear-end electronics

- Basic function
- DTC Analysis
- ECU Information

Gateway

- Basic function
- DTC Analysis
- ECU Information

Left headlight

- Basic function
- DTC Analysis
- ECU Information

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Right headlight

- Basic function
- DTC Analysis
- ECU Information

PASM (Porsche Active Suspension Management)

- Basic function
- DTC Analysis
- ECU Information

Park assist

- Basic function
- DTC Analysis
- ECU Information

PCMCDR (Communication ManagementCD Radio)

- Basic function
- DTC Analysis
- ECU Information

Rear lid

- Basic function
- DTC Analysis
- ECU Information

Steering wheel electronics

- Basic function
- DTC Analysis
- ECU Information

Cayenne (957) (up to 2010) Vehicle Added**DME (Digital engine electronics)**

- Basic function
- DTC Analysis

Tiptronic transmission control

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

PSM (Porsche Stability Management)

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

KESSY (Keyless Entry Start and exit System)

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Airbag

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Air Conditioning

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Instrument cluster

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

PCM Gateway (Porsche communication management)

- Basic function
- DTC Analysis
- ECU Information

Vehicle Electrical System

- Basic function
- DTC Analysis
- ECU Information

Steering COL. Switch

- Basic function
- DTC Analysis
- ECU Information

Wiper

- Basic function
- DTC Analysis
- ECU Information

Transfer case

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Transverse Lock

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Level Control

- Basic function
- DTC Analysis
- ECU Information

Tyre Pressure Monitoring system

- Basic function

DTC Analysis
ECU Information

Park Assistant

- Basic function
- DTC Analysis
- ECU Information

Seat Memory

- Basic function
- DTC Analysis
- ECU Information

AHK (Trailer hitch control module)

- Basic function
- DTC Analysis
- ECU Information

Auxiliary Heater

- Basic function
- DTC Analysis
- ECU Information

AWS (Auto Weight-Sensing)

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Rear doors

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Left HBA (Hydraulic Brake Assist)

- Basic function
- DTC Analysis
- ECU Information

Right HBA (Hydraulic Brake Assist)

- Basic function
- DTC Analysis
- ECU Information

HBA NEW (Hydraulic Brake Assist)

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Gateway

- Basic function
- DTC Analysis
- ECU Information

MAG. Field Sensor

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information

Panamera Vehicle Added

DME (Digital engine electronics)

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information

Tiptronic transmission control

- Basic function
- DTC Analysis
- ECU Information

PSM (Porsche Stability Management)

- Basic function
- DTC Analysis
- ECU Information

Airbag

- Basic function
- DTC Analysis
- ECU Information

Instrument cluster

- Basic function
- DTC Analysis
- ECU Information

- Special Function

- Oil service
- Main maintenance
- Intermediate maintenance
- Set total mileage
- Calibrate fuel-level sensor
- Save fuel-level sensor comparison values to Rear-end electronics control unit
- Restore fuel level sensor comparison values to Rear-end electronics control unit

Parking brake

- Basic function
- DTC Analysis
- ECU Information

Tire pressure monitoring system

- Basic function
- DTC Analysis
- ECU Information

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Adaptive cruise control

- Basic function
- DTC Analysis
- ECU Information

Additional instrument clock

- Basic function
- DTC Analysis
- ECU Information

Air conditioner

- Basic function
- DTC Analysis
- ECU Information

External amplifier

- Basic function
- DTC Analysis
- ECU Information

Front-end electronics

- Basic function
- DTC Analysis
- ECU Information

Rear-end electronics

- Basic function
- DTC Analysis
- ECU Information

Gateway

- Basic function
- DTC Analysis
- ECU Information

Left headlight

- Basic function
- DTC Analysis
- ECU Information

Right headlight

- Basic function
- DTC Analysis
- ECU Information

PASM (Porsche Active Suspension Management)

- Basic function
- DTC Analysis
- ECU Information

Park assist

- Basic function
- DTC Analysis
- ECU Information

PCMCDR (Communication ManagementCD Radio)

- Basic function
- DTC Analysis
- ECU Information

PDCCORS (Offroad anti-roll bar)

- Basic function
- DTC Analysis
- ECU Information

Rear lid

- Basic function
- DTC Analysis
- ECU Information

Selector lever

- Basic function
- DTC Analysis
- ECU Information

Steering wheel electronics

- Basic function
- DTC Analysis
- ECU Information

[Back to Index](#)

FORD USA

Escape 1.5L EcoBoost - Gas Turbocharged Direct Injection 2016 ~ Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- HCM(Headlamp Control Module)
- HUD(Head Up Display)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- PSCM(Power Steering Control Module)
- RCM(Restraint Control Module)
- RFA(Remote Function Actuator)
- RGTM(Rear Gate/Trunk Module)
- SASM(Steering Angle Sensor Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TCU(Telematic Control Unit Module)
- TRM(Trailer Module)

Explorer 3,5L TiVCT 2011 ~ 2015 System Added

- HSWM(Heated Steering Wheel Module)
- IPM-A(Image Processing Module A)
- RTM(Radio Transceiver Module)

F150 3.5L EcoBoost - Gas Turbocharged Direct Injection 2015 - 2016 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DACM-C(Digital Audio Control Module C)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- GWM(Gateway Module A)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- OCSM(Occupant Classification System Module)
- PAM (Parking Aid Module)
- PBM(Parking Brake Control Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RBM(Running Board Control Module)
- RCM(Restraint Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SCM-E(Seat Control Module E)
- SCM-G(Seat Control Module G)
- SCM-H(Seat Control Module H)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TBM(Tracking And Blocking Module)
- TCCM(Transfer Case Control Module)
- TRM(Trailer Module)

F150 3.5L EcoBoost - Gas Turbocharged Direct**Injection 2017 Vehicle Added**

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DACM-C(Digital Audio Control Module C)
- DCDC(DC to DC Converter Control Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- GWM(Gateway Module A)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PBM(Parking Brake Control Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RBM(Running Board Control Module)
- RCM(Restraint Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SCM-E(Seat Control Module E)
- SCM-G(Seat Control Module G)
- SCM-H(Seat Control Module H)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TBM(Tracking And Blocking Module)
- TCCM(Transfer Case Control Module)
- TRM(Trailer Module)

F150 5.0L TiVCT 2015 ~ Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DACM-C(Digital Audio Control Module C)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- GWM(Gateway Module A)
- HSWM(Heated Steering Wheel Module)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PBM(Parking Brake Control Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RBM(Running Board Control Module)
- RCM(Restraint Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SCM-E(Seat Control Module E)
- SCM-G(Seat Control Module G)
- SCM-H(Seat Control Module H)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TBM(Tracking And Blocking Module)
- TCCM(Transfer Case Control Module)
- TRM(Trailer Module)

F150 2.7L EcoBoost - Gas Turbocharged Direct Injection 2015 ~ 2016 Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DACM-C(Digital Audio Control Module C)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- GWM(Gateway Module A)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PBM(Parking Brake Control Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RBM(Running Board Control Module)
- RCM(Restraint Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SCM-E(Seat Control Module E)
- SCM-G(Seat Control Module G)
- SCM-H(Seat Control Module H)

- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TBM(Tracking And Blocking Module)
- TCCM(Transfer Case Control Module)
- TRM(Trailer Module)

F-Series Super Duty 6.2L 2V 2017 ~ Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- BCM-B(Body Control Module B)
- BECM-B(Battery Energy Control Module B)
- C-CM(Cruise Control Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GFM(Generic Function Module)
- GPSM(Global Positioning System Module)
- GWM(Gateway Module A)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- RBM(Running Board Control Module)
- RCM(Restraint Control Module)
- RTM(Radio Transceiver Module)
- SASM(Steering Angle Sensor Module)
- SCCM(Steering Column Control Module)
- SCM-E(Seat Control Module E)
- SCM-G(Seat Control Module G)
- SCM-H(Seat Control Module H)
- SECM(Steering Effort Control Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TBM(Tracking And Blocking Module)
- TCCM(Transfer Case Control Module)
- TRM(Trailer Module)

F-650/F-750 6.7L Power Stroke - Direct Injection Turbo Diesel 2016 ~ 2017 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- AHCM(Auxiliary Heater Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- GFM(Generic Function Module)
- HVAC(Heating Ventilation Air Conditioning)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- IPC(Instrument Panel Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- TCM(Transmission Control Module)

F-650/F-750 6.8L 3V 2016 ~ 2017 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- GFM(Generic Function Module)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)

Focus 1.6L FFV 2007 ~ 2010 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio control module)
- D_DCU(Driver Door Control Unit)
- EATC(Electronic Automatic Temperature Control)
- EPS(Electronic power steering)
- GEM(Generic Electronic Module)
- HCM(Headlamp Control Module)
- IC(Instrument cluster)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- RCM(Restraint Control Module)
- RKE(Remote Keyless Entry)
- TCM(Transmission Control Module)
- PDM(Passenger's Door Module)
- SRM(Speech recognition module)

Focus 1.6L Sigma 2010 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio control module)
- D_DCU(Driver Door Control Unit)
- EATC(Electronic Automatic Temperature Control)
- EPS(Electronic power steering)
- GEM(Generic Electronic Module)
- HCM(Headlamp Control Module)
- IC(Instrument cluster)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- RCM(Restraint Control Module)
- RKE(Remote Keyless Entry)
- TCM(Transmission Control Module)
- PDM(Passenger's Door Module)
- SRM(Speech recognition module)

Fusion 1.5L EcoBoost - Gas Turbocharged Direct Injection 2016 ~ Vehicle Added

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DACM-C(Digital Audio Control Module C)
- DCDC(DC to DC Converter Control Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- GWM(Gateway Module A)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RACM(Rear Audio Control Module)
- RCM(Restraint Control Module)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SCM-E(Seat Control Module E)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TCU(Telematic Control Unit Module)

Kuga 1.5L EcoBoost - Gas Turbocharged Direct Injection 2016 ~ Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- HCM(Headlamp Control Module)
- HUD(Head Up Display)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)

- RCM(Restraint Control Module)
- RFA(Remote Function Actuator)
- RGTM(Rear Gate/Trunk Module)
- SASM(Steering Angle Sensor Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TCU(Telematic Control Unit Module)
- TRM(Trailer Module)

Transit 3.7L TiVCT 2016 ~ Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Control Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- PAM(Parking Aid Module)
- RBM(Running Board Control Module)
- RCM(Restraint Control Module)
- SASM(Steering Angle Sensor Module)
- TBC(Trailer Brake Control Module)
- TRM(Trailer Module)

Transit Connect 1.6L EcoBoost - Gas Turbocharged Direct Injection 2016 ~ Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Control Module)
- BCM(Body Control Module)
- DDM(Driver's Door Module)
- FCDIM(Front Control/Display Interface Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- HCM(Headlamp Control Module)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- IPM-B(Image Processing Module B)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PDM(Passenger's Door Module)
- PSCM(Power Steering Control Module)
- RCM(Restraint Control Module)
- SASM(Steering Angle Sensor Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- TRM(Trailer Module)

Transit Connect 2.0L DURATEC-HE/I4 2010 ~ 2011 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- IC(Instrument Cluster)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- RCM(Restraint Control Module)
- SRM(Speech Recognition Module)
- VSM(Vehicle Security Module)

Transit Connect 2.0L DURATEC-HE/I4 2012 ~ 2013 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Control Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- IC(Instrument Cluster)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- RCM(Restraint Control Module)
- SRM(Speech Recognition Module)
- VSM(Vehicle Security Module)

[Back to Index](#)**FORD USA (LINCOLN)****MKT 3.7L 4V 2013 ~ 2016 Vehicle Added**

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCIM(Front Controls Interface Module)
- FCDIM(Front Control/Display Interface Module)
- GFM(Generic Function Module)
- GPSM(Global Positioning System Module)
- HCM(Headlamp Control Module)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- HVAC(Heating Ventilation Air Conditioning)

- IPC(Instrument Panel Control Module)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PSCM(Power Steering Control Module)
- RACM(Rear Audio Control Module)
- RCM(Restraint Control Module)
- RFA(Remote Function Actuator)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)

MKT 3.7L TiVCT 2013 ~ 2015 Vehicle Added

- PCM(PowerTrain Control Module)
- 4X4(4x4 Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- C-CM(Cruise Control Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCIM(Front Controls Interface Module)
- FDIM(Front Display Interface Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- HCM(Headlamp Control Module)
- HCM-2(Headlamp Control Module2)
- HUD(Head Up Display)
- HVAC(Heating Ventilation Air Conditioning)
- ILCM(Interior Lighting Control Module)
- IPC(Instrument Panel Control Module)
- LTM(Liftgate/Trunk Module)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PCSM-2(Passenger Climate Control Seat Module 2)
- PSCM(Power Steering Control Module)
- RCM(Restraint Control Module)
- RETM(Rear Entertainment Module)
- RFA(Remote Function Actuator)
- RHVAC(Rear Heating Ventilation Air Conditioning)
- SASM(Steering Angle Sensor Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)

MKT 3.7L TiVCT 2016 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DDM(Driver's Door Module)

- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- HCM(Headlamp Control Module)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- LTM(Liftgate/Trunk Module)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PCSM-2(Passenger Climate Control Seat Module 2)
- PSCM(Power Steering Control Module)
- RACM(Rear Audio Control Module)
- RCM(Restraint Control Module)
- RFA(Remote Function Actuator)
- RHVAC(Rear Heating Ventilation Air Conditioning)
- RTM(Radio Transceiver Module)
- SCCM(Steering Column Control Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- VDM(Vehicle Dynamic Module)

MKT 3.5L EcoBoost - Gas Turbocharged Direct Injection 2016 Vehicle Added

- PCM(PowerTrain Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- BCM(Body Control Module)
- C-CM(Cruise Control Module)
- DCSM(Driver-Dual Climate Control Seat Module)
- DDM(Driver's Door Module)
- DSM(Driver's Seat Module)
- DSP(Digital Signal Processing Module)
- FCIM(Front Controls Interface Module)
- GPSM(Global Positioning System Module)
- HCM(Headlamp Control Module)
- HSWM(Heated Steering Wheel Module)
- HUD(Head Up Display)
- HVAC(Heating Ventilation Air Conditioning)
- IPC(Instrument Panel Control Module)
- IPM-A(Image Processing Module A)
- LTM(Liftgate/Trunk Module)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- PCSM-2(Passenger Climate Control Seat Module 2)
- PSCM(Power Steering Control Module)
- RACM(Rear Audio Control Module)
- RCM(Restraint Control Module)
- RFA(Remote Function Actuator)
- RHVAC(Rear Heating Ventilation Air Conditioning)
- RTM(Radio Transceiver Module)

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- SCCM(Steering Column Control Module)
- SOD-L(Side Obstacle Detection Control Module Left)
- SOD-R(Side Obstacle Detection Control Module Right)
- VDM(Vehicle Dynamic Module)

Navigator 5.4L 3V 2005 ~ 2007 Vehicle Added

- PCM(Powertrain Control Module)
- ABS(Anti-Lock Brake System)
- DCSM(Driver-Dual Climate Control Seat Module)
- DSM(Driver's Seat Module)
- GEM(Generic Electronic Module)
- EATC(Electronic Automatic Temperature Control)
- IC(Instrument Cluster)
- LTM(Liftgate/Trunk Module)
- PAM(Parking Aid Module)
- RCM(Restraint Control Module)
- VDM(Vehicle Dynamic Module)
- RIM(Remote Immobilizer Module)
- VSM(Vehicle Security Module)

[Back to Index](#)**FORD USA (MERCURY)****Sable 3.5L 4V 2008 ~ 2009 Vehicle Added**

- PCM(PowerTrain Control Module)
- 4X4(4x4 Control Module)
- ABS(Anti-Lock Brake System)
- ACM(Audio Control Module)
- APIM(Accessory Protocol Interface Module)
- DSM(Driver's Seat Module)
- GEM/SJB(Generic Electronic Module/Smart Junction Box)
- HVAC(Heating Ventilation Air Conditioning)
- IC(Instrument Cluster)
- OCSM(Occupant Classification System Module)
- PAM(Parking Aid Module)
- RCM(Restraint Control Module)
- RETM(Rear Entertainment Module)
- SDARS(Satellite Digital Audio Receiver System)
- SECM(Steering Effort Control Module)

[Back to Index](#)**GM USA****New Model & System added**

- Chevrolet

Cobalt 2012~2016 Engine Sensor Add

1.3L LDV Engine Control Module Automatic Transmission

1.3L LDV Engine Control Module Manual Transmission
1.3L LSF Engine Control Module Automatic Transmission
1.3L LSF Engine Control Module Manual Transmission
1.4L LKF Engine Control Module Automatic Transmission
1.4L LKF Engine Control Module Manual Transmission
1.5L L2C Engine Control Module Automatic Transmission
1.5L L2C Engine Control Module Manual Transmission
1.8L LJ1 Engine Control Module Automatic Transmission
1.8L LJ1 Engine Control Module Manual Transmission
1.8L LMD Engine Control Module Automatic Transmission
1.8L LMD Engine Control Module Manual Transmission

Colorado 2012~2016 Engine Sensor Add

2.4L LE6 Engine Control Module Automatic Transmission
2.5L LCV Engine Control Module Automatic Transmission
2.5L LCV Engine Control Module Manual Transmission
2.5L LKH Engine Control Module Automatic Transmission
2.5L LKH Engine Control Module Manual Transmission
2.5L LVN Engine Control Module Automatic Transmission
2.5L LVN Engine Control Module Manual Transmission
2.8L LWH Engine Control Module Automatic Transmission
2.8L LWH Engine Control Module Manual Transmission
2.8L LWN Engine Control Module Automatic Transmission
2.8L LWN Engine Control Module Manual Transmission
3.6L LFX Engine Control Module
3.6L LFX Engine Control Module Automatic Transmission
3.6L LFX Engine Control Module Manual Transmission
3.6L LY7 Engine Control Module
3.6L LY7 Engine Control Module Automatic Transmission
3.6L LY7 Engine Control Module Manual Transmission

Cruze 2010~2016 Engine Sensor Add

1.4L LDD Engine Control Module Automatic Transmission
1.4L LDD Engine Control Module Manual Transmission
1.4L LE2 Engine Control Module Automatic Transmission
1.4L LE2 Engine Control Module Manual Transmission
1.4L LEX Engine Control Module Automatic Transmission
1.4L LEX Engine Control Module Manual Transmission
1.4L LUJ Engine Control Module Automatic Transmission
1.4L LUJ Engine Control Module Manual Transmission
1.4L LUV Engine Control Module Automatic Transmission
1.4L LUV Engine Control Module Manual Transmission
1.5L L3G Engine Control Module Automatic Transmission
1.5L L3G Engine Control Module Manual Transmission
1.5L LFX Engine Control Module Automatic Transmission
1.5L LFX Engine Control Module Manual Transmission
1.6L L2W Engine Control Module Automatic Transmission
1.6L L2W Engine Control Module Manual Transmission
1.6L LDE Engine Edge Automatic Transmission
1.6L LDE Engine Edge Manual Transmission

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

1.6L LDE Engine Face Automatic Transmission
1.6L LDE Engine Face Manual Transmission
1.6L LLU Engine Control Module Automatic Transmission
1.6L LLU Engine Control Module Manual Transmission
1.6L LVL Engine Control Module Automatic Transmission
1.6L LVL Engine Control Module Manual Transmission
1.6L LVM Engine Control Module Automatic Transmission
1.6L LVM Engine Control Module Manual Transmission
1.6L LXT Engine Control Module Automatic Transmission
1.6L LXT Engine Control Module Manual Transmission
1.6L LXV Engine Edge Automatic Transmission
1.6L LXV Engine Edge Manual Transmission
1.7L LKR Engine Control Module Automatic Transmission
1.7L LKR Engine Control Module Manual Transmission
1.7L LUD Engine Control Module Automatic Transmission
1.7L LUD Engine Control Module Manual Transmission
1.8L 2H0 Engine Control Module Automatic Transmission
1.8L 2H0 Engine Control Module Manual Transmission
1.8L 2HO Engine Automatic Transmission
1.8L 2HO Engine Edge Automatic Transmission
1.8L 2HO Engine Edge Manual Transmission
1.8L 2HO Engine Face Automatic Transmission
1.8L 2HO Engine Face Manual Transmission
1.8L 2HO Engine Manual Transmission
1.8L LFH Engine Control Module Automatic Transmission
1.8L LFH Engine Control Module Manual Transmission
1.8L LUW Engine Control Module Automatic Transmission
1.8L LUW Engine Control Module Manual Transmission
1.8L LWE Engine Control Module Automatic Transmission
1.8L LWE Engine Control Module Manual Transmission
2.0L LLW Engine Control Module Automatic Transmission
2.0L LLW Engine Control Module Manual Transmission
2.0L LNP Engine Control Module Automatic Transmission
2.0L LNP Engine Control Module Manual Transmission
2.0L LUZ Engine Control Module

Enjoy 2012~2016 Engine Sensor Add

1.3L LDV Engine Control Module
1.4L LCU Engine Control Module
1.5L L2B Engine Control Module

Lacetti 2014~2016 Engine Sensor Add

1.5L L2C Engine Control Module Automatic Transmission
1.5L L2C Engine Control Module Manual Transmission
1.5L LM9 Engine Control Module Automatic Transmission
1.5L LM9 Engine Control Module Manual Transmission

Lumina 2014 Engine Sensor Add

6.0L L77 Engine Control Module Automatic Transmission
6.0L L77 Engine Control Module Manual Transmission

Matiz 2015 Engine Sensor Add

1.0L LA2 Engine Control Module

Max 2015~2016 Engine Sensor Add

1.2L LAQ Engine Control Module
1.2L LD6 Engine Control Module
1.5L L3C Engine Control Module

Move 2015~2016 Engine Sensor Add

1.2L LAQ Engine Control Module
1.2L LD6 Engine Control Module
1.5L L3C Engine Control Module

N300 2013~2014 Engine Sensor Add

1.2L LAQ Engine Control Module
1.5L L3C Engine Control Module

Onix 2013~2016 Engine Sensor Add

1.0L LKL Engine Control Module Automatic Transmission
1.0L LKL Engine Control Module Manual Transmission
1.4L LKJ Engine Control Module Automatic Transmission
1.4L LKJ Engine Control Module Manual Transmission
1.4L LKK Engine Control Module Automatic Transmission
1.4L LKK Engine Control Module Manual Transmission

Orlando 2011~2016 Engine Sensor Add

1.4L LDD Engine Control Module Automatic Transmission
1.4L LDD Engine Control Module Manual Transmission
1.4L LUJ Engine Control Module Automatic Transmission
1.4L LUJ Engine Control Module Manual Transmission
1.8L 2H0 Engine Control Module Automatic Transmission
1.8L 2H0 Engine Control Module Manual Transmission
2.0L LBN Engine Control Module
2.0L LBN Engine Control Module Automatic Transmission
2.0L LBN Engine Control Module Manual Transmission
2.0L LNP Engine Control Module Automatic Transmission
2.0L LNP Engine Control Module Manual Transmission
2.4L LAF Engine Control Module Automatic Transmission
2.4L LAF Engine Control Module Manual Transmission
2.4L LEA Engine Control Module Automatic Transmission
2.4L LEA Engine Control Module Manual Transmission

Prisma 2013~2016 Engine Sensor Add

1.0L LKL Engine Control Module Automatic Transmission
1.0L LKL Engine Control Module Manual Transmission
1.4L LKJ Engine Control Module Automatic Transmission
1.4L LKJ Engine Control Module Manual Transmission
1.4L LKK Engine Control Module Automatic Transmission
1.4L LKK Engine Control Module Manual Transmission

S10 2012~2016 Engine Sensor Add

2.4L LE6 Engine Control Module Automatic Transmission
2.4L LP8 Engine Control Module

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

2.5L LCV Engine Control Module Automatic Transmission
2.5L LCV Engine Control Module Manual Transmission
2.5L LKH Engine Control Module Automatic Transmission
2.5L LKH Engine Control Module Manual Transmission
2.5L LVN Engine Control Module Automatic Transmission
2.5L LVN Engine Control Module Manual Transmission
2.8L LWH Engine Control Module Automatic Transmission
2.8L LWH Engine Control Module Manual Transmission
2.8L LWN Engine Control Module Automatic Transmission
2.8L LWN Engine Control Module Manual Transmission

Sail 2010~2016 Engine Sensor Add

1.19L LC5 Engine Control Module Automatic Transmission
1.19L LC5 Engine Control Module Manual Transmission
1.2L LMU Engine Control Module Automatic Transmission
1.2L LMU Engine Control Module Manual Transmission
1.3L LDV Engine Control Module
1.3L LDV Engine Control Module Automatic Transmission
1.3L LDV Engine Control Module Manual Transmission
1.3L LEW Engine Control Module
1.4L LCU Engine Control Module
1.4L LCU Engine Control Module Automatic Transmission
1.4L LCU Engine Control Module Manual Transmission
1.5L L2B Engine Control Module
1.5L L2B Engine Control Module Automatic Transmission
1.5L L2B Engine Control Module Manual Transmission

Sonic 2012~2016 Engine Sensor Add

1.2L LDC Engine Control Module Automatic Transmission
1.2L LDC Engine Control Module Manual Transmission
1.3L LDV Engine Control Module Automatic Transmission
1.3L LDV Engine Control Module Manual Transmission
1.3L LSF Engine Control Module Automatic Transmission
1.3L LSF Engine Control Module Manual Transmission
1.4L L2N Engine Control Module Automatic Transmission
1.4L L2N Engine Control Module Manual Transmission
1.4L LDD Engine Control Module Automatic Transmission
1.4L LDD Engine Control Module Manual Transmission
1.4L LUJ Engine Control Module Automatic Transmission
1.4L LUJ Engine Control Module Manual Transmission
1.4L LUV Engine Control Module Automatic Transmission
1.4L LUV Engine Control Module Manual Transmission
1.6L LDE Engine Control Module Automatic Transmission
1.6L LDE Engine Control Module Manual Transmission
1.6L LED Engine Control Module Automatic Transmission
1.6L LED Engine Control Module Manual Transmission
1.6L LFJ Engine Control Module Automatic Transmission
1.6L LFJ Engine Control Module Manual Transmission

1.8L LUW Engine Control Module Automatic Transmission
1.8L LUW Engine Control Module Manual Transmission
1.8L LWE Engine Control Module Automatic Transmission
1.8L LWE Engine Control Module Manual Transmission

Spark 2010~2016 Engine Sensor Add

0.8L LBF Engine Control Module
1.0L L5Q Engine Control Module Automatic Transmission
1.0L L5Q Engine Control Module Manual Transmission
1.0L LA2 Engine Control Module
1.0L LCP Engine Control Module
1.0L LEB Engine Automatic Control Module
1.0L LEB Engine Control Module
1.0L LEB Engine Manual Control Module
1.0L LFM Engine Control Module
1.0L LFM Engine Control Module Automatic Transmission
1.0L LFM Engine Control Module Manual Transmission
1.0L LMT Engine Control Module
1.19L LC5 Engine Control Module
1.2L L2E Engine Control Module
1.2L LKY Engine Control Module
1.2L LL0 Engine Control Module
1.2L LL0 Engine Control Module Automatic Transmission
1.2L LL0 Engine Control Module Manual Transmission
1.2L LMU Engine Control Module
1.4L LV7 Engine Control Module Automatic Transmission
1.4L LV7 Engine Control Module Manual Transmission

SS 2014~2016 Engine Sensor Add

6.2L LS3 Engine Control Module Automatic Transmission
6.2L LS3 Engine Control Module Manual Transmission

Tavera 2011~2016 Engine Sensor Add

2.0L LKM Engine Control Module

Tracker 2013~2016 Engine Sensor Add

1.4L LUJ Engine Control Module Automatic Transmission
1.4L LUJ Engine Control Module Manual Transmission
1.4L LUJ Engine Control Module Manual Transmission (M4P)
1.4L LUJ Engine Control Module Manual Transmission (MFH)
1.4L LUV Engine Control Module Automatic Transmission
1.4L LUV Engine Control Module Manual Transmission
1.4L LUV Engine Control Module Manual Transmission (M4P)
1.4L LUV Engine Control Module Manual Transmission (MFH)
1.6L LDE Engine Control Module Automatic Transmission
1.6L LDE Engine Control Module Manual Transmission
1.6L LDE Engine Control Module Manual Transmission (M4P)
1.6L LDE Engine Control Module Manual Transmission

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

(MFH)

1.6L LVL Engine Control Module Automatic Transmission

1.6L LVL Engine Control Module Manual Transmission

1.6L LVL Engine Control Module Manual Transmission (M4P)

1.6L LVL Engine Control Module Manual Transmission (MFH)

1.7L LUD Engine Control Module Automatic Transmission

1.7L LUD Engine Control Module Manual Transmission

1.7L LUD Engine Control Module Manual Transmission (M4P)

1.7L LUD Engine Control Module Manual Transmission (MFH)

1.8L 2HO Engine Auto Transmission 2WD Transfer

1.8L 2HO Engine Auto Transmission AWD Transfer

1.8L 2HO Engine Control Transmission (MFH) 2WD Transfer

1.8L 2HO Engine Control Transmission (MFH) AWD Transfer

1.8L 2HO Engine Manual Transmission (M4P) 2WD Transfer

1.8L 2HO Engine Manual Transmission (M4P) AWD Transfer

1.8L 2HO Engine Manual Transmission 2WD Transfer

1.8L 2HO Engine Manual Transmission AWD Transfer

1.8L LFH Engine Control Module Automatic Transmission

1.8L LFH Engine Control Module Manual Transmission

1.8L LFH Engine Control Module Manual Transmission (M4P)

1.8L LFH Engine Control Module Manual Transmission (MFH)

Trailblazer 2013~2016 Engine Sensor Add

2.5L LKH Engine Control Module Automatic Transmission

2.5L LKH Engine Control Module Manual Transmission

2.5L LVN Engine Control Module Automatic Transmission

2.5L LVN Engine Control Module Manual Transmission

2.8L LWH Engine Control Module Automatic Transmission

2.8L LWH Engine Control Module Manual Transmission

2.8L LWN Engine Control Module Automatic Transmission

2.8L LWN Engine Control Module Manual Transmission

3.6L LFX Engine Control Module Automatic Transmission

3.6L LY7 Engine Control Module Automatic Transmission

3.6L LY7 Engine Control Module Manual Transmission

Trax 2013~2016 Engine Sensor Add

1.4L LE2 Engine Control Module Automatic Transmission

1.4L LE2 Engine Control Module Manual Transmission

1.4L LFF Engine Control Module Automatic Transmission

1.4L LFF Engine Control Module Manual Transmission

1.4L LUJ Engine Control Module Automatic Transmission

1.4L LUJ Engine Control Module Manual Transmission

1.4L LUJ Engine Control Module Manual Transmission (M4P)

1.4L LUJ Engine Control Module Manual Transmission (MFH)

1.4L LUV Engine Control Module Automatic Transmission

1.4L LUV Engine Control Module Manual Transmission

1.4L LUV Engine Control Module Manual Transmission (M4P)

1.4L LUV Engine Control Module Manual Transmission (MFH)

1.6L LDE Engine Control Module Automatic Transmission

1.6L LDE Engine Control Module Manual Transmission

1.6L LDE Engine Control Module Manual Transmission (M4P)

1.6L LDE Engine Control Module Manual Transmission (MFH)

1.6L LVL Engine Control Module Automatic Transmission

1.6L LVL Engine Control Module Manual Transmission

1.7L LUD Engine Control Module Automatic Transmission

1.7L LUD Engine Control Module Manual Transmission

1.7L LUD Engine Control Module Manual Transmission (M4P)

1.7L LUD Engine Control Module Manual Transmission (MFH)

1.8L 2HO Engine Auto Transmission 2WD Transfer

1.8L 2HO Engine Auto Transmission AWD Transfer

1.8L 2HO Engine Control Module Automatic Transmission

1.8L 2HO Engine Control Module Manual Transmission

1.8L 2HO Engine Control Transmission (MFH) 2WD Transfer

1.8L 2HO Engine Control Transmission (MFH) AWD Transfer

1.8L 2HO Engine Manual Transmission (M4P) 2WD Transfer

1.8L 2HO Engine Manual Transmission (M4P) AWD Transfer

1.8L 2HO Engine Manual Transmission 2WD Transfer

1.8L 2HO Engine Manual Transmission AWD Transfer

- Saturn Passenger**A Product Line****-Powertrain**

(B)2.4L L4 LE5 Engine Control Module

(F)2.2L L4 L61 Engine Control Module

(P)2.0L L4 LSJ Engine Control Module Transmission Control Module

-Chassis

Electronic Brake Control Module

Power Steering Control Module

-BodyWięcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Body Control Module
Digital Radio Receiver
Instrument Panel Cluster
Radio
Supplemental Inflatable Restraint
Vehicle Comm. Interface Module

J Product Line

-Powertrain
Engine Control Module
Transmission Control Module

-Chassis
Antilock Brake System
-Body
Auto. HVAC
Body Control Module
Instrument Panel Cluster
Supplemental Inflatable Restraint

M Product Line

-Powertrain
(B)2.4L L4 LE5 Engine Control Module
(X)2.0L L4 LNF Engine Control Module
Transmission Control Module

-Chassis
(X)2.0L L4 LNF EBCM
(B)2.4L L4 LE5 EBCM
Electronic Brake Control Module

-Body
Body Control Module
Digital Radio Receiver
Instrument Panel Cluster
Radio
Remote Control Door Lock Receiver
Supplemental Inflatable Restraint
Theft Deterrent Module

Z Product Line

-Powertrain
(0)2.4L L4 LE9 Engine Control Module
(0)2.4L L4 LE9 Transmission Control Module
(7)3.6L V6 LY7 Engine Control Module
(7)3.6L V6 LY7 Transmission Control Module
(B)2.4L L4 LE5 Engine Control Module
(B)2.4L L4 LE5 Transmission Control Module
(N)3.5L V6 LZ4 Engine Control Module
(N)3.5L V6 LZ4 Transmission Control Module

-Chassis
Electronic Brake Control Module
Power Steering Control Module

-Body
Body Control Module
Digital Radio Receiver
HVAC Control Module
Instrument Panel Cluster
Radio
Supplemental Inflatable Restraint
Theft Deterrent Module

- Saturn LD Trk/MPV/Incomplete**L Product Line**

-Powertrain
(1) 2.4L L4 LE5 Engine Control Module
(1) 2.4L L4 LE5 Fuel Pump Control Module
(1) 2.4L L4 LE5 Transmission Control Module
(7) 3.6L V6 LY7 Engine Control Module
(7) 3.6L V6 LY7 Fuel Pump Control Module
(7) 3.6L V6 LY7 Rear Drive System
(7) 3.6L V6 LY7 Transmission Control Module
(N) 3.5L V6 LZ4 Engine Control Module
(N) 3.5L V6 LZ4 Fuel Pump Control Module
(N) 3.5L V6 LZ4 Rear Drive System
(N) 3.5L V6 LZ4 Transmission Control Module
(P) 2.4L L4 LE5 Engine Control Module
(P) 2.4L L4 LE5 Fuel Pump Control Module
(P) 2.4L L4 LE5 Transmission Control Module

-Chassis
Electronic Brake Control Module
Power Steering Control Module

-Body
Body Control Module
Digital Radio Receiver
HVAC Control Module Auto
HVAC Control Module Manual
Instrument Panel Cluster
Passenger Presence System
Radio
Remote Control Door Lock Receiver
Rollover Sensor
Supplemental Inflatable Restraint
Theft Deterrent Module

R Product Line

-Powertrain
Engine Control Module
Transmission Control Module
Fuel Pump Control Module

-Chassis
Electronic Brake Control Module

-Body
Body Control Module

Digital Radio Receiver
Driver Door Switch
Heated Seat Module
HVAC Control Module Auto
HVAC Control Module Manual
Instrument Panel Cluster
Liftgate Module
Park Assist Module
Passenger Door Switch
Passenger Presence System
Radio
Rear HVAC/RSA
Rollover Sensor
Supplemental Inflatable Restraint
Theft Deterrent Module

V Product Line

-Powertrain
Engine Control Module
Transmission Control Module
Fuel Pump Control Module

-Chassis
Electronic Brake Control Module

-Body
Body Control Module
Digital Radio Receiver
Driver Door Switch
Heated Seat Module
HVAC Control Module Auto
HVAC Control Module Manual
Instrument Panel Cluster
Liftgate Module
Park Assist Module
Passenger Door Switch
Passenger Presence System
Radio
Rear HVAC/RSA
Rollover Sensor
Supplemental Inflatable Restraint
Theft Deterrent Module

X Product Line

-Powertrain
Engine Control Module
Transmission Control Module

-Chassis
Electronic Brake Control Module

-Body
Body Control Module
Digital Radio Receiver
Disc Player and Video Display

HVAC Control Module
Instrument Panel Cluster
Left Power Sliding Door Module
Mobile Digital Media
Navigation Radio
Passenger Presence System
Right Power Sliding Door Module
Supplemental Inflatable Restraint
Uplevel Radio

Z Product Line

-Powertrain
(D)2.2L L4 L61 Engine Control Module
(4)3.5L V6 L66 Engine Control Module
Variable Transmission
4 Speed Automatic Transmission
5 Speed Automatic Transmission

-Chassis
Electronic Brake Control Module
Power Steering Control Module

-Body
Body Control Module
Digital Radio Receiver
Instrument Panel Cluster
Radio
Supplemental Inflatable Restraint

[Back to Index](#)

CHRYSLER/JEEP/DODGE

Durango (2004~2005)

PCM (Power Control Module)
- Basic Function
Data Analysis [enhanced]
Actuation Test [enhanced]

300 (2005)

PCM (Power Control Module)
- Basic Function
Data Analysis [enhanced]
Actuation Test [enhanced]

Dakota (2005)

PCM (Power Control Module)
- Basic Function
Data Analysis [enhanced]
Actuation Test [enhanced]

Grand Cherokee (2005~6)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Fuel Mean Value Adaptation Initialization
 - IMA Rapid Calibration
 - NOx Catalyst (Used) Learning
 - NOx Catalyst (New) Initialization
 - Diesel Particulate Filter (Used) Learning
 - Diesel Particulate Filter (New) Initialization
 - Manual Diesel Particulate Filter Regeneration
 - Exhaust Throttle Plate Adaptive Learn Position
 - Injector Quantity Adjustment

Dodge RAM (2006)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Durango (2006)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Generator Full Field Test
 - Set Engine RPM System Test
 - Injector Kill System Test
 - VIN Writing
 - View/Reset Trip Information Accumulators

Liberty (2006)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Generator Full Field Test
 - Set Engine RPM System Test
 - Injector Kill System Test
 - VIN Writing
 - View/Reset Trip Information Accumulators

300 (2006)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Fuel Mean Value Adaptation Initialization

IMA Rapid Calibration

- NOx Catalyst (Used) Learning
- NOx Catalyst (New) Initialization
- Diesel Particulate Filter (Used) Learning
- Diesel Particulate Filter (New) Initialization
- Manual Diesel Particulate Filter Regeneration
- Exhaust Throttle Plate Adaptive Learn Position
- Injector Quantity Adjustment

PT Cruiser (2006)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Fuel Mean Value Adaptation Initialization
 - IMA Rapid Calibration
 - NOx Catalyst (Used) Learning
 - NOx Catalyst (New) Initialization
 - Diesel Particulate Filter (Used) Learning
 - Diesel Particulate Filter (New) Initialization
 - Manual Diesel Particulate Filter Regeneration
 - Exhaust Throttle Plate Adaptive Learn Position
 - Injector Quantity Adjustment

Commander (2006)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Fuel Mean Value Adaptation Initialization
 - IMA Rapid Calibration
 - NOx Catalyst (Used) Learning
 - NOx Catalyst (New) Initialization
 - Diesel Particulate Filter (Used) Learning
 - Diesel Particulate Filter (New) Initialization
 - Manual Diesel Particulate Filter Regeneration
 - Exhaust Throttle Plate Adaptive Learn Position
 - Injector Quantity Adjustment

Pacifica (2007)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Dodge Ram (2007)**PCM (Power Control Module)**

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function

Generator Full Field Test
Set Engine RPM System Test
Injector Kill System Test
VIN Writing
View/Reset Trip Information Accumulators
Reset Pressure Limiting Valve Accumulators
Injector Quantity Adjustment

Wrangler (2007)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Flexible Oil Change Indicator Reset
 - Set Oil Type

200 (2007)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Flexible Oil Change Indicator Reset
 - Set Oil Type

Avenger (2007)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Flexible Oil Change Indicator Reset
 - Set Oil Type

Nitro (2007)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Liberty (2007)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Compass (2007)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function
 - Flexible Oil Change Indicator Reset
 - Set Oil Type
 - Learn ETC

Pacifica (2008)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Generator Full Field Test
 - Set Engine RPM System Test
 - Injector Kill System Test
 - VIN Writing
 - View/Reset Trip Information Accumulators

Dodge Ram (2008)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Generator Full Field Test
 - Set Engine RPM System Test
 - Injector Kill System Test
 - VIN Writing
 - View/Reset Trip Information Accumulators

Journey (2008)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Flexible Oil Change Indicator Reset
 - Set Oil Type
 - Learn ETC

Wrangler (2008)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Compass (2009)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Flexible Oil Change Indicator Reset

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Set Oil Type
Learn ETC

Pacifica (2009)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Generator Full Field Test
 - Set Engine RPM System Test
 - Injector Kill System Test
 - VIN Writing
 - View/Reset Trip Information Accumulators

Dodge Ram (2009)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Generator Full Field Test
 - Set Engine RPM System Test
 - Injector Kill System Test
 - VIN Writing
 - View/Reset Trip Information Accumulators

Journey (2009)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Flexible Oil Change Indicator Reset
 - Set Oil Type
 - Learn ETC

Wrangler (2009)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Wrangler (2010)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Dodge Ram 3500 (2010)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Dodge Ram 2500 (2010)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Journey (2010)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Wrangler (2010)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Learn ETC

Dodge Ram 1500 (2011~2015)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Compression Test
 - Program Variant Coding
 - Rail Pressure Control Switchover
 - Lambda Sensor 1 Initialization
 - IMA Quick Calibration
 - Request Anti-Slugging For Air Condition Compressor
 - Oxidation Catalyst Initialization
 - Diesel Particulate Filter Replacement
 - Service Diesel Particulate Filter Regeneration
 - Fuel Mean Value Adaption Initialization
 - VIN Writing

Wrangler (2011~2015)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Compression Test
Program Variant Coding
Rail Pressure Control Switchover
Lambda Sensor 1 Initialization
IMA Quick Calibration
Request Anti-Slugging For Air Condition Compressor
Oxidation Catalyst Initialization
Diesel Particulate Filter Replacement
Service Diesel Particulate Filter Regeneration
Fuel Mean Value Adaption Initialization
VIN Writing

Liberty (2011~2015)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]

- Advanced Function
 - Compression Test
 - Program Variant Coding
 - Rail Pressure Control Switchover
 - Lambda Sensor 1 Initialization
 - IMA Quick Calibration
 - Request Anti-Slugging For Air Condition Compressor
 - Oxidation Catalyst Initialization
 - Diesel Particulate Filter Replacement
 - Service Diesel Particulate Filter Regeneration
 - Fuel Mean Value Adaption Initialization
 - VIN Writing

Compass (2011~2015)

PCM (Power Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]

- Advanced Function
 - Compression Test
 - Program Variant Coding
 - Rail Pressure Control Switchover
 - Lambda Sensor 1 Initialization
 - IMA Quick Calibration
 - Request Anti-Slugging For Air Condition Compressor
 - Oxidation Catalyst Initialization
 - Diesel Particulate Filter Replacement
 - Service Diesel Particulate Filter Regeneration
 - Fuel Mean Value Adaption Initialization
 - VIN Writing

Grand Cherokee (2006)

ORC (Occupant Restraint Control)

- Basic Function
 - Data Analysis [enhanced]

- Advanced Function
 - Rollover Detection

Grand Cherokee (2009)

PTS (Park Assist Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Configure License Plate Size

ESM (Electronic Shifter Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Configure License Plate Size

Grand Cherokee (2013)

EPS (Electric Power Steering)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]

DTCM (Drive Train Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Non-Volatile Memory Reset (Clear T-Case Adaptives)

PTS (Park Assist Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Configure License Plate Size

Grand Cherokee (2014)

ORC (Occupant Restraint Control)

- Basic Function
 - Data Analysis [enhanced]

PTS (Park Assist Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Configure License Plate Size

ESM (Electronic Shifter Module)

- Basic Function
 - Data Analysis [enhanced]

IPC (Instrument Panel Cluster)

Więcej informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

- Basic Function

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Enable/Disable Seatbelt Minder Function

DTCM (Drive Train Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Non-Volatile Memory Reset (Clear T-Case Adaptives)

EPS (Electric Power Steering)**- Basic Function**

Data Analysis [enhanced]

TCM (Transmission Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Reset Adaptive Values

BCM (Body Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Program Tire Size

Update Pressure Thresholds

Exit Shipping Mode

Change Country Code

Grand Cherokee (2015)**BCM (Body Control Module)****- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Program Tire Size

Update Pressure Thresholds

Exit Shipping Mode

Change Country Code

Grand Cherokee (2016)**ORC (Occupant Restraint Control)****- Basic Function**

Data Analysis [enhanced]

PTS (Park Assist Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Configure License Plate Size

ESM (Electronic Shifter Module)**- Basic Function**

Data Analysis [enhanced]

IPC (Instrument Panel Cluster)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Enable/Disable Seatbelt Minder Function

DTCM (Drive Train Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Non-Volatile Memory Reset (Clear T-Case Adaptives)

EPS (Electric Power Steering)**- Basic Function**

Data Analysis [enhanced]

TCM (Transmission Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Reset Adaptive Values

BCM (Body Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Program Tire Size

Update Pressure Thresholds

Exit Shipping Mode

Change Country Code

Challenger (2016)**TCM (Transmission Control Module)****- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced Function

Reset Adaptive Values

BCM (Body Control Module)**- Basic Function**

Data Analysis [enhanced]

Actuation Test [enhanced]

- Advanced FunctionWięcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Program Tire Size
Update Pressure Thresholds
Exit Shipping Mode
Change Country Code

PTS (Park Assist Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Configure License Plate Size

ORC (Occupant Restraint Control)

- Basic Function
 - Data Analysis [enhanced]

RFH (Radio Frequency Hub)

- Basic Function
 - Data Analysis [enhanced]

IPC (Instrument Panel Cluster)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Enable/Disable Seatbelt Minder Function

ESM (Electronic Shifter Module)

- Basic Function
 - Data Analysis [enhanced]

Grand Cherokee (2017)**EPS (Electric Power Steering)**

- Basic Function
 - Data Analysis [enhanced]

ESM (Electronic Shifter Module)

- Basic Function
 - Data Analysis [enhanced]

PTS (Park Assist Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Configure License Plate Size

BCM (Body Control Module)

- Basic Function
 - Data Analysis [enhanced]
 - Actuation Test [enhanced]
- Advanced Function
 - Program Tire Size
 - Update Pressure Thresholds
 - Exit Shipping Mode
 - Change Country Code

Feedback


AUS : 2007 Wrangler - Injector Coding - bug fixed
USA : 2003 Grand Cherokee - Cam , Crank Sensor Added
USA : 2006 Dakota – PCM Vin write – bug fixed
IRAQ : 2016 200 – PCM DTC unknown – bug fixed
USA : 2017 Pacifica – ORC Initialisation function added
USA : 2005 Liberty – PCM Misfire sensor added
USA : 2006 Magnum – PCM Learn ETC function added
USA : 2009 Ram 1500 – TCM Quick Learn function added
USA : RAM – 2000~2009 year added
USA : 2013 Charger – Supported function – bug fixed
USA : 2006 Commander - PCM Misfire sensor added
USA : 2011 Grand Cherokee – ASCM Special function added
IRAQ : 2014 300 – PCM Special function added
USA : 2000 Grand Cherokee – O2sensor added
USA : 2013,4 Charger - Supported system added
USA : 2004 300 - Supported system added
USA : Ram 2500 - Supported system added
USA : 2008 Wrangler - Supported system added
USA : PT Cruiser – 2001~2005 year added
USA : 2017 RAM 3500 – New system added

[Back to Index](#)**PERODUA****AXIA (Feedback from Malaysia)**

EFI
- DTC List added
AT
- DTC List added

[Back to Index](#)**OPEL / GM BRAZIL****New Model & System added**

- System search function added for all vehicles

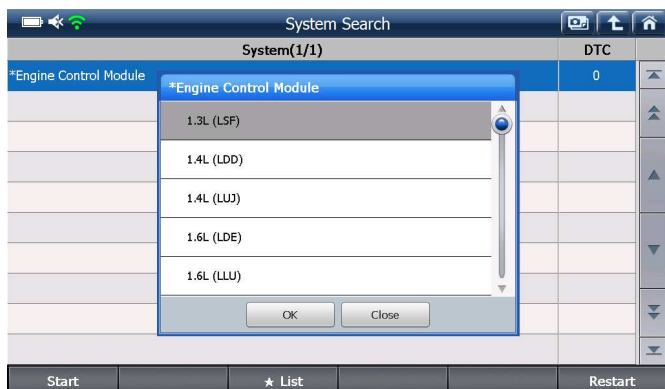

- Chassis
 - EBCM(Electronic Brake Control Module)
 - Fuel Pump Control
- Body
 - BCM(Body Control Module)
 - VTM
 - RFA(Remote Function Actuator)
 - SDM(Sensing and Diagnostic Module)
 - IPC(Instrument Panel Cluster)
 - HVAC(Heating Ventilation and Cooling)
 - MSM(Memory Seat and Mirrors)
 - Parking Assist
 - AHL(Automatic Headlamp Leveling)
- Infotainment System
 - Audio System
 - RSE(Rear Seat Entertainment)

Astra-J New Type added (2010,2011,2012,2013,2015,2016,2017)

- Powertrain
 - Engine Control Module 1.3L (LSF)
 - Engine Control Module 1.4L (LDD)
 - Engine Control Module 1.4L (LUJ)
 - Engine Control Module 1.6L (LDE)
 - Engine Control Module 1.6L (LLU)
 - Engine Control Module 1.6L (LVP)
 - Engine Control Module 1.6L (LVL)
 - Engine Control Module 1.6L (LVM)
 - Engine Control Module 1.6L (LWC)
 - Engine Control Module 1.7L (LPL)
 - Engine Control Module 1.7L (LPV)
 - Engine Control Module 1.7L (LKR)
 - Engine Control Module 1.7L (LUD)
 - Engine Control Module 1.7L (LUE)
 - Engine Control Module 1.8L (2H0)
 - Engine Control Module 2.0L (LBS)
 - Engine Control Module 2.0L (LBX)
 - Engine Control Module 2.0L (LBY)
 - Engine Control Module 2.0L (LHU)

Antara New Type added (2011,2012,2013,2014,2015,2016,2017)

- Powertrain
 - Engine Control Module 2.0L (LNP)
 - Engine Control Module 2.2L (LNQ)
 - Engine Control Module 2.4L (LE5)
 - Engine Control Module 2.4L (LE9)
 - Engine Control Module 3.0L (LF1)
 - Engine Control Module 3.0L (LFW)

Zafira-C New Type added (2012,2013,2014,2015,2016,2017)

- Powertrain
 - Engine Control Module 1.4L (LUJ)
 - Engine Control Module 1.6L (LGE)

Vectra-c New Type added

- Engine
- BCM (Body Control Module)
- REC (Rear Electrical Centre)

Vauxhall Monaro New Type added

- Engine
 - V8 GEN III
 - V8 GEN IV
- Transmission
 - A/T
 - A/T GEN III
- Chassis
 - ABS/TC/ESP8.0
 - ABS/ETC
- Body
 - SRS Airbag
 - BCM(Body control module)
 - PIM(Powertrain Interface Module)
 - Instrument
 - Audio System

Vauxhall VXR8 New Type added

- Engine
 - V8 GEN IV
- Transmission
 - A/T

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Engine Control Module 1.6L (LVL)
 Engine Control Module 1.6L (LVP)
 Engine Control Module 1.6L (LWC)
 Engine Control Module 1.8L (2H0)
 Engine Control Module 2.0L (LBQ)
 Engine Control Module 2.0L (LBR)
 Engine Control Module 2.0L (LBS)
 Engine Control Module 2.0L (LBX)
 Engine Control Module 2.0L (LBY)
 Engine Control Module 2.0L (LFS)

Mokka New Type added(2013,2014,2015,2016,2017)

- Powertrain

Engine Control Module 1.4L (LUJ)
 Engine Control Module 1.4L (LE2)
 Engine Control Module 1.6L (LWV)
 Engine Control Module 1.6L (LVL)
 Engine Control Module 1.6L (LDE)
 Engine Control Module 1.7L (LUD)
 Engine Control Module 1.8L (2H0)
 Transmission Control Module
 Rear Differential Clutch Control Module
 Fuel Injector Control Module

- Chassis

Electronic Brake Control Module
 Power Steering Control Module
 Steering Wheel Angle Sensor Module
 Multi-Axis Acceleration Sensor Module

- Body

Body Control Module
 Inflatable Restraint Sensing and Diagnostic Module
 Instrument Cluster
 Headlamp Control Module
 Trailer Interface Control Module
 Radio
 HVAC Control Module
 Front Seat Heating Control Module
 Parking Assist Control Module
 Frontview Camera Module
 Telematics Communication Interface Control Module
 Body Control Module Engine
 Serial Data Gateway Module
 Amplifier
 Human Machine Interface Control Module
 Keyless Entry Control Module
 Steering Column Lock Control Module
 Power Supply Transformer

Adam New Type added(2013,2014,2015,2016,2017)

- Powertrain

Engine Control Module 1.0L (LE1)
 Engine Control Module 1.2L (LWD)
 Engine Control Module 1.4L (LUJ)
 Engine Control Module 1.4L (L2Z)
 Engine Control Module 1.4L (LDD)

Chassis Control Module
 Fuel Injector Control Module
 - Chassis
 Electronic Brake Control Module
 Power Steering Control Module
 - Body
 Body Control Module Engine
 Inflatable Restraint Sensing and Diagnostic Module
 Instrument Cluster
 Trailer Interface Control Module
 Radio
 HVAC Control Module
 Parking Assist Control Module
 Fuel Injector Control Module
 Telematics Communication Interface Control Module

Feedback

Vauxhall Monaro, VXR8 model added: England request
 Vectra-C New Type Added : Germany request
 Mokka New Type Added: Germany request

[Back to Index](#)

MAHINDRA

New Vehicle Added

Verito : India

Injection

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Special function
 - Enter injector codes
 - Lock Injector Control
 - EGR adaptives
 - Pressure regulation adaptives
 - [Other config.]Cylinder 1 injector code
 - [Other config.]Cylinder 2 injector code
 - [Other config.]Cylinder 3 injector code
 - [Other config.]Cylinder 4 injector code

A.B.S.

- Basic function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Special function
 - Check Target Teeth

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

Bleed Hydraulic Unit and Braking Circuits
Write date of last after sales operation
Speedo index

Bug fixed**XYLO > D4 > EMS : India**

- Basic Function
- DTC Analysis

[Back to Index](#)**SAIPA****CHANGAN EADO****LCM**

- Special Function
- LCM part number
- Write VIN

Instrument

- Special Function added
- Hardware reset

[Back to Index](#)**HOLDEN****New Model Added****All new Trax**

- Engine Control Module 1.4L(LUJ)
- Transmission
- EBCM(Electronic brake control module)
- PSCM(Power steering control module)
- SWASM(Steering wheel angle sensor module)
- BCM(Body control module)
- SDM (Inflatable restraint sensing and diagnostic module)
- IPC(Instrument Cluster)
- TICM(Trailer Interface Control Module)
- Radio
- HVAC(Heating Ventilating and Air Conditioning)
- SMCM(Seat memory control module)
- FSHCM(Front seat heating control module)
- LODCM(Left side object detection control module)
- PACM(Parking assist control module)

New system added**Barina : 1.6 DOHC**

- Basic function

DTC Analysis
Data Analysis
Actuation Test
ECU Information Display

- Support function
- Learn Crank Angle Sensing Error
- Reset Long Term Fuel Trim

New Colorado/Colorado7: PSCM

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information Display
- Support function
- Steering Wheel Angle Sensor Centering

New Colorado/Colorado7: PACM

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information Display
- Support function
- CAN Bus Configuration Learn

New Colorado/Colorado7: Radio

- Basic function
- DTC Analysis
- Data Analysis
- ECU Information Display

New Colorado/Colorado7: SDGM

- Basic function
- DTC Analysis
- ECU Information Display

New Colorado/Colorado7: TICM

- Basic function
- DTC Analysis
- Data Analysis
- Actuation Test
- ECU Information Display
- Support function
- CAN Bus Configuration Learn

Bug fixed

Captiva : Diesel engine communication stabilized
Rodeo : Immobilizer special function stabilized

[Back to Index](#)**LUXGEN**

LUXGEN M7 added

ECM
TCM
ABS/ESC
SRS
AC
BCM
CSW
HMI
Meter
OBU
FECU
GW
KCU
DVD
ICU
LDWS
PSD (L)
PSD (R)

LUXGEN U7 added

ECM
TCM
ABS/ESC
EPB
SRS
AC
BCM
CSW
Meter
OBU
FECU
KCU
ALS
DVD
PTG
ICU
LDWS

LUXGEN U6 added

ECM
TCM
ABS/ESC
EPB
SRS
AC
BCM
CSW
HMI
Meter
FRD/MFRD
OBU
FECU
CDMP3

HUD

LUXGEN S3 added

ECM
TCM
ABS/ESC
EPAS
TPMS
SRS
AC
BCM
CSW
EVS
HMI
IMMO
Meter
Switch box

[Back to Index](#)**CMC****COLT PLUS added**

EMS (Engine Management System)
EPS (Electronic Power Steering)
ABS (Anti-braking System)
TCU (Transmission Control Unit)
BCM (Body Control Module)
Meter
SRS Air-Bag (Supplementary Restraint System)
PEPS I-Key (Passive Entry Passive Start)
AC (Air Conditioning Controller)
TPMS (Tire Pressure Monitoring System)
SLS (Slope Sensor)

ZINGER added

EMS (Engine Management System)
ABS (Anti-braking System)
TCU (Transmission Control Unit)
BCM (Body Control Module)
Meter
SRS Air-Bag (Supplementary Restraint System)
TPMS (Tire Pressure Monitoring System)

[Back to Index](#)**CHERY****A3 (Feedback from Australia)**

Więcej Informacji na www.gscan.com.pl lub pod numerem telefonu + 48 601-817-201

SRS

- DTC List added

[Back to Index](#)**DAEHAN**

New Model added

MAESTRO

Engine – Bosch EDC16

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Quantity correction output cylinder
 - Rail High Pressure Test
 - Run Up Test
 - Compression Test2
 - Vin Write

SRS – Jinheng

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

BRAVO

ABS

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Air Bleeding

PRIME

ABS

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Vacuum and Filling
 - Air Bleeding

OPTIMUS

Engine – BOSCH EDC16C39

- Basic Function

DTC Analysis

Data Analysis

Actuation Test

System Identification

- Advanced Function

Quantity correction output cylinder

Rail High Pressure Test

Run Up Test

Compression Test2

Vin Write

ABS - KORMEE

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Vin Write
 - Model Code Write

SRS – Jinheng(ACU4)

- Basic Function
 - DTC Analysis
 - Data Analysis
 - System Identification

MEGATRON

Engine – Bosch Diesel VM

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Quantity correction output cylinder
 - Rail High Pressure Test
 - Run Up Test
 - Compression Test2
 - Vin Write

ABS - BOSCH ABS9

- Basic Function
 - DTC Analysis
 - Data Analysis
 - Actuation Test
 - System Identification
- Advanced Function
 - Write variant code
 - Write Filling Status
 - Repair Bleeding

SRS – Jinheng(ACU4)

- Basic Function
 - DTC Analysis

Data Analysis
System Identification

[Back to Index](#)

TRIAL S/W

LDV added
Engine

[Back to Index](#)